





HORIZONTAL DRIER KIT

07315-VUQ
07317-VUQ

ASSEMBLY AND INSTALLATION INSTRUCTIONS:

- THE FIRST AND MOST IMPORTANT STEP IS TO DISASSEMBLE AND CLEAN YOUR DRIER.
 - AFTER CLEANING: MOUNT THE DRIER AS FOLLOWS - DETERMINE BEST LOCATION FOR THE DRIER.
 - A. IT SHOULD BE IN A COOL AREA, NOT UP AGAINST EXHAUST, ETC.
 - B. IT SHOULD BE MOUNTED HORIZONTALLY.
 - C. THE "IN" FITTING ON THE DRIER SHOULD BE ARRANGED SO THE LINE FROM THE CONDENSER OUTLET WILL BE RUN DIRECTLY TO IT.
 - ONCE THE LOCATION OF THE DRIER IS DETERMINED AND YOU KNOW WHICH WAY YOU WANT THE FITTINGS TO POINT, DETERMINE WHERE THE DRIER MOUNTING BRACKET WILL FIT BEST.
 - USE TEMPLATE "A" PROVIDED TO MARK AND DRILL THE HOLES FOR THE DRIER BRACKET. REMOVE FILTER DRIER OUTLET CAP.
 - LUBRICATE AND PLACE O-RING OVER THREADS. (NOTE: VINTAGE AIR SYSTEMS USE SUNISO No. 5GS REFRIGERANT OIL. ONLY THIS OIL OR EQUIVALENT OILS SHOULD BE USED.)
 - THREAD FILTER DRIER INTO END CAP AS SHOWN, AND TIGHTEN SNUGLY (DO NOT USE A WRENCH - HAND TIGHTEN ONLY).
 - LUBRICATE AND PLACE BODY O-RING IN GROOVE PROVIDED IN DRIER END CAPS. ENSURE THAT FILTER DRIER INLET CAP IS REMOVED AND THAT FILTER DRIER IS CLEAN.
 - LUBRICATE AND THREAD DRIER ONTO THREADED END CAP AS SHOWN IN FIGURES 1 & 2. TIGHTEN HAND TIGHT, BUT SNUG.
 - RUN YOUR REFRIGERANT LINES AND COMPLETE YOUR AIR CONDITIONING INSTALLATION.
- NOTE: REFRIGERANT OIL SHOULD BE USED ON ALL CONNECTIONS!**
- WHEN YOU ARE READY TO EVACUATE AND SERVICE THE SYSTEM, REMOVE THE SEALING CAPS FROM THE DRIER ELEMENT. LUBRICATE #6 O-RING AND INSTALL ON FILTER DRIER END WITHOUT WELD (SEE FIGURE 2). SCREW THE DRIER END CAP ONTO FILTER SNUGLY. LUBRICATE THE LARGE O-RING AND THREADS AND INSTALL CANISTER. THERE SHOULD BE NO AIR GAP WHERE CANISTER MEETS THE DRIER END CAP.
 - LEAK CHECK THE SYSTEM.
 - EVACUATE AND SERVICE THE SYSTEM.

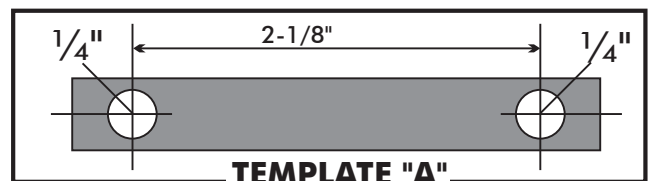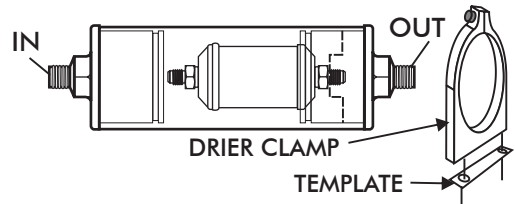

CAUTION: THE DRIER ELEMENT SHOULD NEVER BE UNCAPPED UNTIL READY FOR USE.

REPLACEMENT ELEMENTS: AVAILABLE FROM VINTAGE AIR, PART No. 07321-VUQ.

AIR CONDITIONER DRIERS SHOULD BE REPLACED WHENEVER THE SYSTEM IS OPENED TO THE ATMOSPHERE, SUCH AS MAINTENANCE OR EXTENDED DISCHARGE! WITH THE VINTAGE AIR REBUILDABLE DRIER, JUST REPLACE THE ELEMENT. **NOTE: ALUMINUM DRIERS HAVE NO PROVISION FOR A LOW-PRESSURE SWITCH. IN-LINE SAFETY SWITCH REQUIRED.**

