


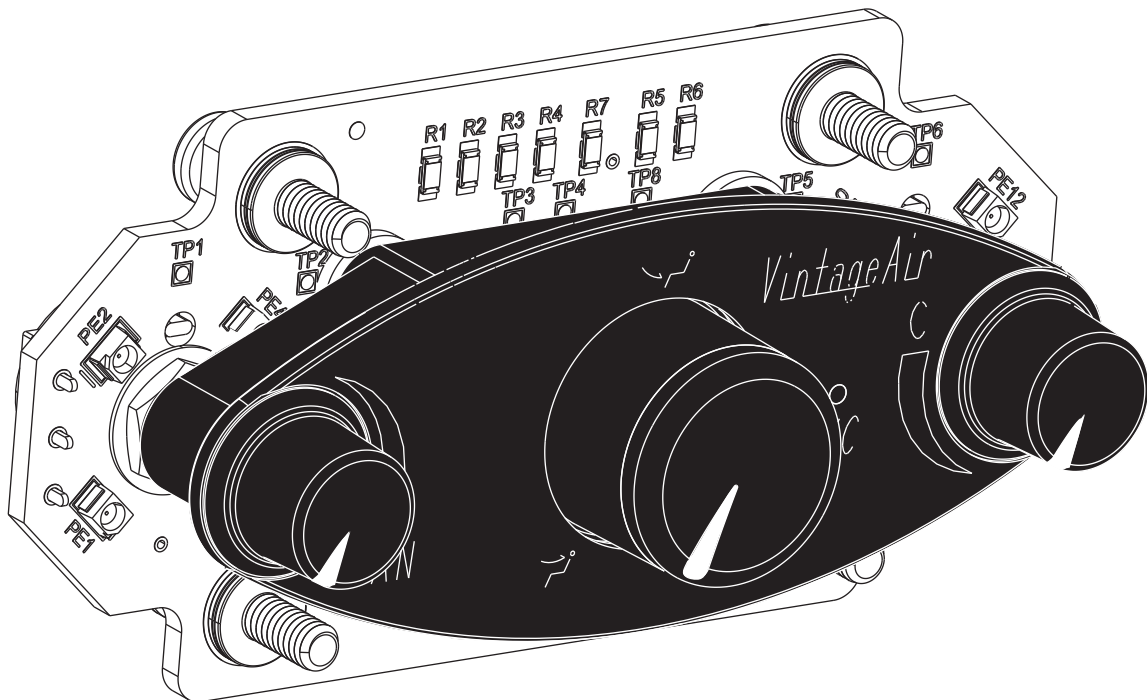

# Streamline

ProLine Ellipse Panel  
Black Anodized  
491241



18865 Goll St. San Antonio, TX 78266  
Phone: 800-862-6658  
Sales: [sales@vintageair.com](mailto:sales@vintageair.com)  
Tech Support: [tech@vintageair.com](mailto:tech@vintageair.com)  
[www.vintageair.com](http://www.vintageair.com)



www.vintageair.com

# Table of Contents

Cover.....	1
Table of Contents.....	2
Packing List/Parts Disclaimer.....	3
Control Panel Dimensions, Control Panel Installation.....	4
Control Panel Installation (Cont.).....	5
Control Panel Removal.....	6
Gen IV Wiring Diagram.....	7
Gen 5 Wiring Diagram.....	8
Operation of Controls.....	9
Packing List.....	10

## Important Notice—Please Read

This control panel is designed to only work with either a Gen IV evaporator unit equipped with a **246204-PUA ECU**, or a Gen 5 evaporator unit equipped with a **246404 ECU**. Please confirm that your unit has the proper ECU prior to installing the control panel as shown below. A replacement ECU can be purchased from Vintage Air if needed.







www.vintageair.com

## Packing List: Control Panel Kit (491241)


No.	Qty.	Part No.	Description
1.	1	491241	Streamline ProLine Ellipse

\*\* Before beginning installation, open all packages and check contents of shipment.  
Please report any shortages directly to Vintage Air within 15 days. After 15 days,  
Vintage Air will not be responsible for missing or damaged items.

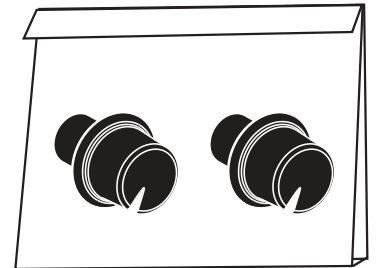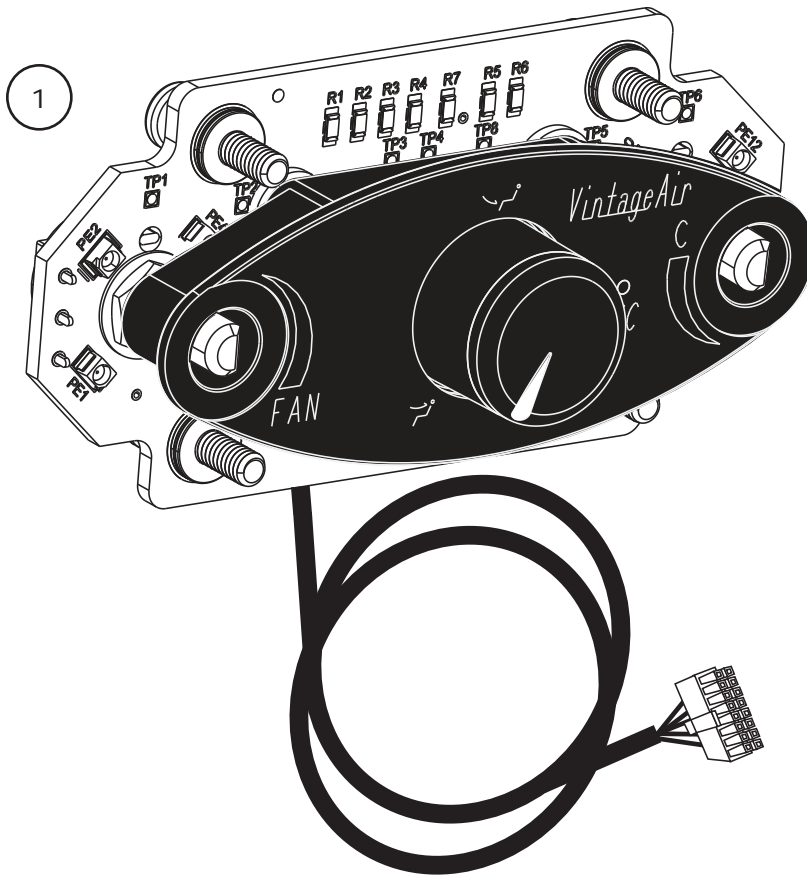



## Control Panel Dimensions

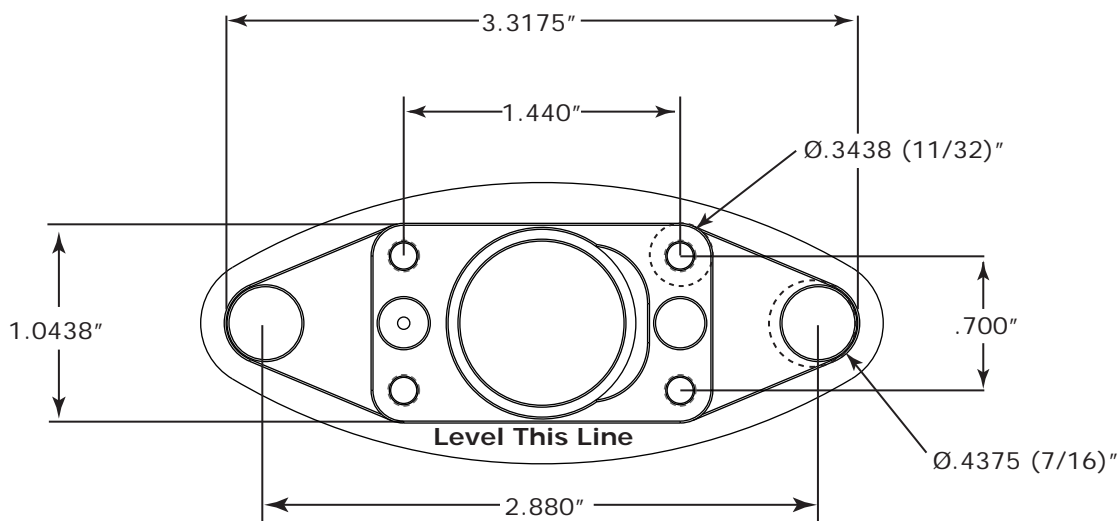

## Control Panel Installation

**NOTE:** Do not install the (2) control panel knobs onto the control panel assembly until the panel has been installed in the dash. For knob removal after installation, refer to the Control Panel Removal instructions on Page 6. DO NOT attempt to remove the knobs using pliers.

1. Select a suitable location for the control panel, considering heater control valve location, wiring harness length and operator convenience.
2. After selecting a location for the control panel, mask the area 1 ½" (tall) x 4 ½" (wide).
3. Using the dimensions provided above, mark or scribe the control panel opening location onto the dash. When you are certain that the dimensions and markings are correct, cut the dash to make the control panel opening. **NOTE: Measure twice. Cut once. This opening MUST be a precise fit. Cut the opening undersize, and then file to fit. The mounting screws only hold the panel against the dash. They do not locate the panel laterally. If the opening is oversized, the panel may shift during use.**
4. Install the control panel face through the opening in the dash. Place the control panel PC board assembly behind the dash, and secure it to the control panel face using the (4) 8-32 x 3/8" screws (See Figure 1 and 2a, Page 5). **NOTE: When tightening the control panel mounting screws, hand tighten until the screw contacts the back side of the dash. Then, using a screwdriver, tighten an additional 1/2 turn. Do not overtighten, as this may cause damage to the PC board or the dash.**
5. Install the control panel knobs (See Figure 1, Page 5).
6. Plug the control panel wiring harness into the control panel and the ECU on the evaporator (See Figure 2, Page 5).
7. Wire according to the wiring diagram on Page 7 for Gen IV systems or Page 8 for Gen 5 systems.



www.vintageair.com

## Control Panel Installation (Cont.)

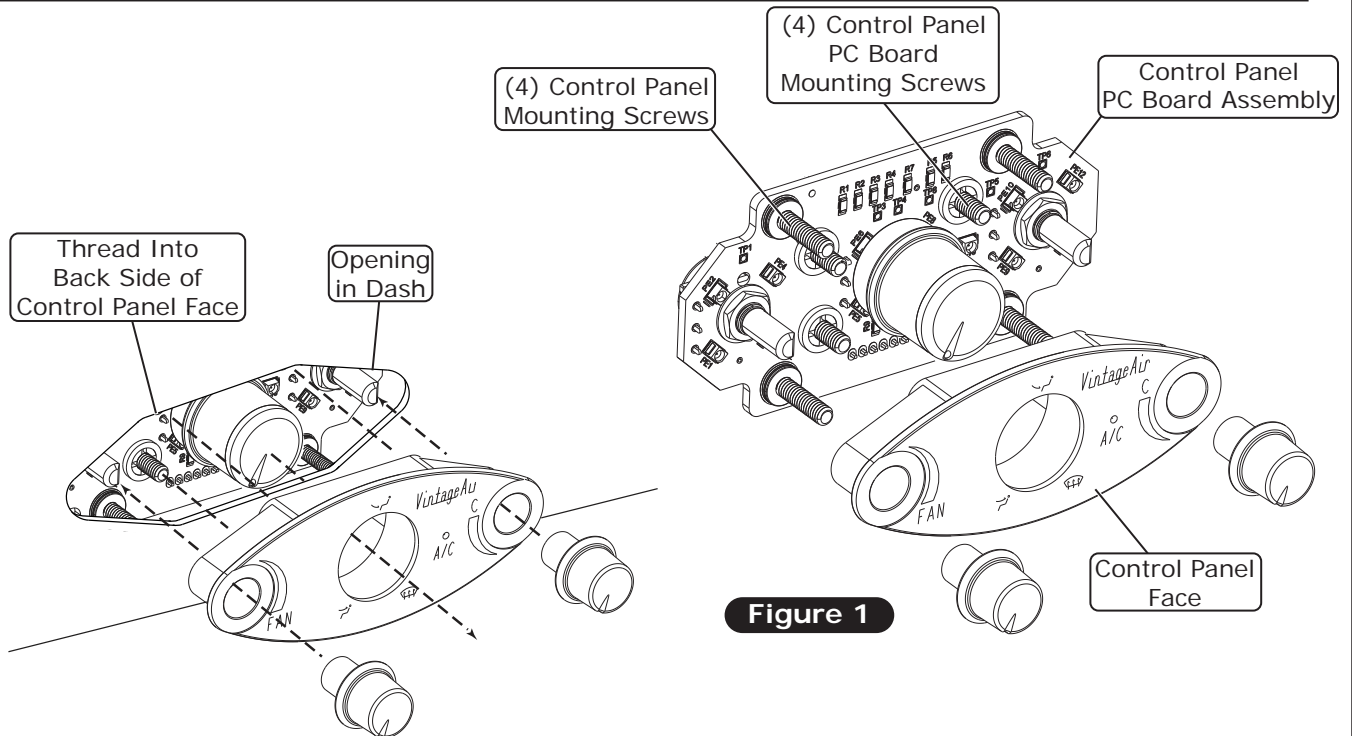


Figure 1

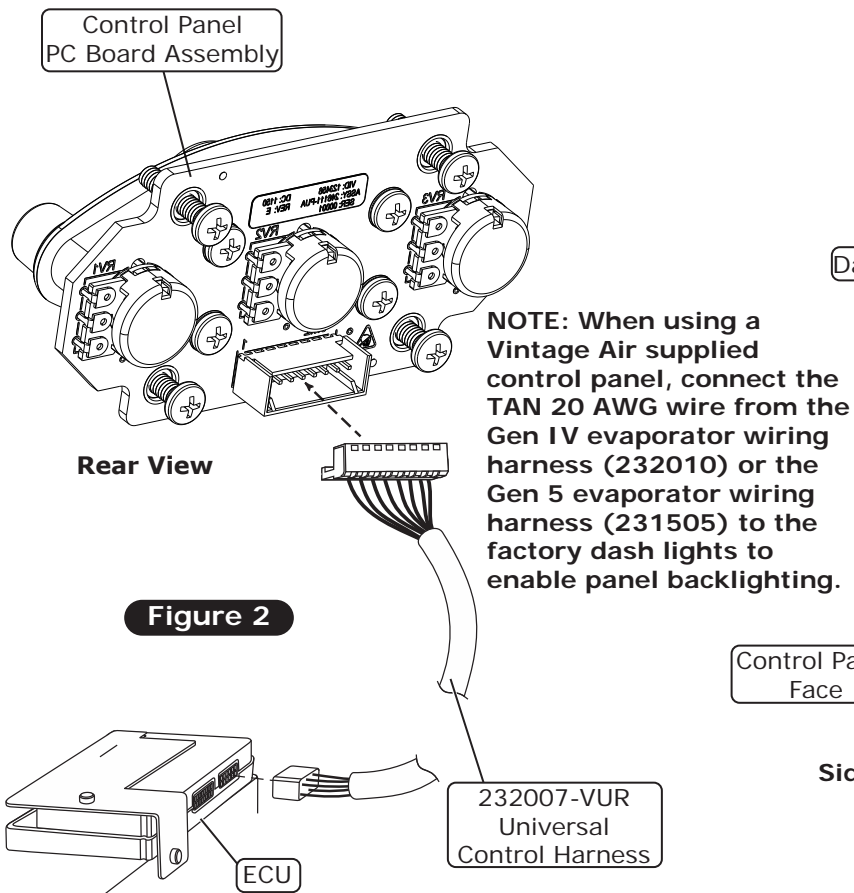


Figure 2

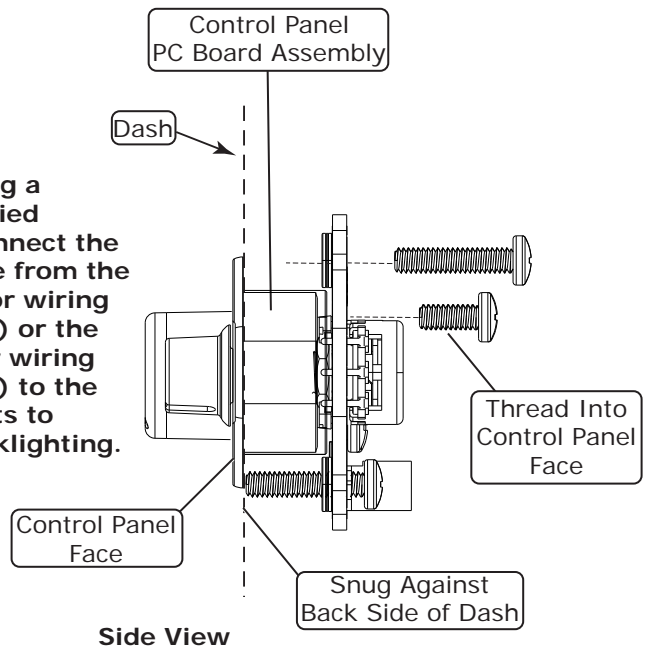


Figure 2a





www.vintageair.com

## Control Panel Removal

**NOTE:** Do not attempt to remove the control panel knobs using pliers, as doing so may damage the knobs. To remove the knobs and/or the control panel assembly from the dash, follow the procedure below.

1. Disconnect the control harness from the back of the control panel assembly (See Figure 3, below).
2. Loosen the (4) control panel mounting screws securing the control panel to the dash (See Figure 3, below).
3. Remove the (4) 8-32 x 3/8" screws securing the PC board assembly to the control panel face (See Figure 3, below).
4. Hold the PC board assembly and pull it away from the dash until the board comes loose from the control panel face (See Figure 4, below). **NOTE: The control panel knobs will be loose in the control panel face.**
5. Carefully remove the control panel face and knobs from the dash.

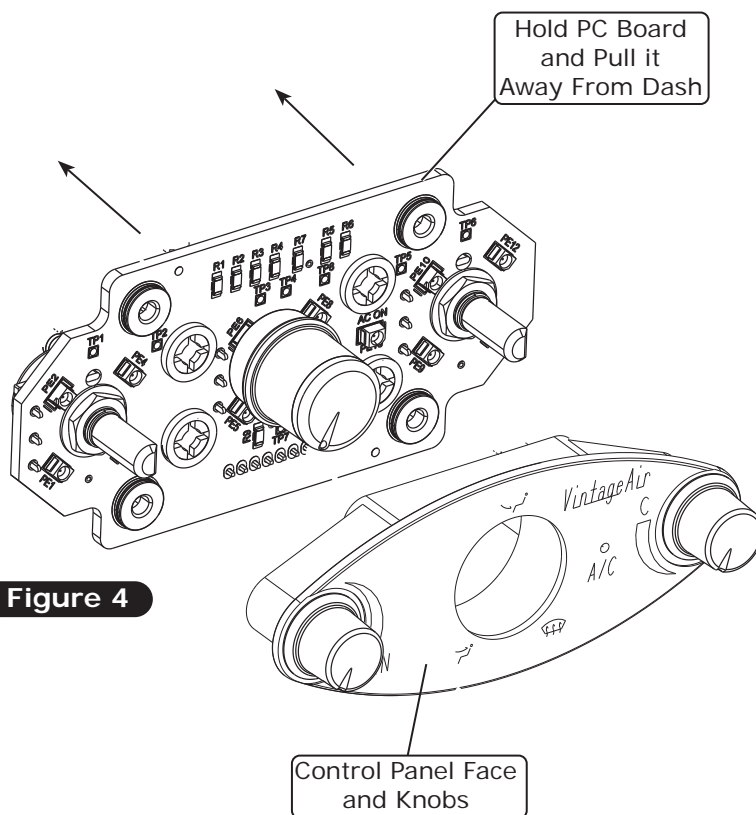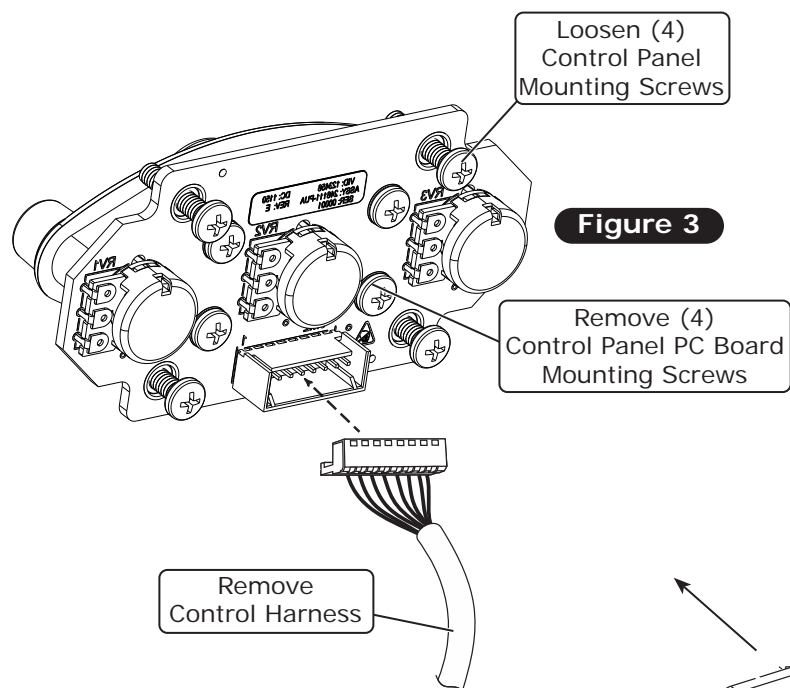





www.vintageair.com

## Gen IV Wiring Diagram


### 232007-VUR

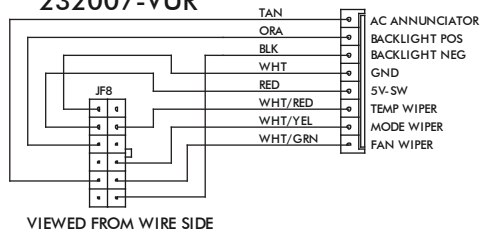

### 232002-VUA

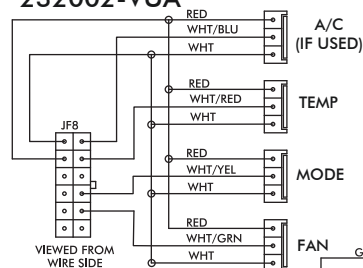


### GEN IV ECU

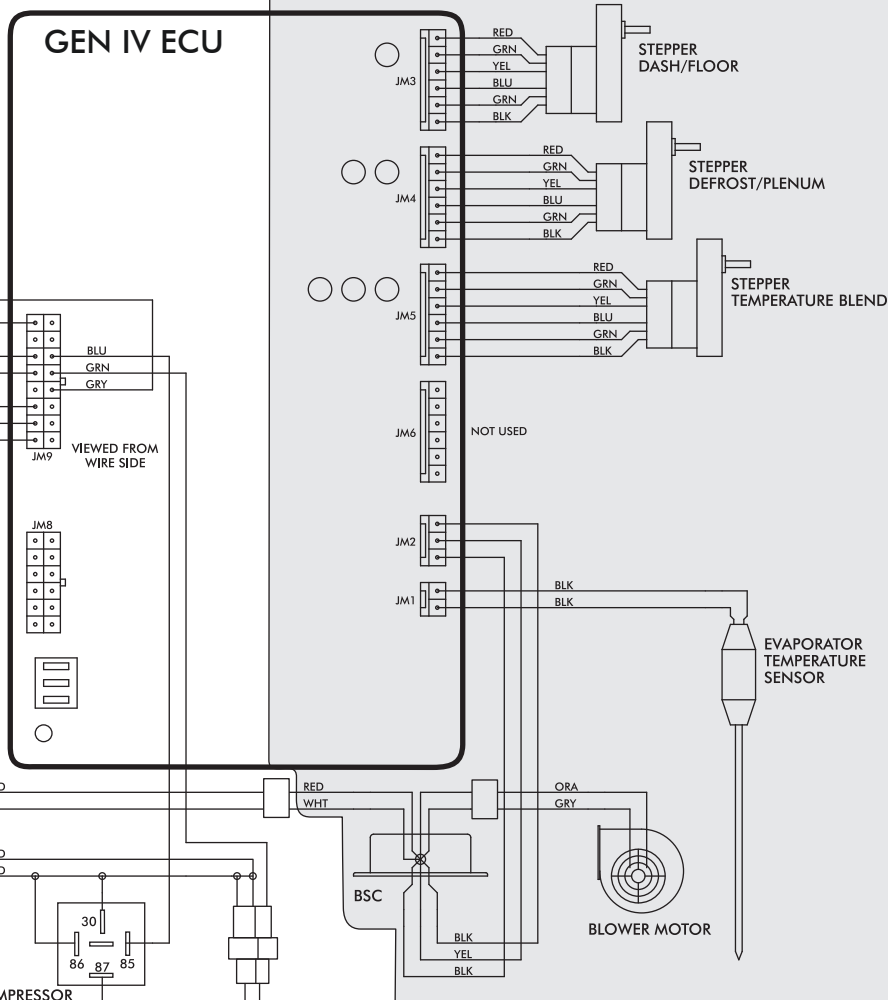

### PROGRAM

N/A  
\* DASH LAMP  
(IF USED)

\*\*\* WIDE OPEN  
THROTTLE SWITCH  
(OPTIONAL)

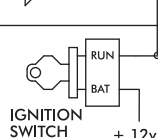

IGNITION SWITCH + 12v

\*\* CIRCUIT  
BREAKER  
30 AMP

COMPRESSOR  
RELAY

BINARY  
OR TRINARY  
SAFETY  
SWITCH

CMPR

HEATER  
CONTROL VALVE

NOTE: = CHASSIS  
GROUND

\* Dash lamp is used only with type 232007-VUR harness.

\*\* Warning: Always mount circuit breaker as close to the battery as possible. (NOTE: Wire between battery and circuit breaker is unprotected and should be carefully routed to avoid a short circuit).


\*\*\* Wide open throttle switch contacts close only at full throttle, which disables A/C compressor.





www.vintageair.com

# Gen 5 Wiring Diagram

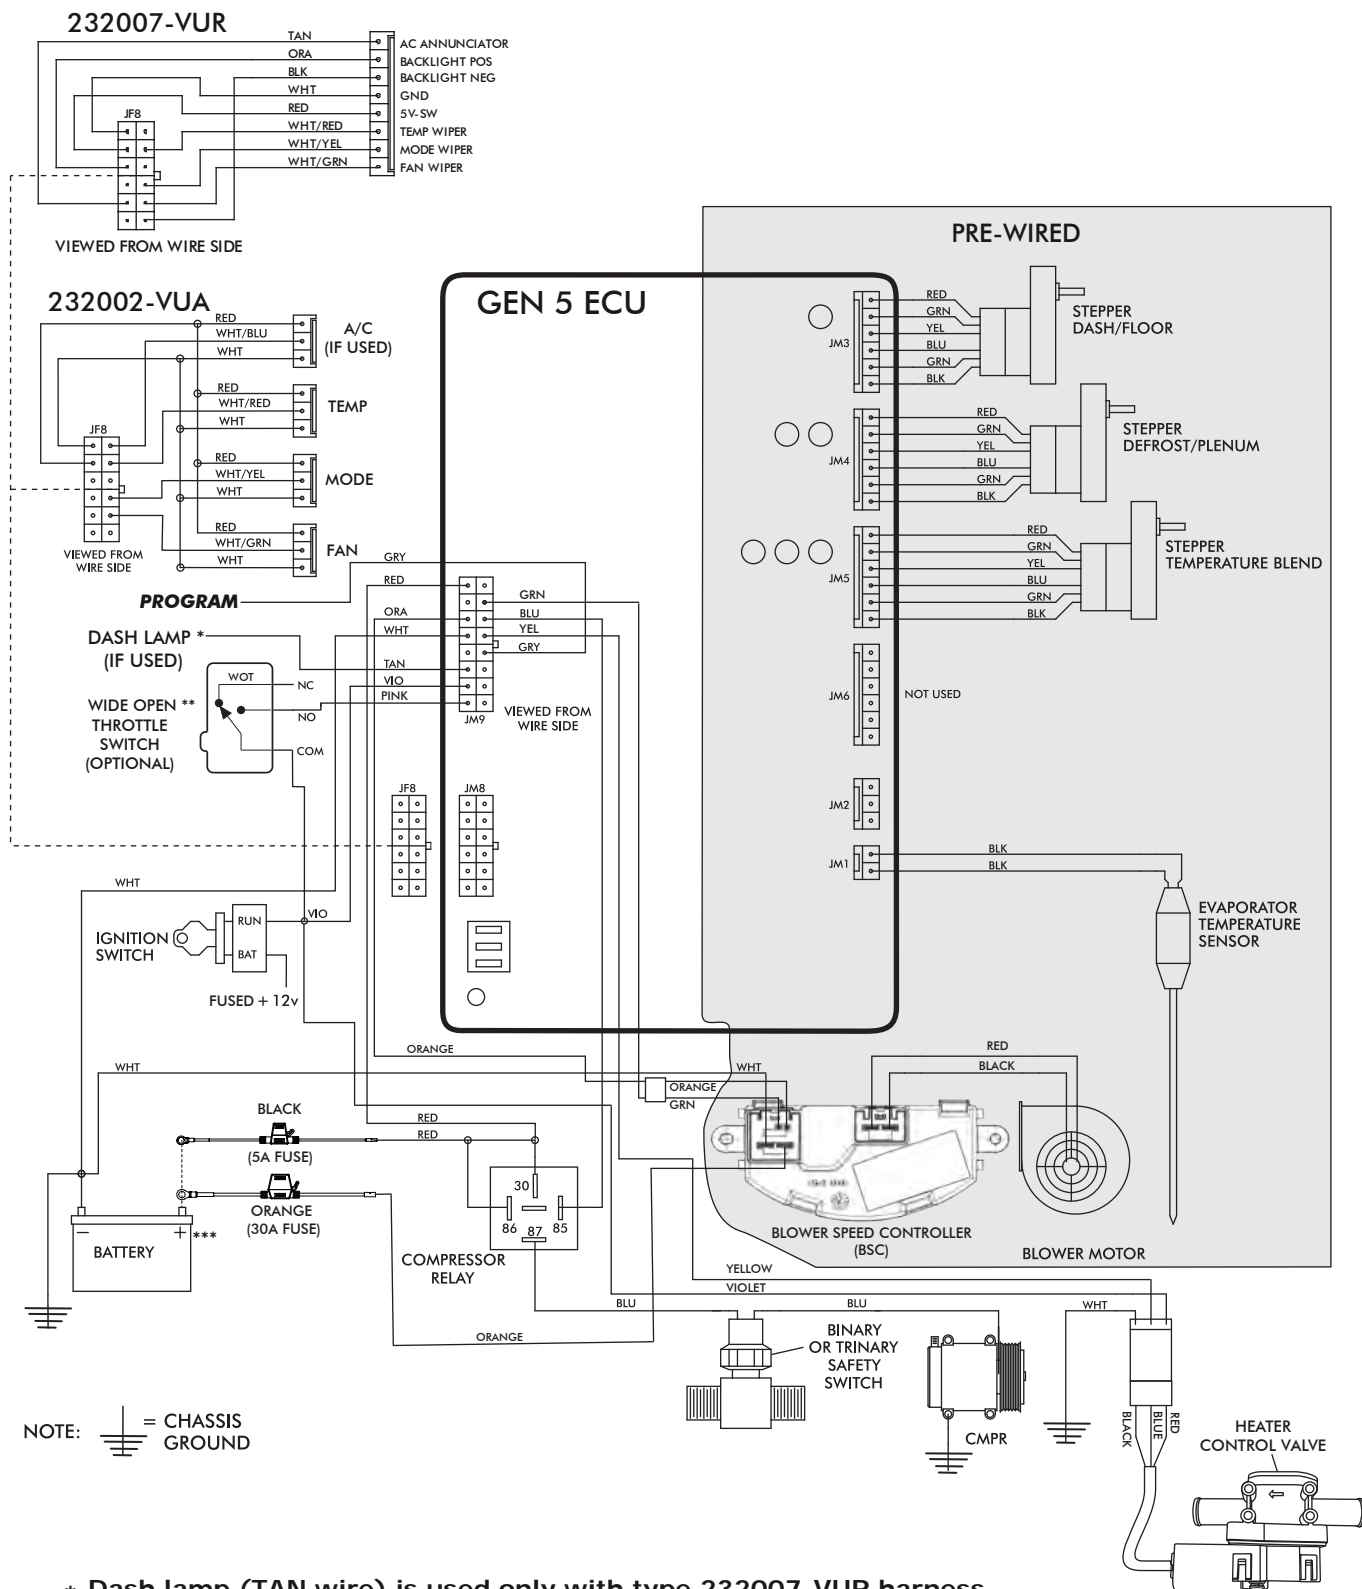

\* Dash lamp (TAN wire) is used only with type 232007-VUR harness.

\*\* Wide open throttle switch contacts close only at full throttle, which disables A/C compressor.

\*\*\* Install fuse assemblies at or as near to the battery as possible.





www.vintageair.com

## Operation of Controls

On Gen IV and Gen 5 systems with three lever/knob controls, the temperature control toggles between heat and A/C operations. To activate A/C, move the temperature lever/knob all the way to cold and then back it off to the desired vent temperature. For heat operation, move the temperature lever/knob all the way to hot and then adjust to the desired vent temperature. The blower will momentarily change speed, each time you toggle in and out of heat and A/C operations, to indicate the change.

### Blower Speed


This lever/knob controls blower speed, from OFF to HI.

### Mode Control

This lever/knob controls the mode positions, from DASH to FLOOR to DEFROST, with a blend in between.

### Temperature Control

This lever/knob controls the temperature, from HOT to COLD.

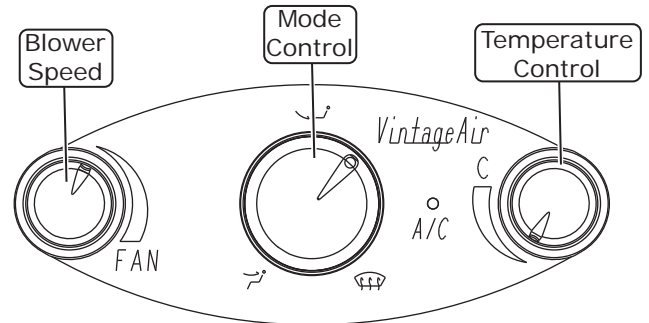

## A/C Operation

### Blower Speed


Adjust to desired speed.

### Mode Control

Adjust to desired mode position (DASH position recommended).

### Temperature Control

For A/C operation, adjust to coldest position to engage compressor (Adjust between HOT and COLD to reach desired temperature).

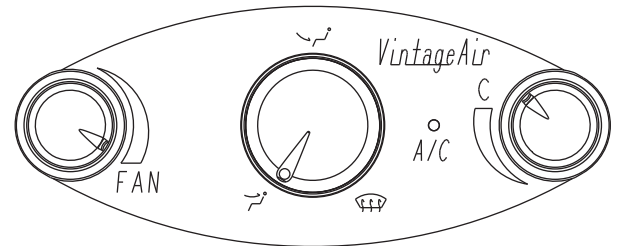

## Heat Operation

### Blower Speed


Adjust to desired speed.

### Mode Control

Adjust to desired mode position (FLOOR position recommended).

### Temperature Control

For maximum heating, adjust to hottest position (Adjust between HOT and COLD to reach desired temperature).

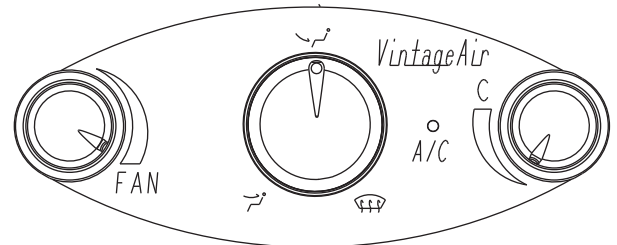

## Defrost/De-fog Operation

### Blower Speed


Adjust to desired speed.

### Temperature Control

Adjust to desired temperature.

### Mode Control

Adjust to DEFROST position for maximum defrost, or between FLOOR and DEFROST positions for a bi-level blend (Compressor is automatically engaged).

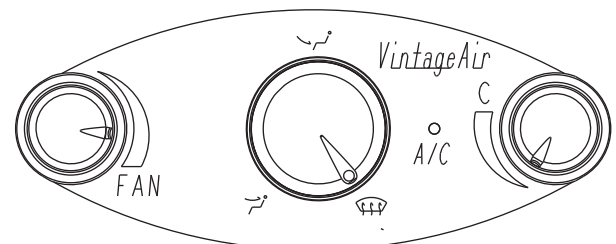



www.vintageair.com

## Packing List: Control Panel Kit (491241)

No.	Qty.	Part No.	Description
1.	1	491241	Streamline ProLine Ellipse

Checked By: \_\_\_\_\_

Packed By: \_\_\_\_\_

Date: \_\_\_\_\_

