


## **Rotary** Control Panel Kit (492050)

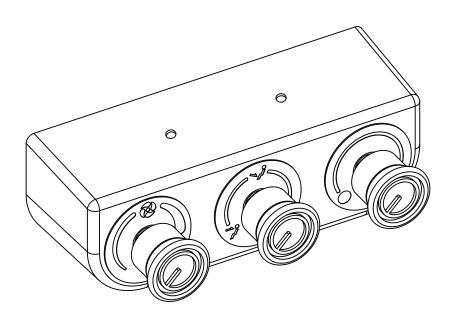

18865 Goll St. San Antonio, TX 78266 Phone: 800-862-6658 Sales: sales@vintageair.com Tech Support: tech@vintageair.com www.vintageair.com



# **Table of Contents**


Cover	1
Table of Contents	. 2
Packing List/Parts Disclaimer	. 3
Control Panel Installation Options, Under Dash Control Panel Pod Installation	. 4
Dash Modification for In Dash Rotary Pot Installation	5
Rotary Pot Installation	6
Final Steps	. 7
Gen IV Wiring Diagram	. 8
Gen 5 Wiring Diagram	. 9
Operation of Controls	10
Dash Modification Template for In Dash Rotary Pot Installation	11
Packing List	12


### **Important Notice-Please Read**


This control panel is designed to only work with either a Gen IV evaporator unit equipped with a **246204-PUA ECU**, or a Gen 5 evaporator unit equipped with a **246404 ECU**. Please confirm that your unit has the proper ECU prior to installing the control panel as shown below. A replacement ECU can be purchased from Vintage Air if needed.






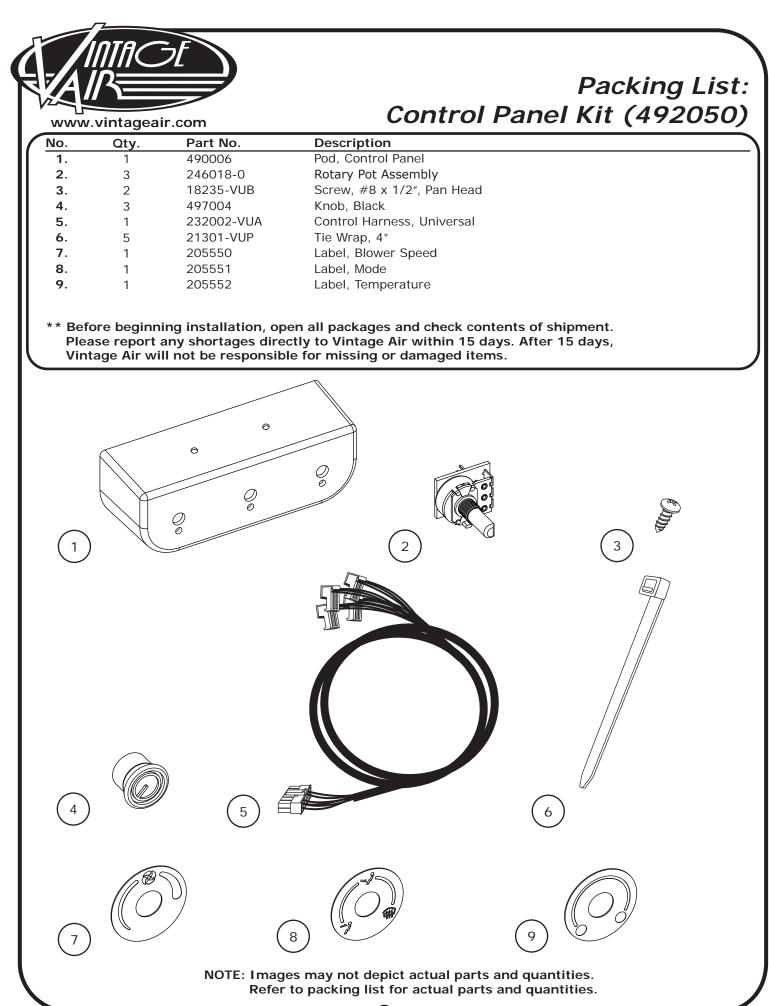


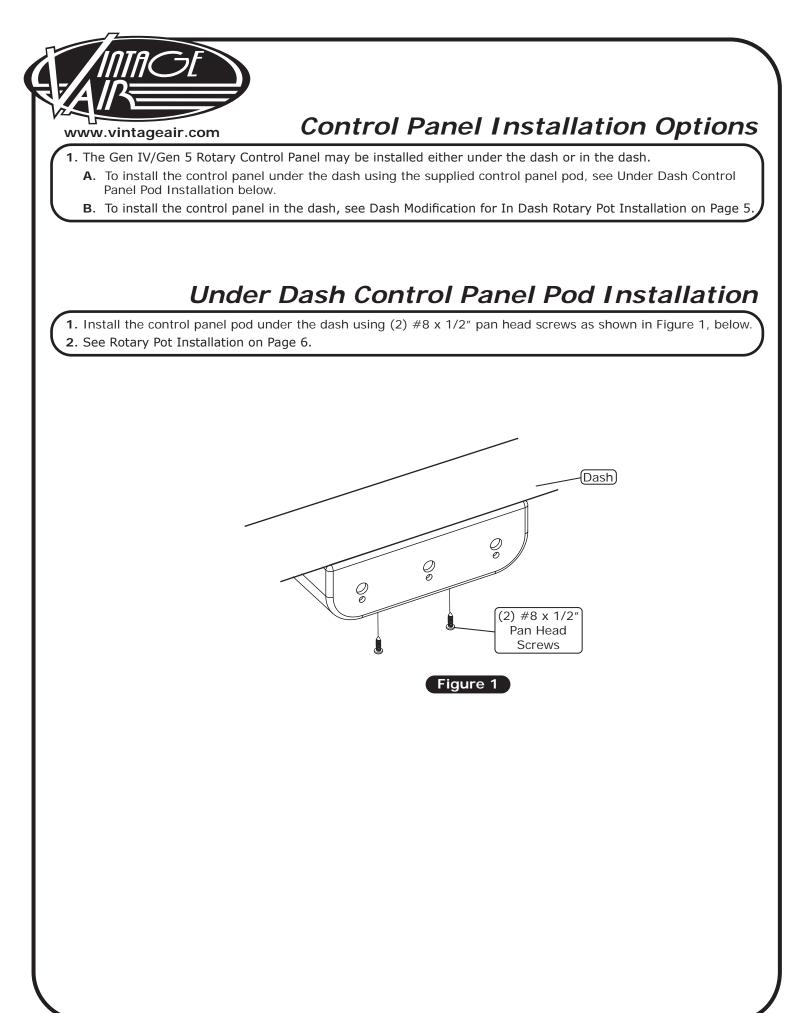

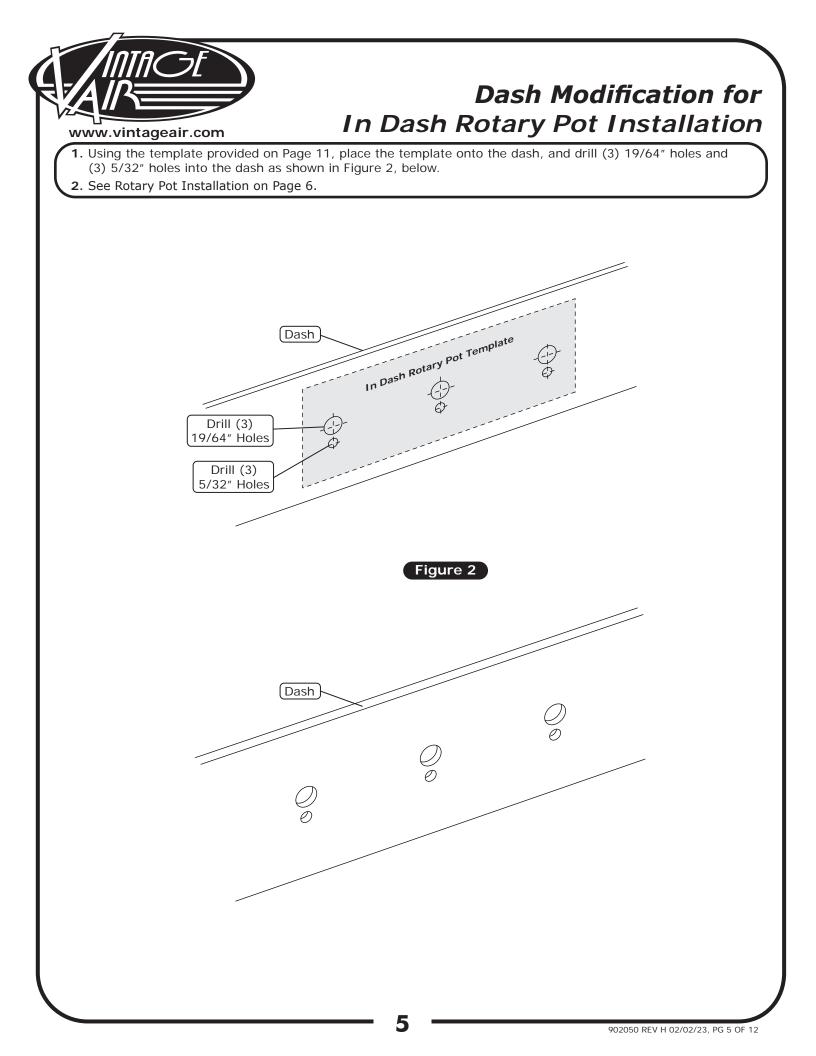

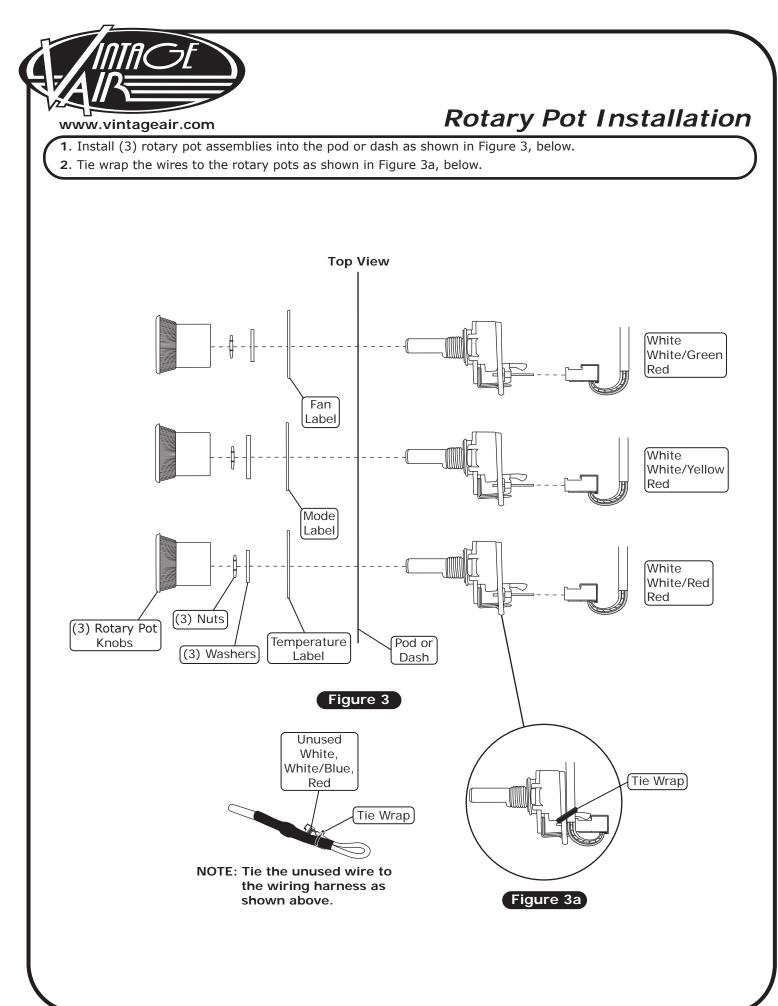


6

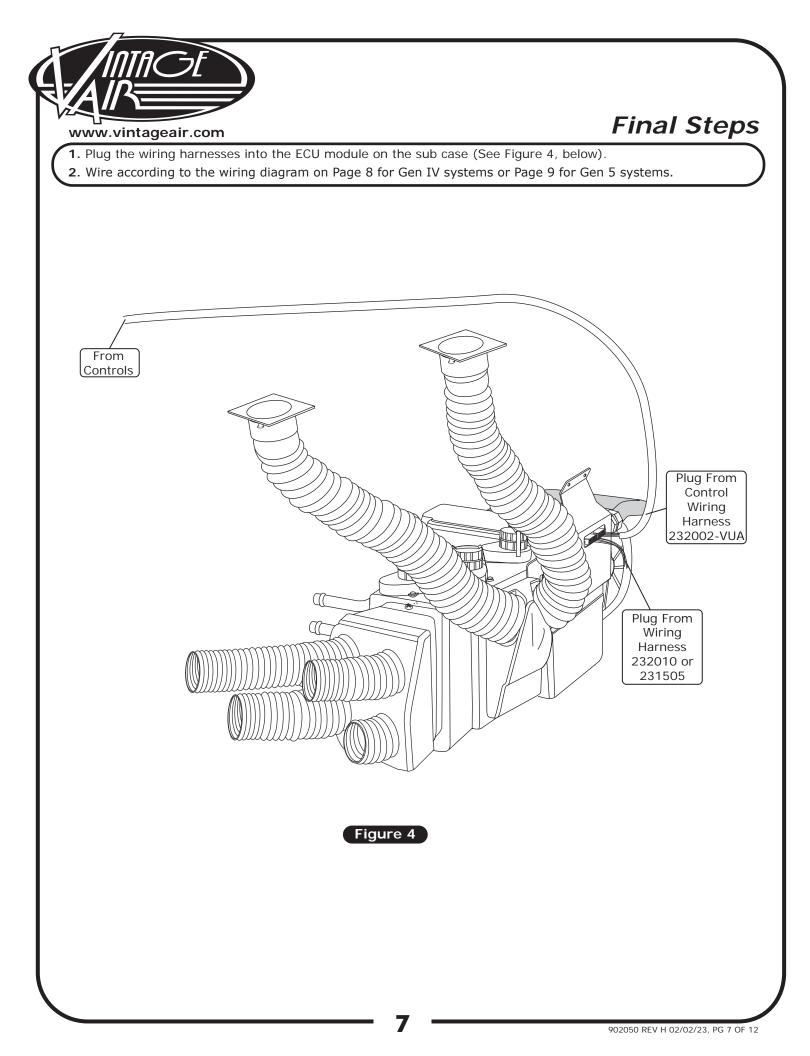



### Gen IV Wiring Diagram

232007-VUR

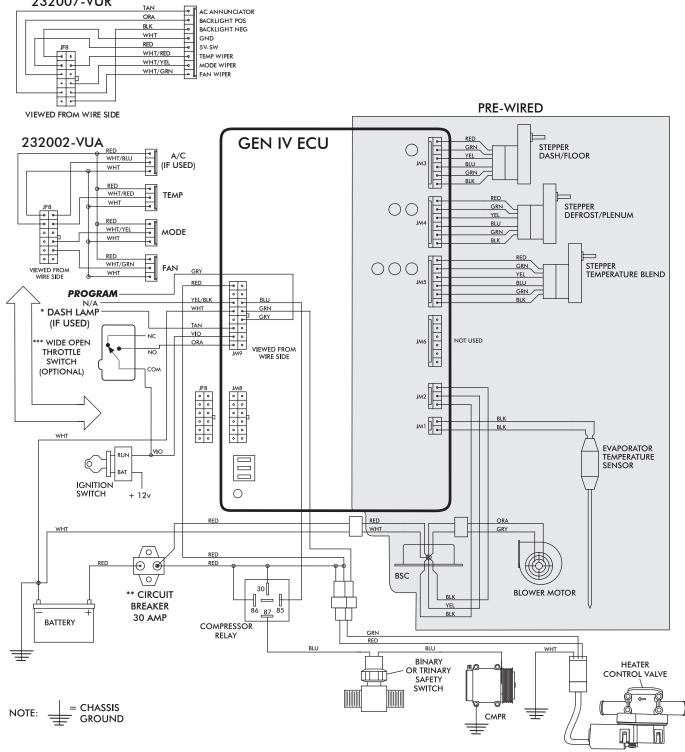


- \* Dash lamp is used only with type 232007-VUR harness.
- \*\* Warning: Always mount circuit breaker as close to the battery as possible. (NOTE: Wire between battery and circuit breaker is unprotected and should be carefully routed to avoid a short circuit).

8

\*\*\* Wide open throttle switch contacts close only at full throttle, which disables A/C compressor.



#### Gen 5 Wiring Diagram

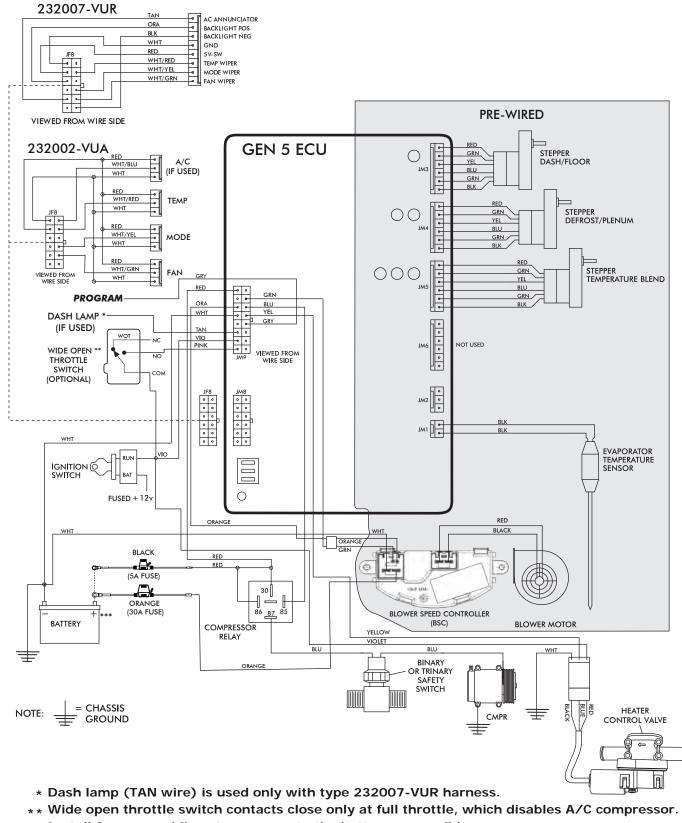



\*\*\* Install fuse assemblies at or as near to the battery as possible.




## **Operation of Controls**

On Gen IV and Gen 5 systems with three lever/knob controls, the temperature control toggles between heat and A/C operations. To activate A/C, move the temperature lever/knob all the way to cold and then back it off to the desired vent temperature. For heat operation, move the temperature lever/knob all the way to hot and then adjust to the desired vent temperature. The blower will momentarily change speed, each time you toggle in and out of heat and A/C operations, to indicate the change.

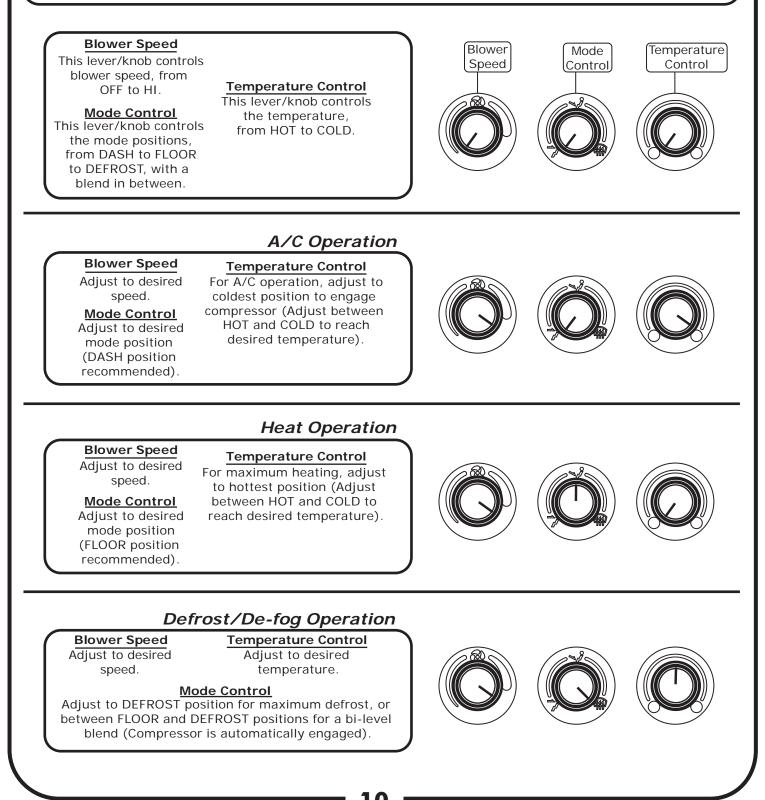

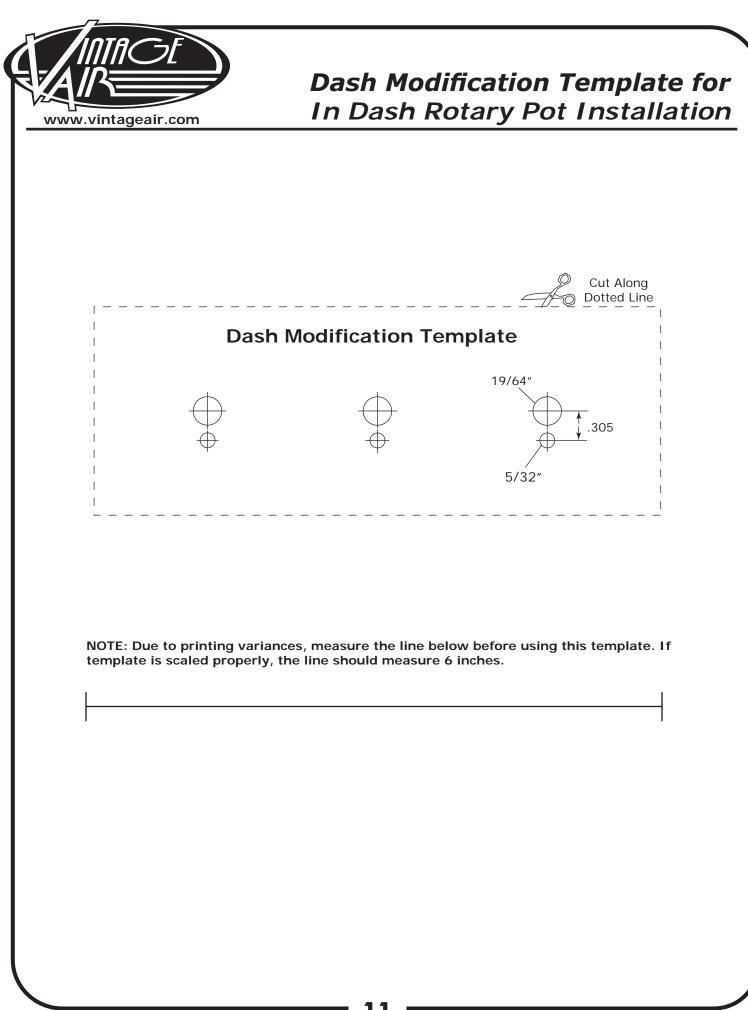

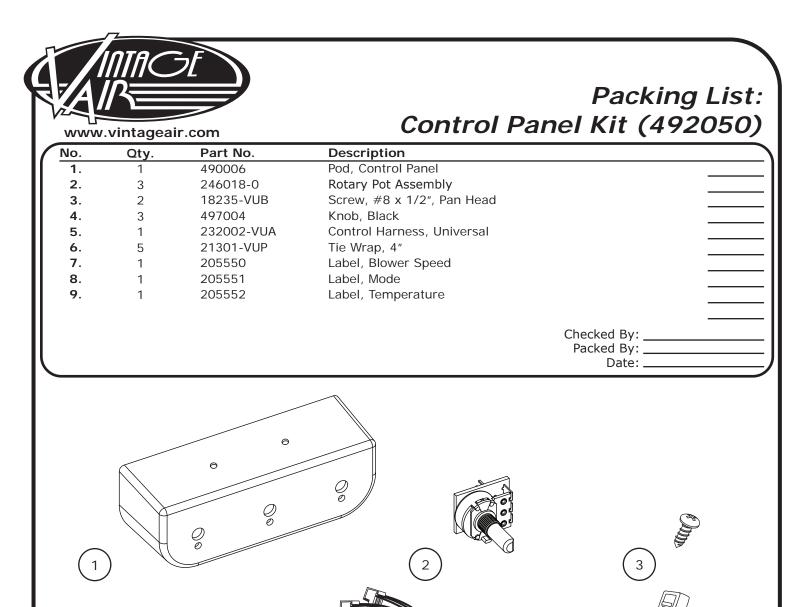



7

8)

NOTE: Images may not depict actual parts and quantities. Refer to packing list for actual parts and quantities.

6

9