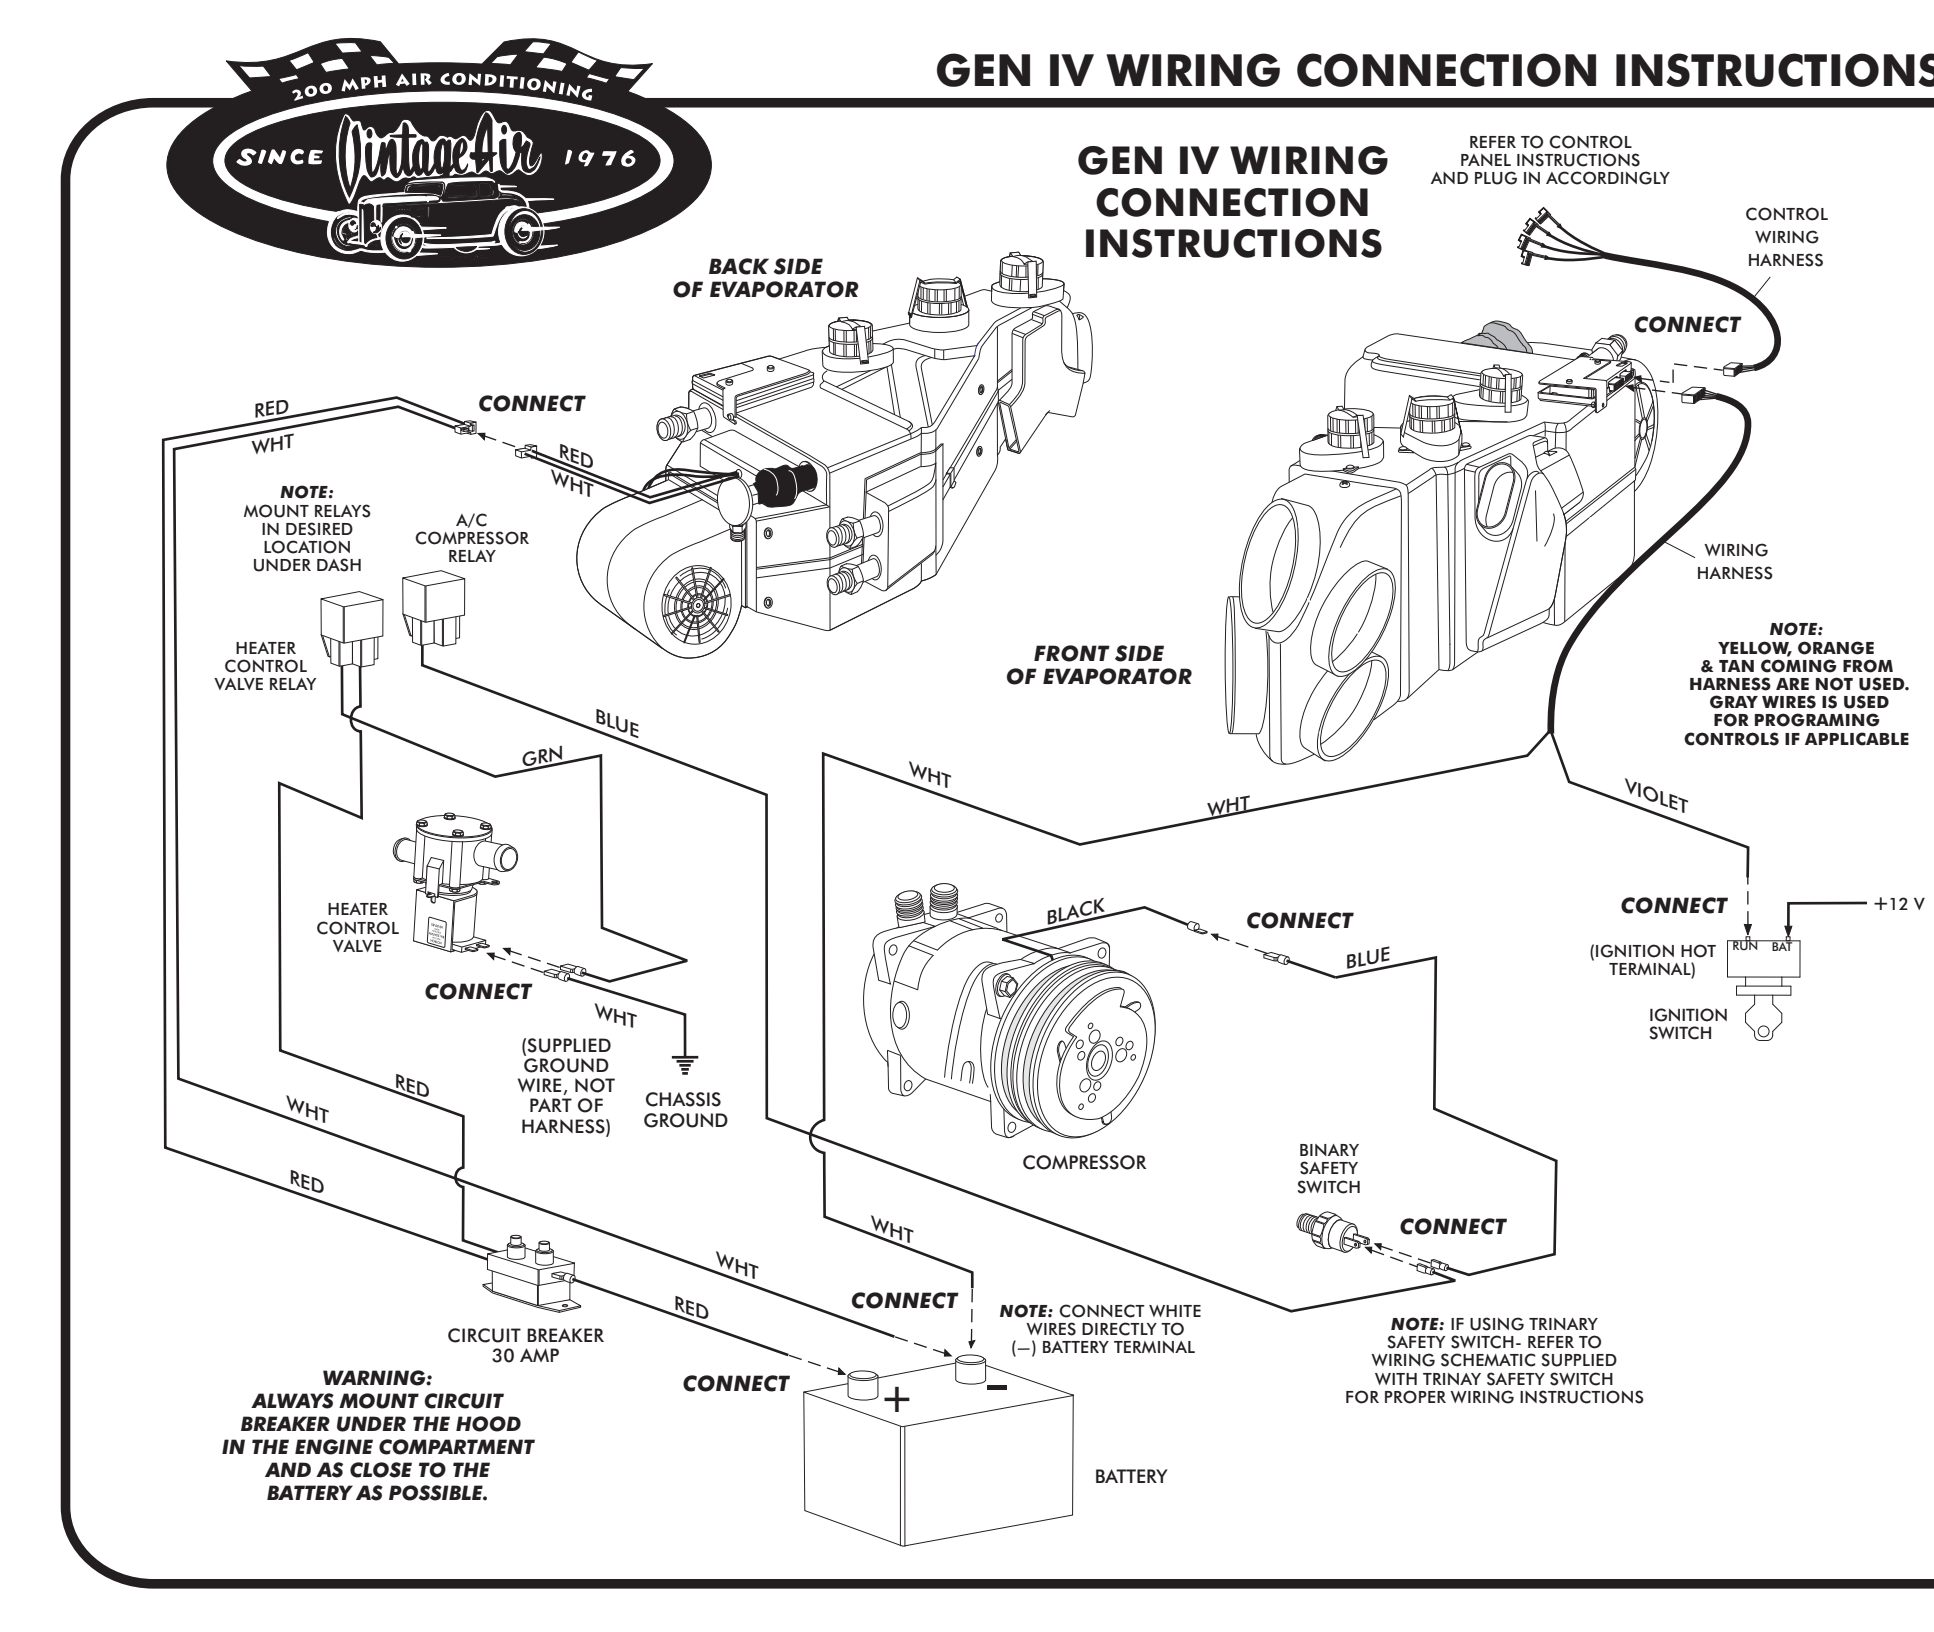GEN IV WIRING CONNECTION INSTRUCTIONS