

INSTALLATION INSTRUCTIONS FOR 34217VUQ A/C/HEAT 4 WAY BULKHEAD

INSTALL THE 4 WAY BULKHEAD PLATE AS FIGURE 1 SHOWS.

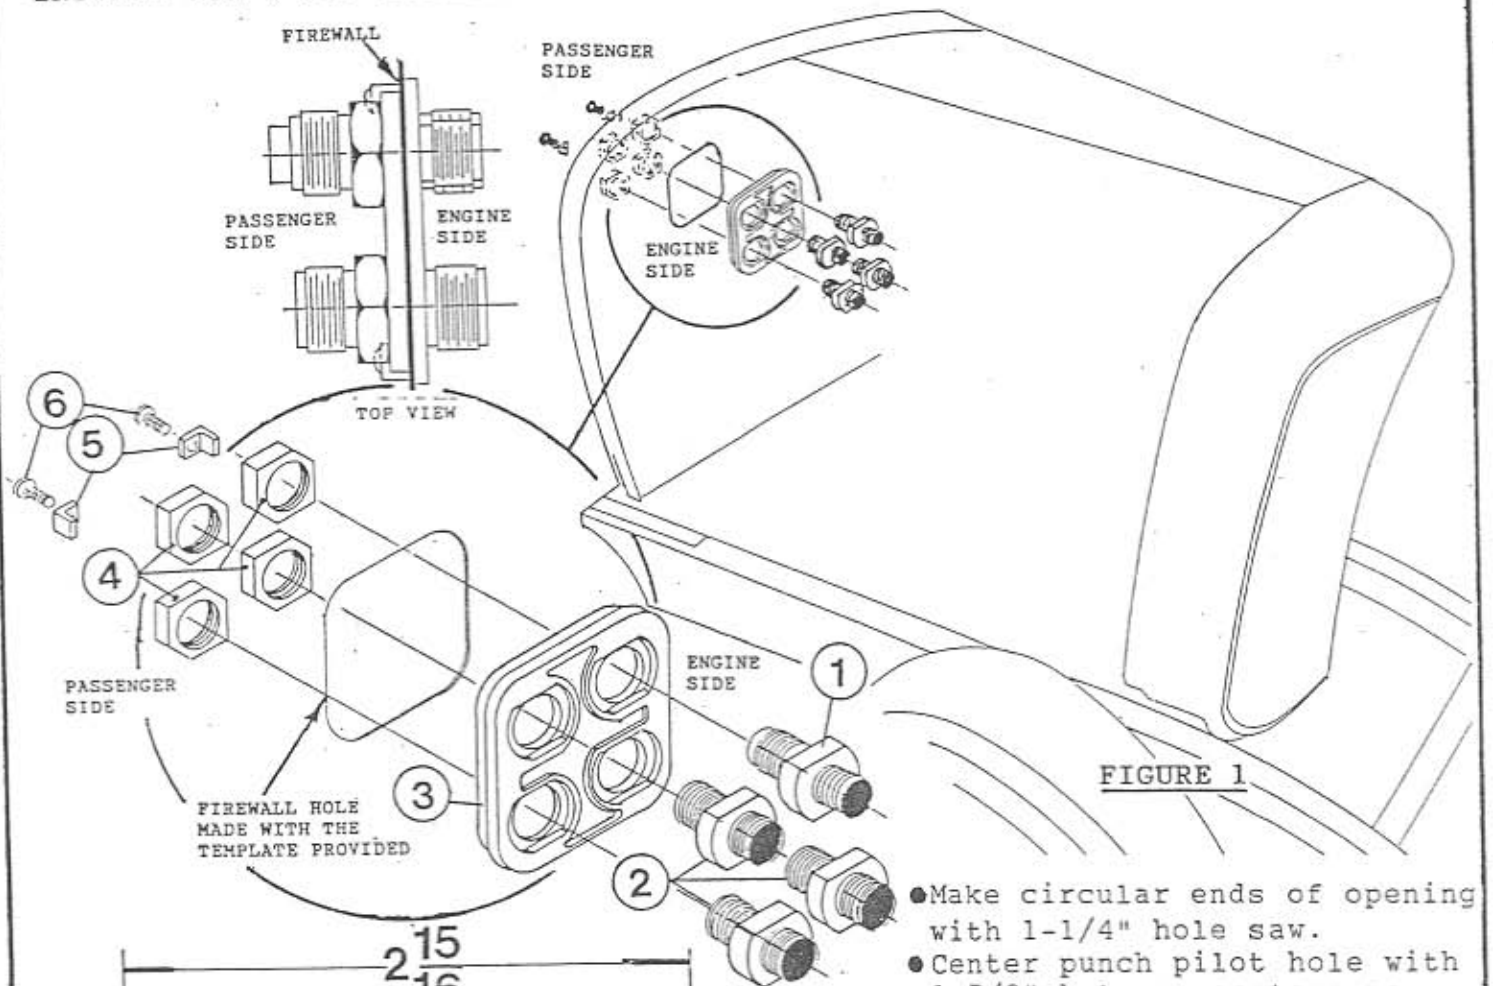


FIGURE 1

- Make circular ends of opening with 1-1/4" hole saw.
- Center punch pilot hole with 1-5/8" between centers as shown.
- When holes are cut; snip remaining bridge for final opening.
- ◆ Use template provided in Figure 2.

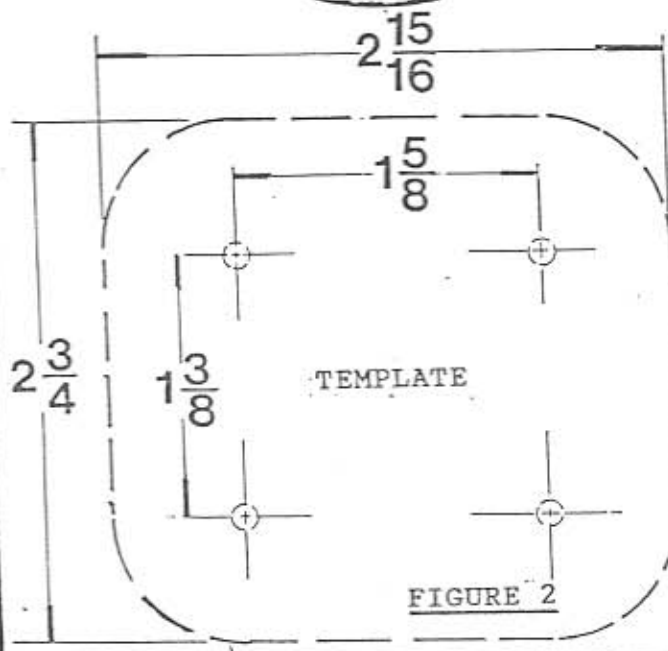


FIGURE 2

PACKING LIST

NO	QTY	PART NUMBER	DESCRIPTION
1	1	35331-VUQ	#6 Bulkhead fitting
2	3	35333VUQ	#10 Bulkhead fitting
3	1	35340VUQ	4-Way bulkhead plate
4	4	35335VUQ	#10 Nut
5	2	35337VUQ	Bulkhead plate rear bracket
6	2	18215VUB	10-24 x 1/2" Bolt