




www.vintageair.com

Installation Instructions: Water Neck Riser with Center Port (706003)

1. Using a suitable gasket adhesive, install thermostat gasket on intake manifold.
2. Position water neck riser as desired. Apply a bead of gasket adhesive around the water neck riser, and install the thermostat gasket onto the water neck riser.
3. Install thermostat.
4. Install 1/2" NPT fitting in desired location. Install 1/2" NPT plug in unused port. **NOTE: Fitting and plug are not included with this kit.**

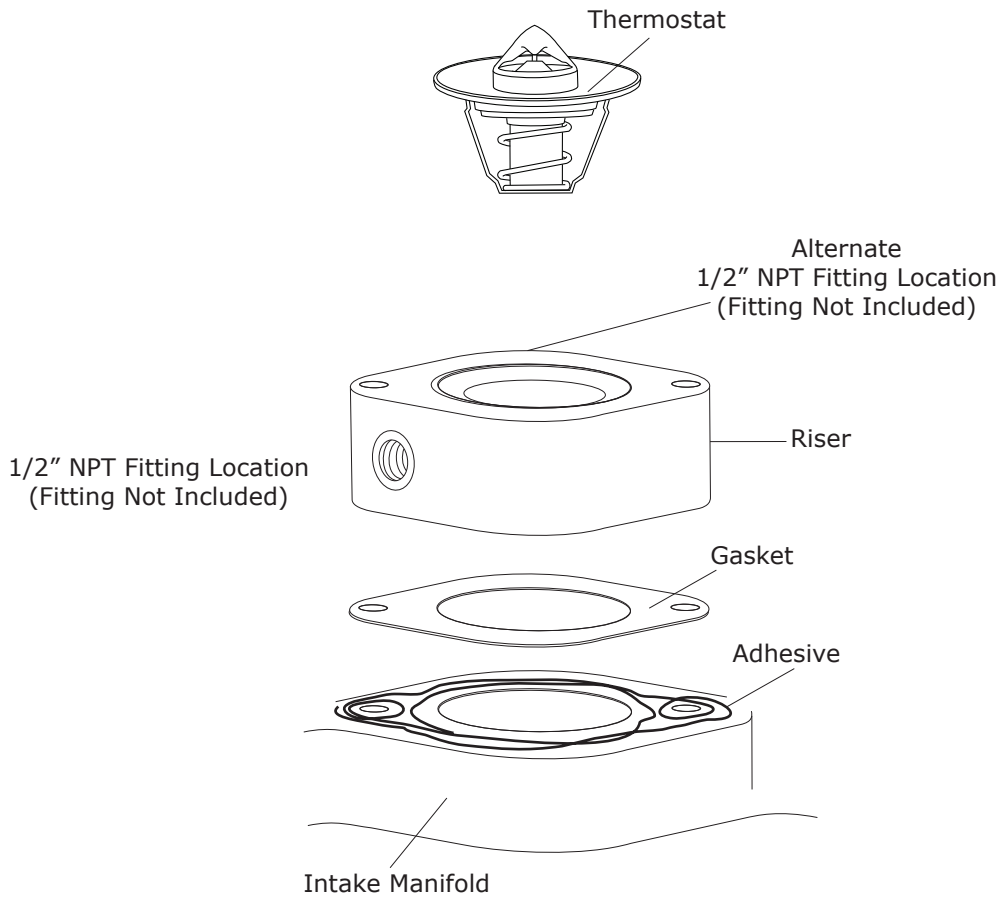

Packing List:

No.	Qty.	Part No.	Description
1.	1	721001	Water Neck Riser with Center 1/2" NPT Port
2.	1	330601-VGR	Thermostat Housing/Riser Gasket

Checked By: _____
 Packed By: _____
 Date: _____

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**