



www.vintageair.com


Packing List: 1970-72 Chevelle/Monte Carlo Condenser Kit with Chrome Drier (021374)

No.	Qty.	Part No.	Description
1.	1	03767-VUC	Condenser, 14" x 24", Parallel Flow
2.	1	01311-VUQ	Drier, Chrome
3.	1	18125-VUB	Washer, 1/4" USS, Flat
4.	1	18247-VUB	Screw, #10 x 1/2", Sheet Metal
5.	1	18152-VUB	Nut with Star Washer, 1/4-20
6.	13	18249-VUB	Screw, 10-24 x 3/8", Pan Head
7.	13	18260-VUB	Nut with Star Washer, 10-24
8.	1	18266-VUB	Screw, #14 x 3/4", Washer Head
9.	1	18611-VUB	Washer, 5/16", Flat
10.	2	182360	Screw, 5/16-18 x 3/4", Self-Tapping
11.	3	33857-VUF	O-ring, #6
12.	2	33858-VUF	O-ring, #8
13.	1	35368-VCG	Hardline, #6 Drier/Condenser
14.	1	644074	Bracket, Condenser, Top
15.	1	644071-FCB	Bracket, Condenser, Bottom
16.	1	644163	Bracket, Condenser, Top, Driver-Side
17.	1	659981	Bracket, Drier
18.	1	11079-VUS	Binary Switch, Male
19.	1	23127-VUW	Compressor Lead, 72"
20.	1	33134-VUI	Grommet, 2-Hole
21.	3	31603-VUD	Adel Clamp, 1/2" ID
22.	1	091173	Hardline, #6 Drier/Core
23.	1	091174	Hardline, #8 Condenser/Compressor
24.	1	18258-VUB	Screw, 10-32 x 3/4"
25.	1	64139-VUB	Bracket, Control Pod, Right
26.	1	31600-VUD	Adel Clamp, 3/8" ID
27.	1	18251-VUB	Nut with Star Washer, 10-32
28.	1	41117-VUP	Refrigerant Oil
29.	1	901429	Instruction, 1970-72 Chevelle Condenser Kit w/Drier

Checked By: _____

Packed By: _____

Date: _____

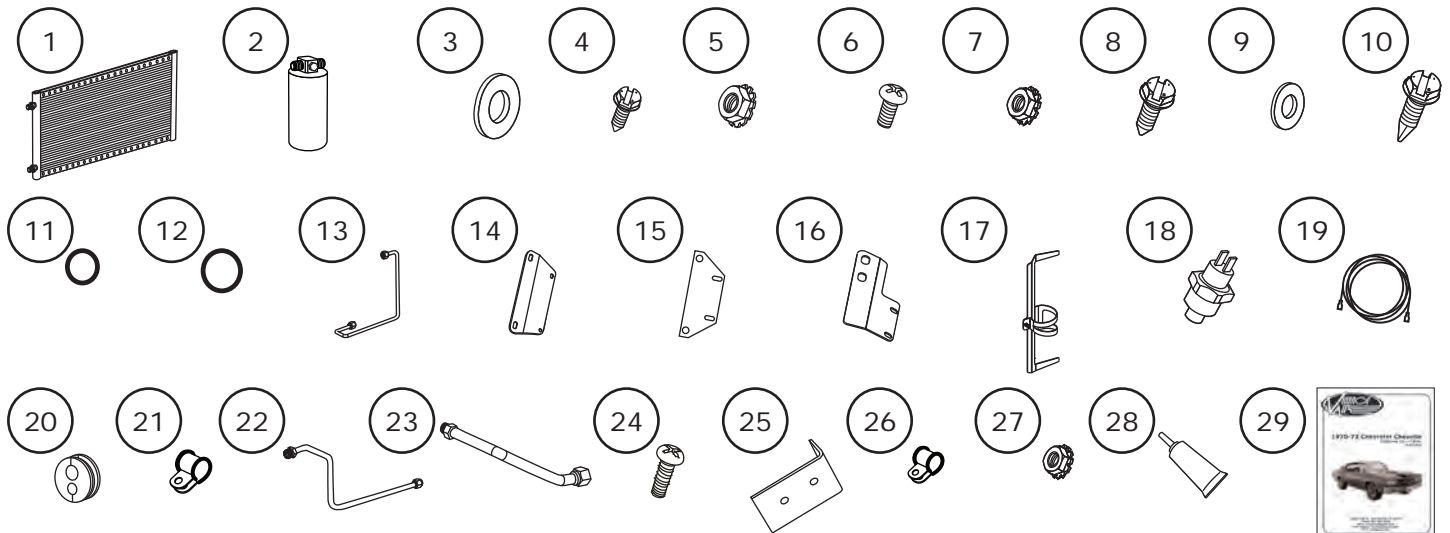

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**