




FRONT RUNNER CLUTCH COVER ANDZ 044093

CLUTCH COVER INSTALLATION

- HOLD CLUTCH COVER OVER FRONT OF COMPRESSOR AND INSTALL THE FLAT HEAD SOCKET BOLTS THROUGH COVER AND THREAD INTO COMPRESSOR CLUTCH. TIGHTEN EVENLY TO PREVENT WOBBLE.

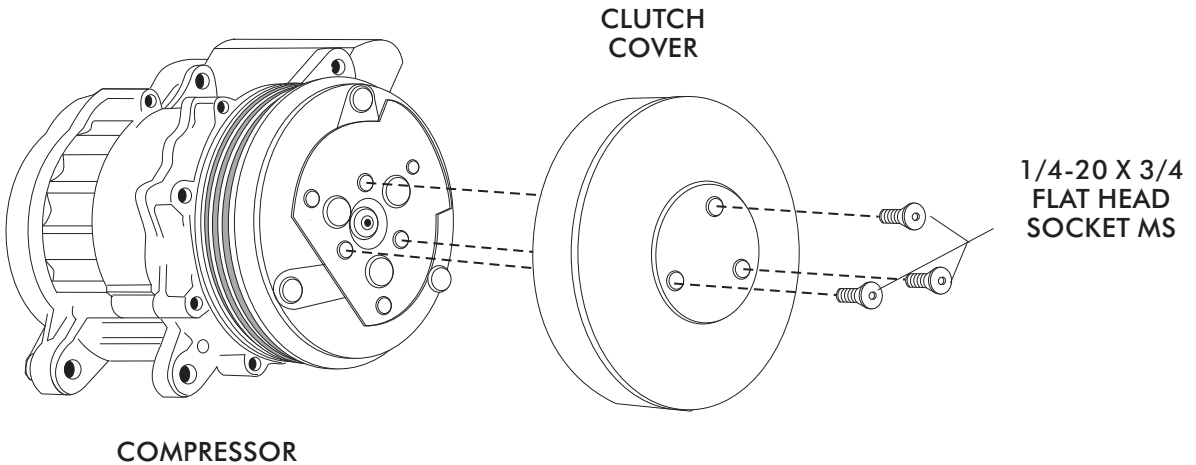

FRONT RUNNER CLUTCH COVER PACKING LIST

CLUTCH COVER KIT
044093

No.	QTY.	PART No.	DESCRIPTION
1.	1	044090	CLUTCH COVER ANDZ
2.	3	18011-VUB	1/4-20 X 3/4 SS FLAT SOCKET MS

CHECKED BY: _____
 PACKED BY: _____
 DATE: _____

