




Ford 5.0

Power Steering Bracket Kit (137147)

Fits:
1983-93 Ford V8 Mustang with A/C
1979-86 Ford V8 Mustang without A/C

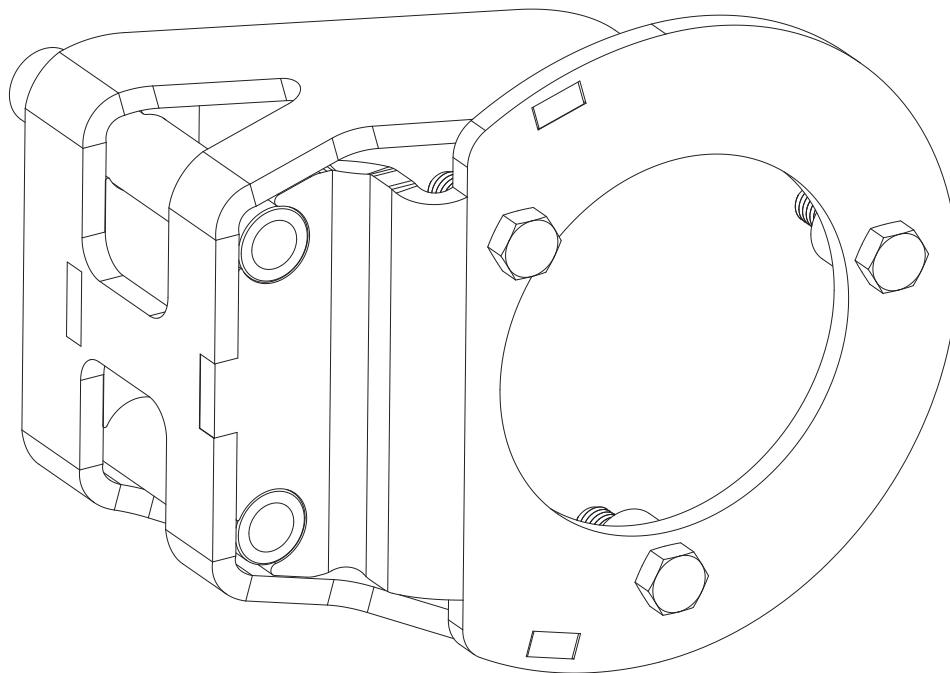

18865 Goll St. San Antonio, TX 78266
Phone: 800-862-6658
Sales: sales@vintageair.com
Tech Support: tech@vintageair.com
www.vintageair.com

Table of Contents

Cover.....	1
Table of Contents.....	2
Packing List/Parts Disclaimer.....	3
Power Steering Pump Installation.....	4
Bracket Assembly Installation.....	5
Packing List.....	6

Additional Info: Please Read Before Beginning

- This kit works with OEM 1983-93 Ford Mustang 5.0 factory A/C equipped engines and is compatible with Vintage Air Compressor Bracket Kit (137130).
- **This kit will fit 1979-86 Ford Mustang V8 engines without factory air, but will require additional brackets (137130, 137152 and 137153).**
- **This kit is designed to be a direct-fit replacement for the OEM Ford power steering pump bracket E5ZC-3C511-AA and OEM Ford power steering pumps and pulleys (not included).**
- This kit includes the hardware to install the power steering pump onto the bracket. The hardware needed to install the bracket assembly onto the engine is included with Vintage Air Compressor Bracket Kit (137130). The OEM power steering bracket hardware may also be used.
- The power steering pulley must be removed prior to installation.

Additional Parts & Accessories



137130
 1982-93 Ford Foxbody 5.0
 Compressor Bracket Kit



137152
 1983-93 Ford Mustang
 OEM Compressor Bracket



137153
 1983-93 Ford Mustang A/C Rear OEM
 Compressor Bracket



852012
 1979-04 Ford Foxbody DSE
 Power Steering Hose Kit




www.vintageair.com

Packing List: Power Steering Bracket Kit (137147)

No.	Qty.	Part No.	Description
1.	1	137148	Bracket Assembly, Power Steering
2.	3	18202-VUB	Spacer, .750" OD x .406" ID x .375" Length
3.	3	18360-VUB	Bolt, 3/8-16 x 1 1/4", Hex

**** Before beginning installation, open all packages and check contents of shipment. Please report any shortages directly to Vintage Air within 15 days. After 15 days, Vintage Air will not be responsible for missing or damaged items.**

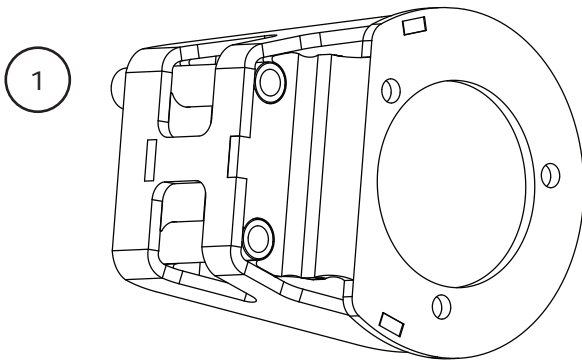

2





3



**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**


Power Steering Pump Installation

1. Install (3) 3/8-16 x 1 1/4" hex bolts through the holes on the bracket assembly (See Figure 1, below).
2. Install (3) .750" OD x .406" ID x .375" length spacers onto the bolts on the rear of the bracket (See Figure 1, below).
3. Install the power steering pump (not included) with the pulley removed (See Figure 2, below).
4. Tighten the (3) bolts.
5. Reinstall the pulley.

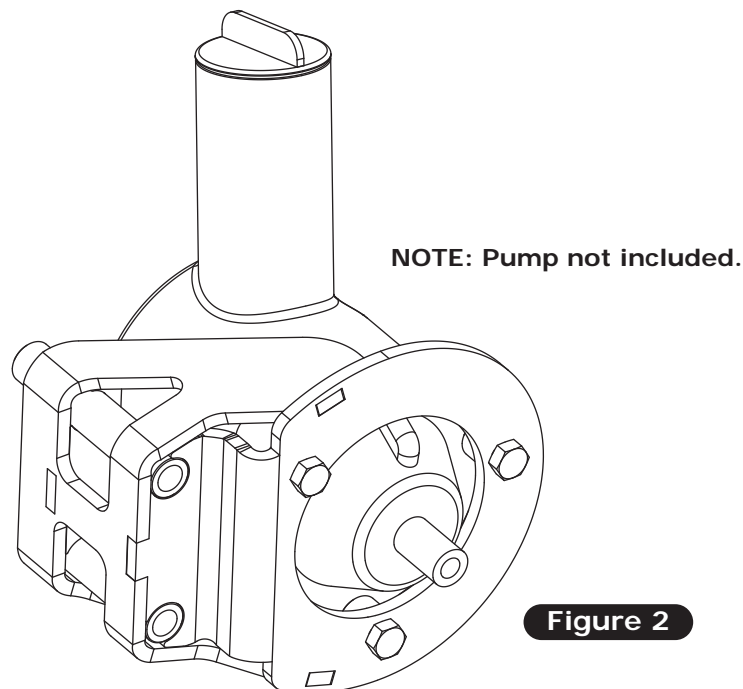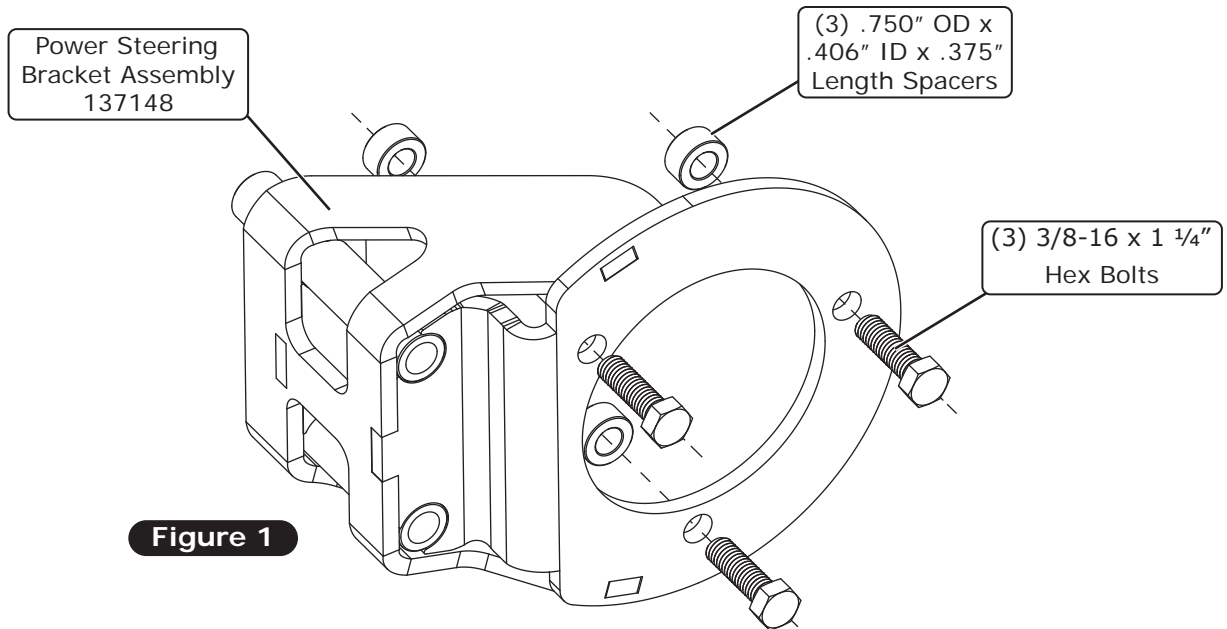

Bracket Assembly Installation

1. Install the bracket and pump assembly onto the engine using the OEM hardware or the hardware included in the Vintage Air Compressor Bracket Kit (137130) as shown in Figure 3, below.

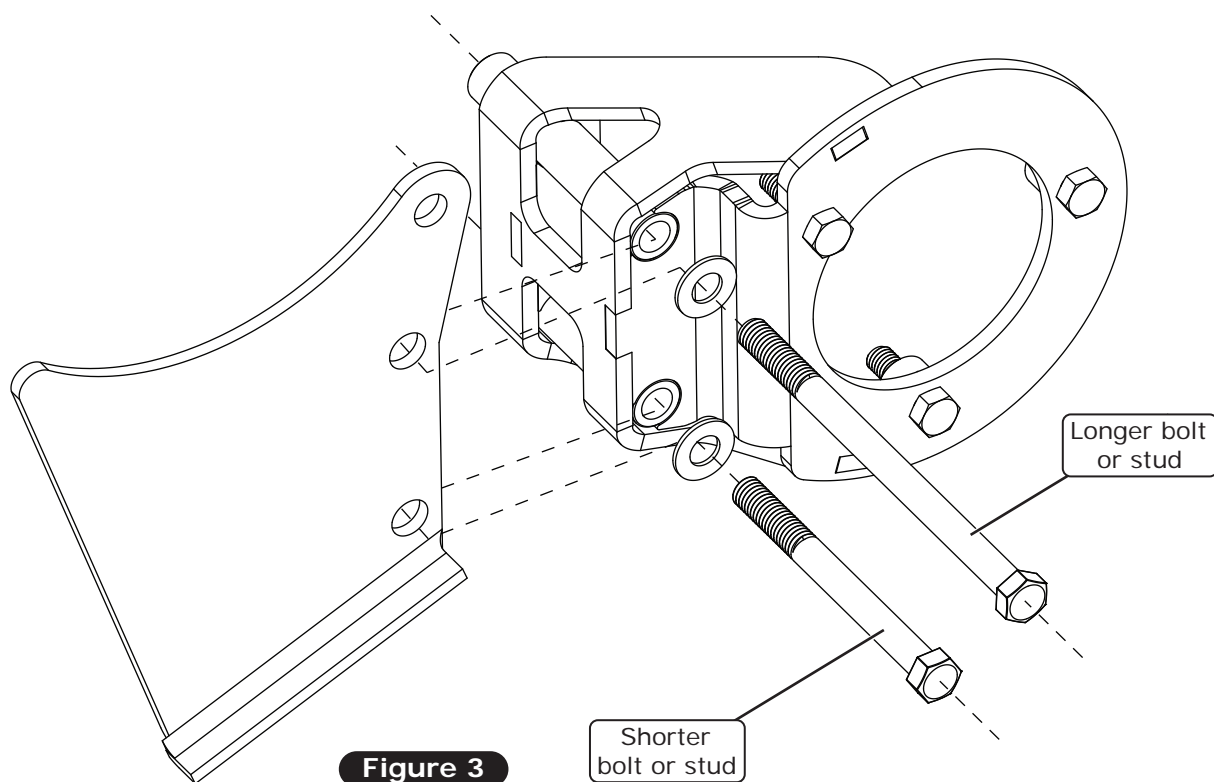




www.vintageair.com

Packing List: Power Steering Bracket Kit (137147)

No.	Qty.	Part No.	Description
1.	1	137148	Bracket Assembly, Power Steering
2.	3	18202-VUB	Spacer, .750" OD x .406" ID x .375" Length
3.	3	18360-VUB	Bolt, 3/8-16 x 1 1/4", Hex

Checked By: _____
Packed By: _____
Date: _____

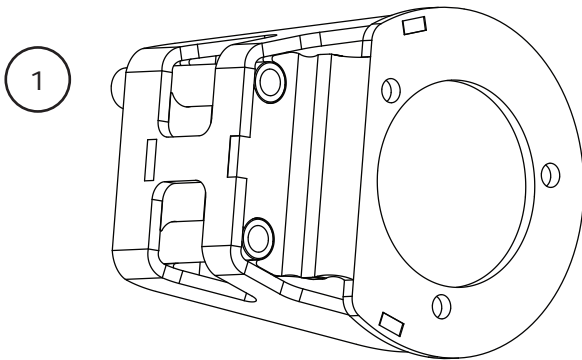

2



3



NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.