


Vintage Air Part # 15808-VCB

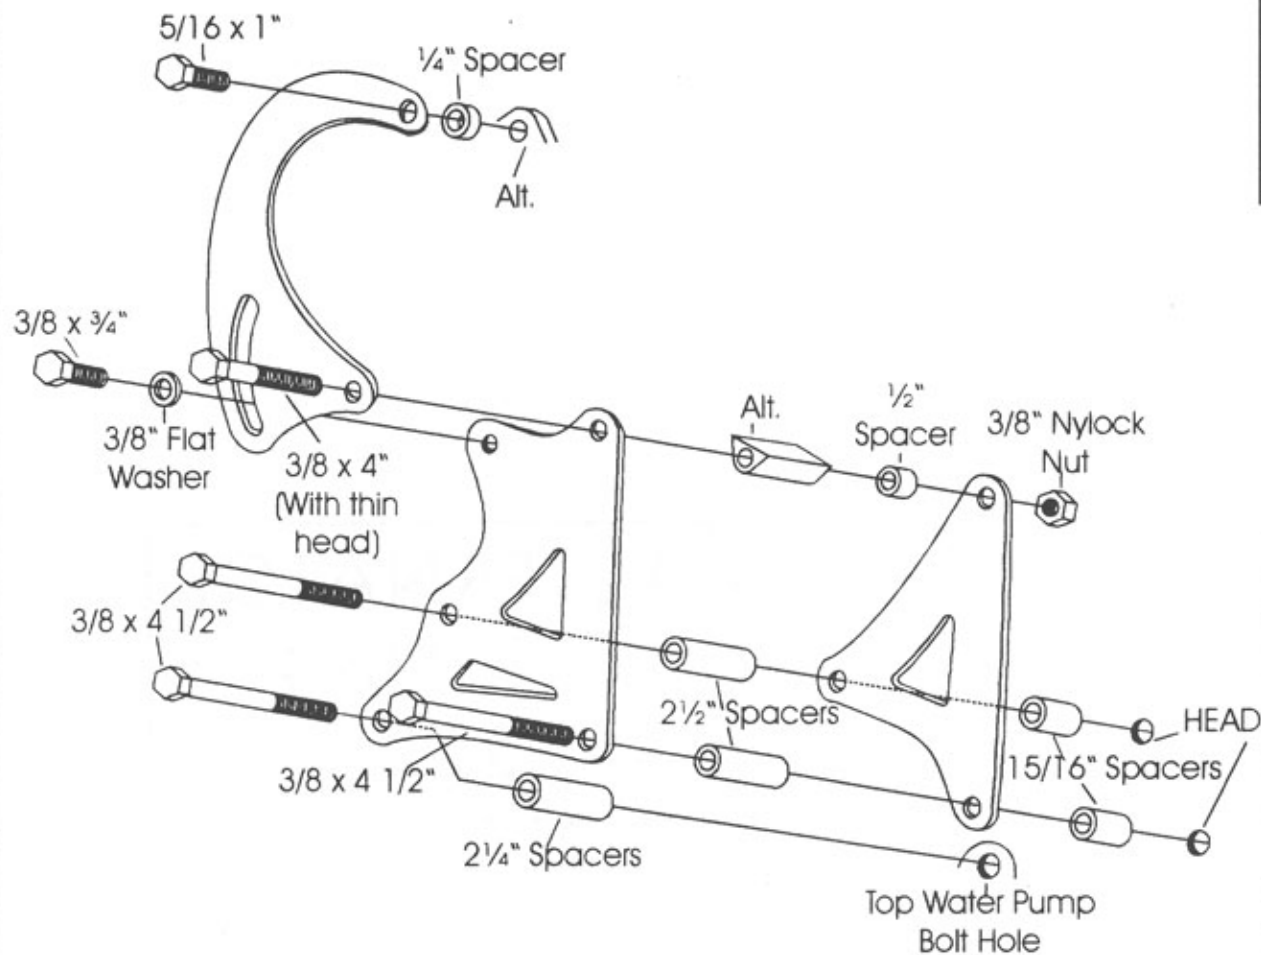

ALTERNATOR MOUNT 220L

Small Block Chevy - Long Water Pump Driver's Side

Diagram 1


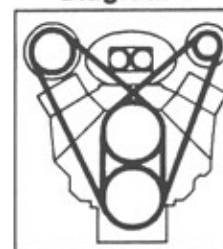


Diagram 2

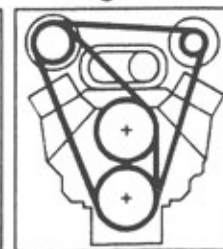

When using both A.C. and Alt. Brackets, belts can be run either of two ways - as shown. They will require the use of 2 groove crank and water pump pulleys. Routing the belts as shown in Diagram 2 - will allow clearance for small blowers and extra room for T.P.I. air cleaners. The long belt will be approximately 71-72."

We use a belt length of 55 1/2 to 58" with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.

As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.