## ALTERNATOR MOUNT 234L


Small Block Chevy - Long Water Pump Driver's Side

**Bolt** 

We use a belt length of 56 - 57 " with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.

As with any mount system, assemble all of the brackets to engine BEFORE TIGHTENING THE BOLTS.



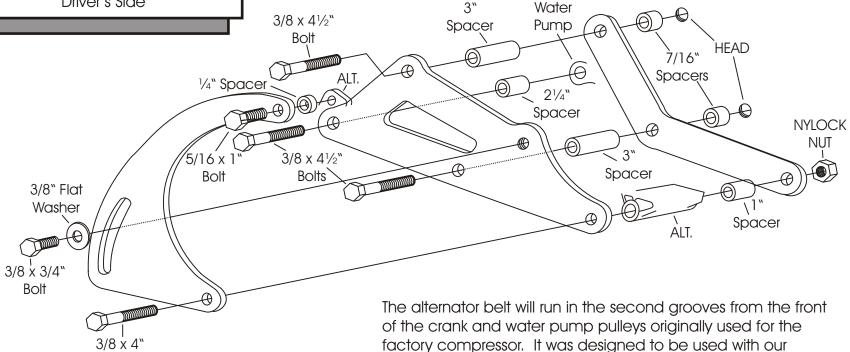

It can be used with single groove crank and water pump pulleys by using a double groove alternator pulley and running the belt in the outer groove.

Passenger Side Compressor Mount.

As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.