




www.vintageair.com

Packing List: Hardware Kit (191046) 223 Ford Compressor & Alternator Bracket

No.	Qty.	Part No.	Description
1.	5	18361-VUB	Bolt, 3/8-16 x 1 1/2", Hex
2.	4	18029-VUB	Washer, 3/8", Flat
3.	5	18155-VUB	Nut, 3/8-16, Nyloc
4.	1	18362-VUB	Bolt, 3/8-16 x 1 3/4", Hex
5.	1	18368-VUB	Bolt, 3/8-16 x 3", Hex
6.	1	18369-BHA	Bolt, 3/8-16 x 3 1/2", Hex
7.	1	18358-VUB	Bolt, 3/8-16 x 3/4", Hex
8.	1	18605-VUB	Bolt, 5/16-18 x 3/4", Hex
9.	2	18425-VUB	Washer, 7/16", Flat
10.	2	18424-VUB	Bolt, 7/16-14 x 1 1/4", Hex
11.	1	18611-VUB	Washer, 5/16", Flat
12.	1	183172	Washer, 9/16", Flat
13.	1	131137	Spacer

Checked By: _____
Packed By: _____
Date: _____

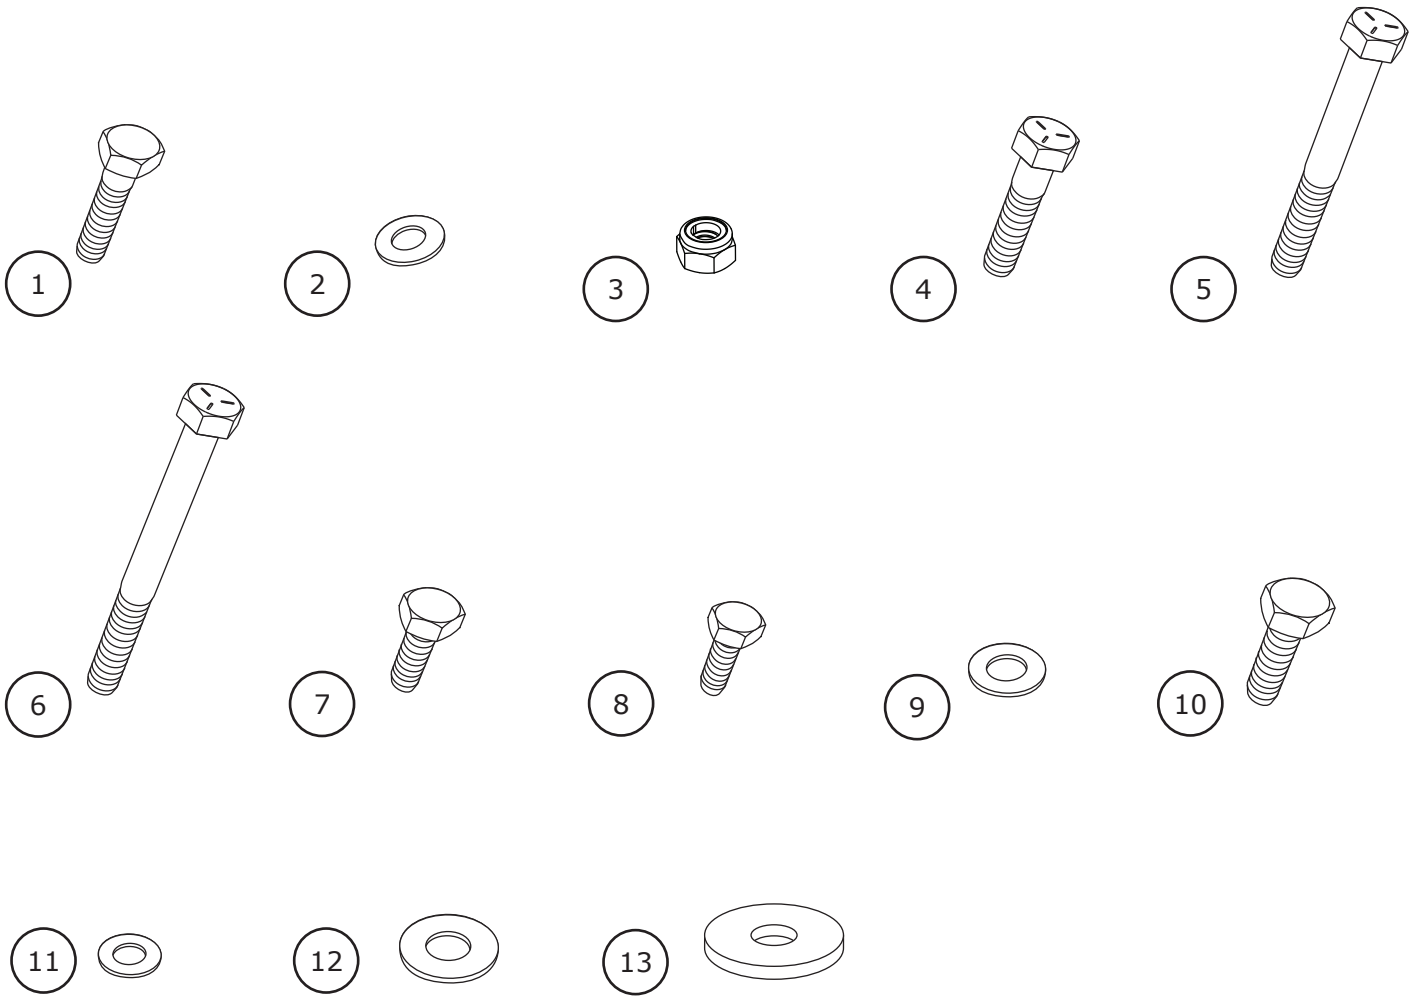

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**