




www.vintageair.com

Packing List: Hardware Kit (191047) 223 Ford Power Steering Add-On

No.	Qty.	Part No.	Description	
1.	1	18359-VUB	Bolt, 3/8-16 x 1", Hex	_____
2.	1	18029-VUB	Washer, 3/8", Flat	_____
3.	1	18155-VUB	Nut, 3/8-16, Nyloc	_____
4.	1	18371-DSR	Bolt, 3/8-16 x 3 3/4", Hex	_____
5.	1	186018-NSD	Nut, 5/16-18, Nyloc	_____
6.	2	183171	Bolt, 5/16-18 x 3 1/4", Hex	_____

Checked By: _____
Packed By: _____
Date: _____

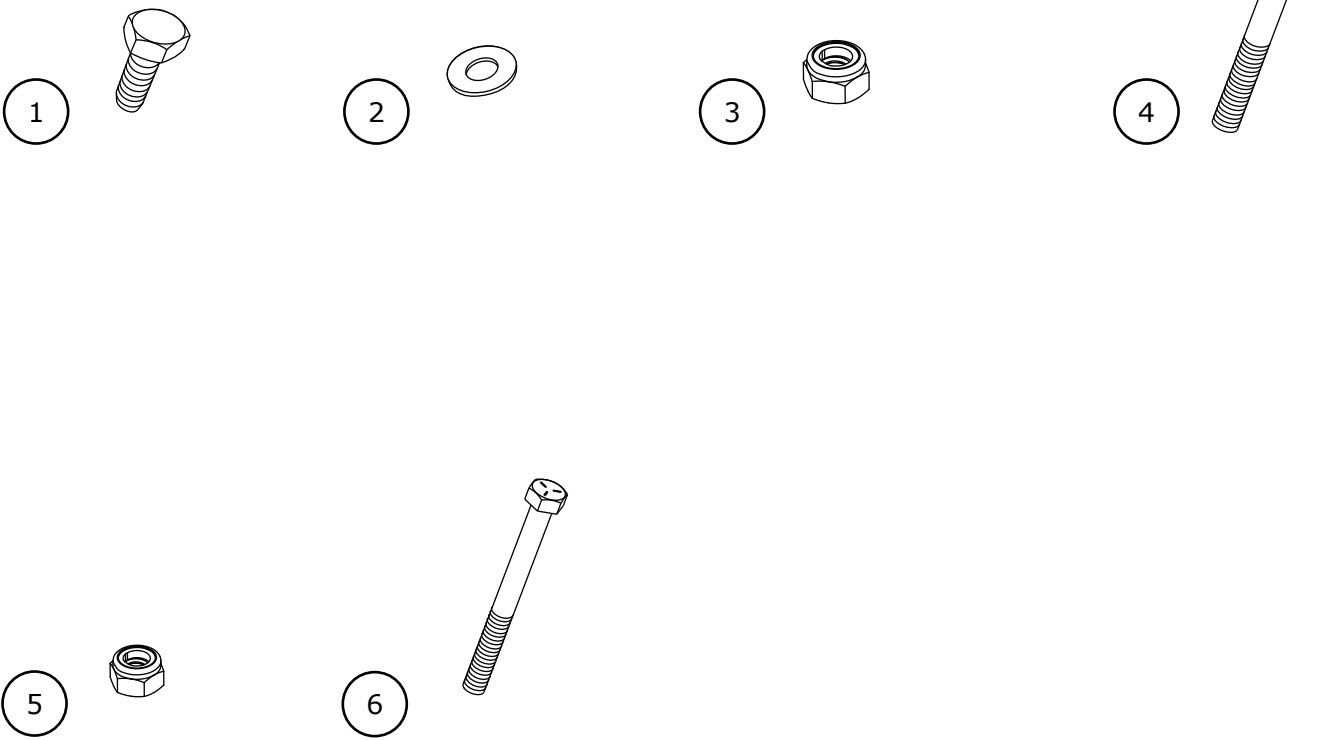

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**