





HOSE ROUTING ILLUSTRATION WITHOUT DRIER (31302-VBD)

90° & STRAIGHT EVAPORATOR FITTINGS INCLUDED IN VINTAGE AIR HOSE KITS.

**IMPORTANT NOTICE
PLEASE READ**

THIS HOSE KIT CONTAINS BEADLOCK FITTINGS, WHICH MUST BE CRIMPED WITH THE APPROPRIATE BEADLOCK CRIMPING TOOL. IF YOUR HOSE KIT IS NOT A 31302-VBD, REFER TO THE INSTRUCTIONS INCLUDED WITH YOUR PARTICULAR HOSE KIT FOR CRIMPING.

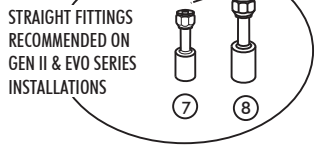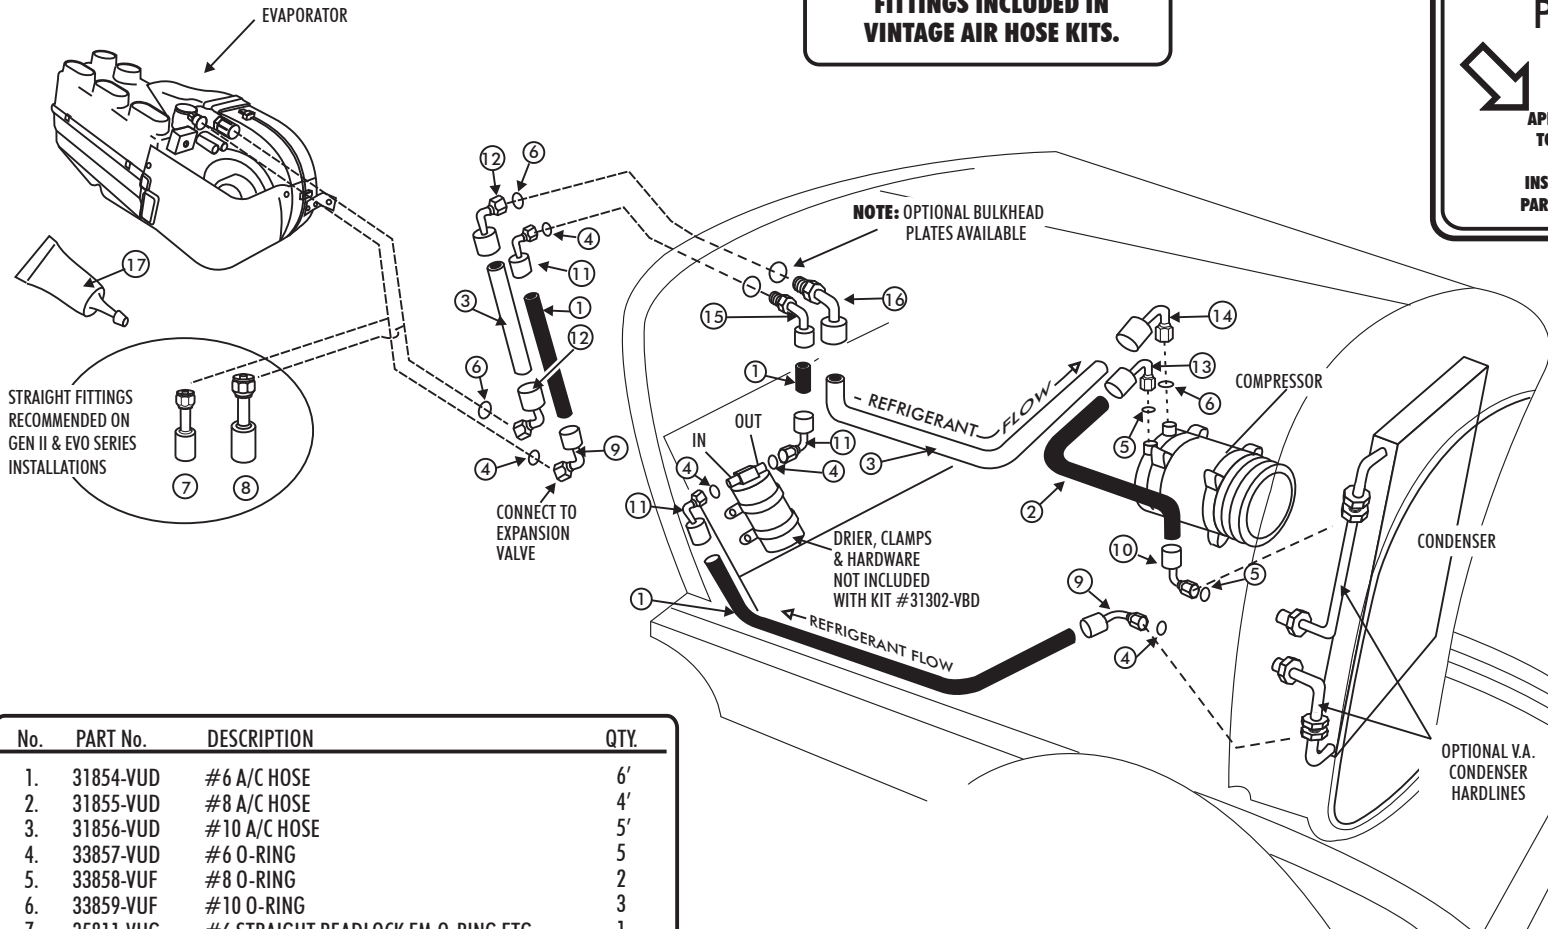

No.	PART No.	DESCRIPTION	QTY.
1.	31854-VUD	#6 A/C HOSE	6'
2.	31855-VUD	#8 A/C HOSE	4'
3.	31856-VUD	#10 A/C HOSE	5'
4.	33857-VUD	#6 O-RING	5
5.	33858-VUF	#8 O-RING	2
6.	33859-VUF	#10 O-RING	3
7.	35811-VUG	#6 STRAIGHT BEADLOCK FM O-RING FTG	1
8.	35813-VUG	#10 STRAIGHT BEADLOCK FM O-RING FTG	1
9.	35821-VUG	#6 BEADLOCK 45° FM O-RING FTG	2
10.	35822-VUG	#8 BEADLOCK 45° FM O-RING FTG	1
11.	35831-VUG	#6 BEADLOCK 90° FM O-RING FTG	3
12.	35833-VUG	#10 BEADLOCK 90° FM O-RING FTG	2
13.	35842-VUG	#8 BEADLOCK 135° FM O-RING FTG	1
14.	35843-VUG	#10 BEADLOCK 135° FM O-RING FTG	1
15.	35881-VUG	#6 BEADLOCK BULKHEAD 90° M O-RING FTG	1
16.	35883-VUG	#10 BEADLOCK BULKHEAD 90° M O-RING FTG	1
17.	41117-VUP	REFRIGERANT OIL	1

THIS HOSE KIT CONTAINS BEADLOCK STYLE FITTINGS. FITTINGS **MUST** BE CRIMPED WITH AN AUTOMOTIVE AIR CONDITIONING BEADLOCK HOSE CRIMPING TOOL. CRIMPING THIS HOSE WITH ANY OTHER CRIMPING TOOL WILL DAMAGE FITTINGS AND HOSES, AND WILL VOID WARRANTY.

BEADLOCK CRIMPING TOOL

BEADLOCK FITTING