





HOSE KIT without DRIER (31703-VBD)

IMPORTANT NOTICE PLEASE READ

THIS HOSE KIT CONTAINS BEADLOCK FITTINGS, WHICH MUST BE CRIMPED WITH THE APPROPRIATE BEADLOCK CRIMPING TOOL. IF YOUR HOSE KIT IS NOT A 31703-VBD, REFER TO THE INSTRUCTIONS INCLUDED WITH YOUR PARTICULAR HOSE KIT FOR CRIMPING.

90° & STRAIGHT EVAPORATOR FITTINGS INCLUDED IN VINTAGE AIR HOSE KITS.

NOTE: OPTIONAL BULKHEAD PLATES AVAILABLE

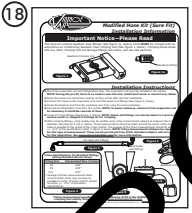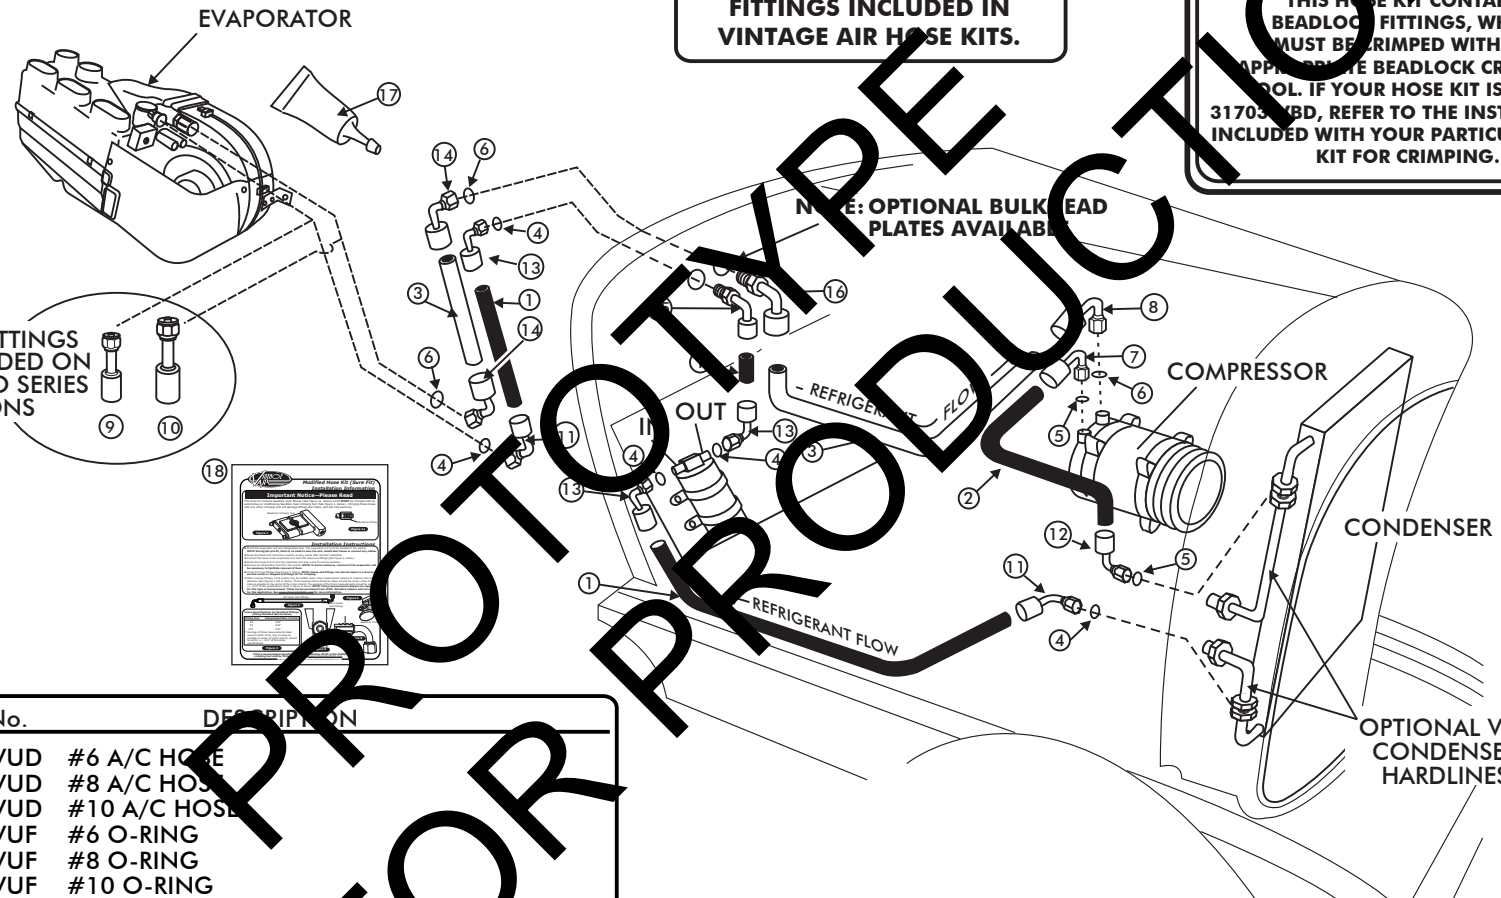

No.	QTY.	PART No.	DESCRIPTION
1.	6'	31854-VUD	#6 A/C HOSE
2.	4'	31855-VUD	#8 A/C HOSE
3.	5'	31856-VUD	#10 A/C HOSE
4.	5	33857-VUF	#6 O-RING
5.	2	33858-VUF	#8 O-RING
6.	3	33859-VUF	#10 O-RING
7.	1	35542-VUG	#8 BL-FTG 135° FM O-RING w/ 134 PORT
8.	1	35543-VUG	#10 BL-FTG 135° FM O-RING w/ 134 PORT
9.	1	35811-VUG	#6 STRAIGHT BEADLOCK O-RING FTG
10.	1	35813-VUG	#10 STRAIGHT BEADLOCK O-RING FTG
11.	2	35821-VUG	#6 BEADLOCK 45° FM O-RING FTG
12.	1	35822-VUG	#8 BEADLOCK 45° FM O-RING FTG
13.	3	35831-VUG	#6 BEADLOCK 90° FM O-RING FTG
14.	2	35833-VUG	#10 BEADLOCK 90° FM O-RING FTG
15.	1	35881-VUG	#6 BEADLOCK BULKHEAD 90° M O-RING FTG
16.	1	35883-VUG	#10 BEADLOCK BULKHEAD 90° M O-RING FTG
17.	1	41117-VUP	REFRIGERANT OIL TUBE
18.	1	900002	INSTRUCTION, MODIFIED HOSE KIT

