




www.vintageair.com


14-Fitting Universal Reduced Barrier without Drier Beadlock Hose Kit (318030)

Important Notice: Please Read!

This hose kit contains beadlock fittings, which must be crimped with the appropriate beadlock crimping tool. If your hose kit is not a 318030, refer to the instructions included with your particular hose kit for crimping.

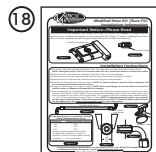


NOTE: 90° & straight evaporator fittings are included in Vintage Air hose kits (Straight fittings are recommended on Gen II series installations).

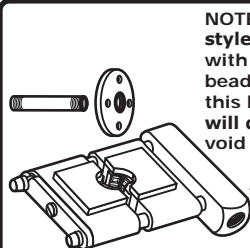

NOTE: This hose kit contains beadlock style fittings. Fittings must be crimped with an automotive air conditioning beadlock hose crimping tool. Crimping this hose with any other crimping tool will damage fittings and hoses, and may void warranty.

Beadlock Crimping Tool

Beadlock Fitting

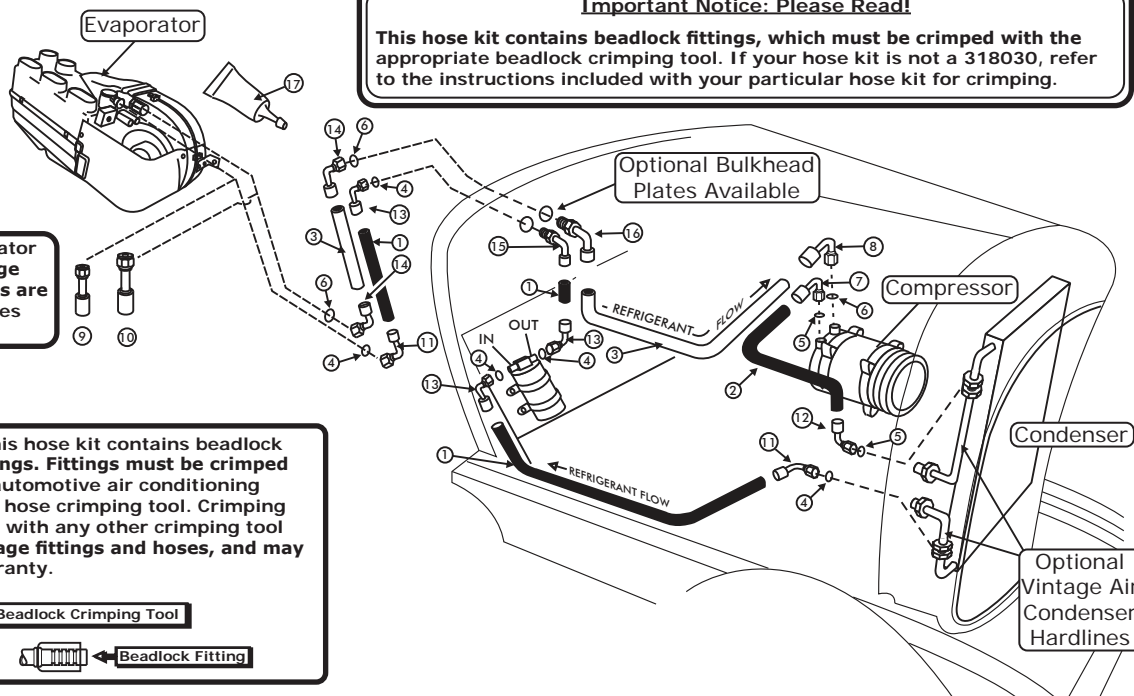

Packing List:

No.	Qty.	Part No.	Description	
1.	72"	318540	A/C Hose, #6, Reduced Barrier	
2.	48"	318550	A/C Hose, #8, Reduced Barrier	
3.	60"	318560	A/C Hose, #10, Reduced Barrier	
4.	5	33857-VUF	O-ring, #6	
5.	2	33858-VUF	O-ring, #8	
6.	3	33859-VUF	O-ring, #10	
7.	1	355420	Beadlock Fitting, #8 Female, 135° with Service Port, RB	
8.	1	355430	Beadlock Fitting, #10 Female, 135° with Service Port, RB	
9.	1	358110	Beadlock Fitting, #6 Female, Straight, RB	
10.	1	358130	Beadlock Fitting, #10 Female, Straight, RB	
11.	2	358210	Beadlock Fitting, #6 Female, 45°, RB	
12.	1	358220	Beadlock Fitting, #8 Female, 45°, RB	
13.	3	358310	Beadlock Fitting, #6 Female, 90°, RB	
14.	2	358330	Beadlock Fitting, #10 Female, 90°, RB	
15.	1	358810	Beadlock Fitting, #6 Bulkhead Male, 90°, RB	
16.	1	358830	Beadlock Fitting, #10 Bulkhead Male, 90°, RB	
17.	1	41117-VUP	Refrigerant Oil	
18.	1	900002	Instruction, Modified Hose Kit	

Checked By: _____
Packed By: _____
Date: _____

18865 Goll St. San Antonio, TX 78266
Phone: 800-862-6658
Sales: sales@vintageair.com
Tech Support: tech@vintageair.com
www.vintageair.com