




4-WAY BULKHEAD INLINE


**34317-VUQ
A/C-HEAT 4-WAY BULKHEAD**

INLINE #6 & #10

APPLY A 1/16" BEAD OF SILICONE SEALER AROUND THE OUTSIDE EDGE OF THE HOLE. INSTALL THE BULKHEAD PLATE AND INSTALL THE BRACKET AND THE NUT.

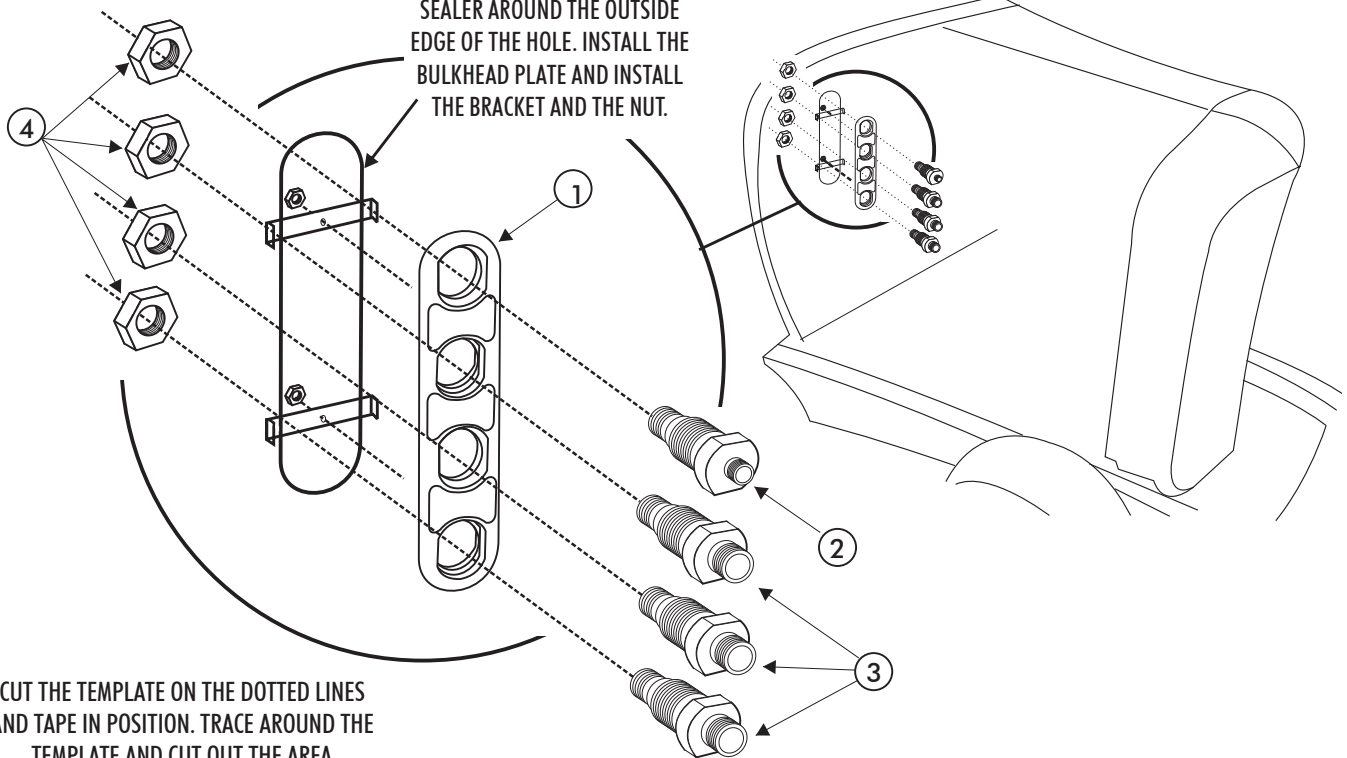

CUT THE TEMPLATE ON THE DOTTED LINES AND TAPE IN POSITION. TRACE AROUND THE TEMPLATE AND CUT OUT THE AREA.

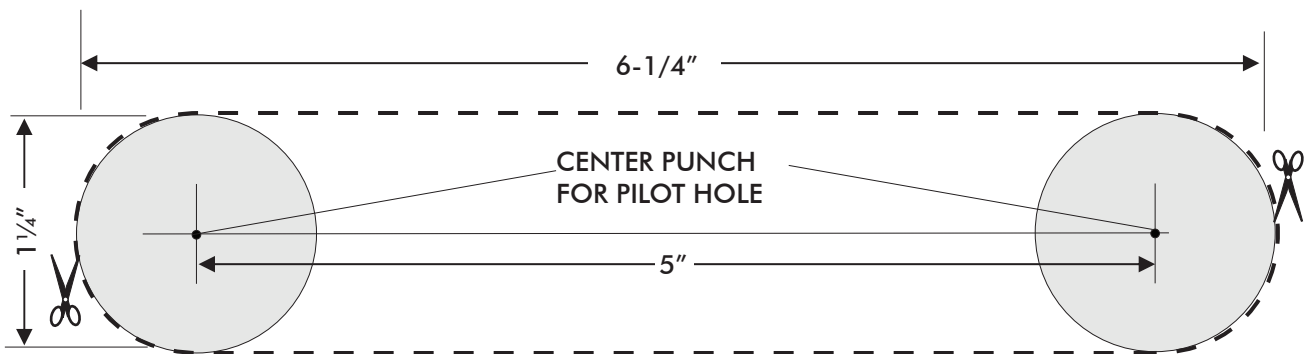

DO NOT EXCEED THE DIMENSIONS GIVEN.

**A/C-HEAT 4-WAY
BULKHEAD INLINE #6 & #10**

34317-VUQ

No.	QTY.	PART NO.	DESCRIPTION	CHECK LIST
1.	1	34003-VUQ	4-WAY BULKHEAD PLATE MACH.	_____
2.	1	35331-VUQ	#6 A/C BULKHEAD FITTING	_____
3.	3	35333-VUQ	#10 A/C BULKHEAD FITTING	_____
4.	4	186078-NMR	#10 BULKHEAD FITTING NUT	_____

CHECKED BY: _____
 PACKED BY: _____
 DATE: _____