





www.vintageair.com

Installation Instructions: 2-Way Inline #10 - #10 Streamline Bulkhead (382000-MBA)

1. Cut out the bulkhead template and locate where you would like to place your bulkhead.
2. Level and tape the bulkhead template into place. Use a small center punch and mark holes.
3. Drill (2) 7/8" holes for the bulkhead fittings. Install the bulkhead with fittings as shown. **NOTE: Fittings may be arranged in any configuration.**

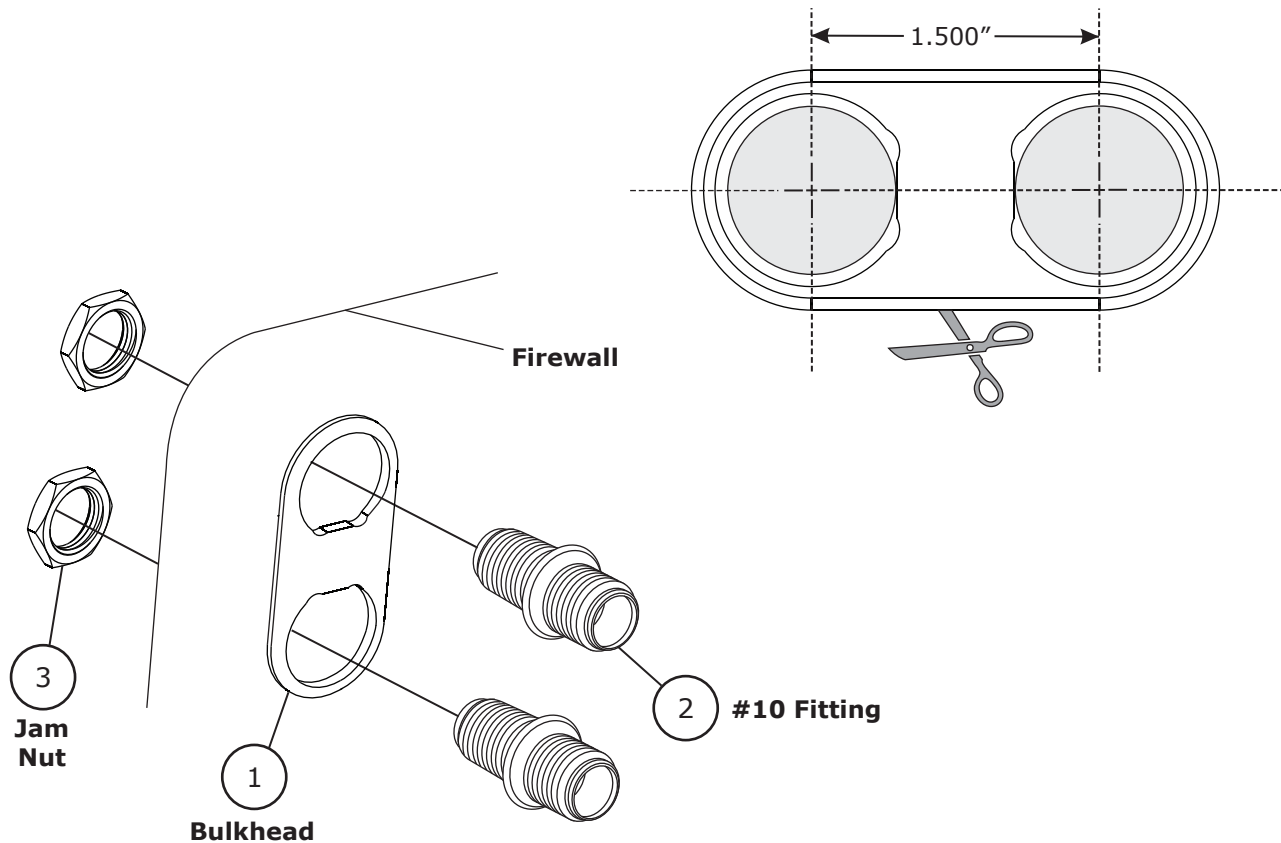

NOTE: Due to printing variances, measure the line below before using this template. If template is scaled properly, the line should measure 6 inches.



Packing List:

No.	Qty.	Part No.	Description	
1.	1	382300-MBQ	Inline Bulkhead Plate, 2-Way	_____
2.	2	334010-VOR	Bulkhead Fitting, #10, Male	_____
3.	2	186079	Jam Nut, 7/8-14	_____

Checked By: _____
Packed By: _____
Date: _____