




www.vintageair.com

Packing List: Modified Hose Kit (511153) 1961-64 Ford F-100

No.	Qty.	Part No.	Description
1.	1	082058	Hose, #6 A/C
2.	1	082055	Hose, #8 A/C Modified
3.	1	082056	Hose, #10 A/C, Compressor/Bulkhead Modified
4.	1	082059	Hose, #10 A/C, Bulkhead/Evaporator
5.	1	35532-VUG	Fitting, #8, 90° with Service Port
6.	1	35543-VUG	Fitting, #10, 135° with Service Port
7.	1	900002	Instructions, Modified Hose Kit
8.	5	21300-VUP	Tie Wrap, 11"
9.	3	31601-VUD	Adel Clamp, #10
10.	2	31602-VUD	Adel Clamp, #6
11.	2	33857-VUF	O-ring, #6
12.	2	33858-VUF	O-ring, #8
13.	4	33859-VUF	O-ring, #10
14.	1	41117-VUP	Refrigerant Oil

Checked By: _____
Packed By: _____
Date: _____

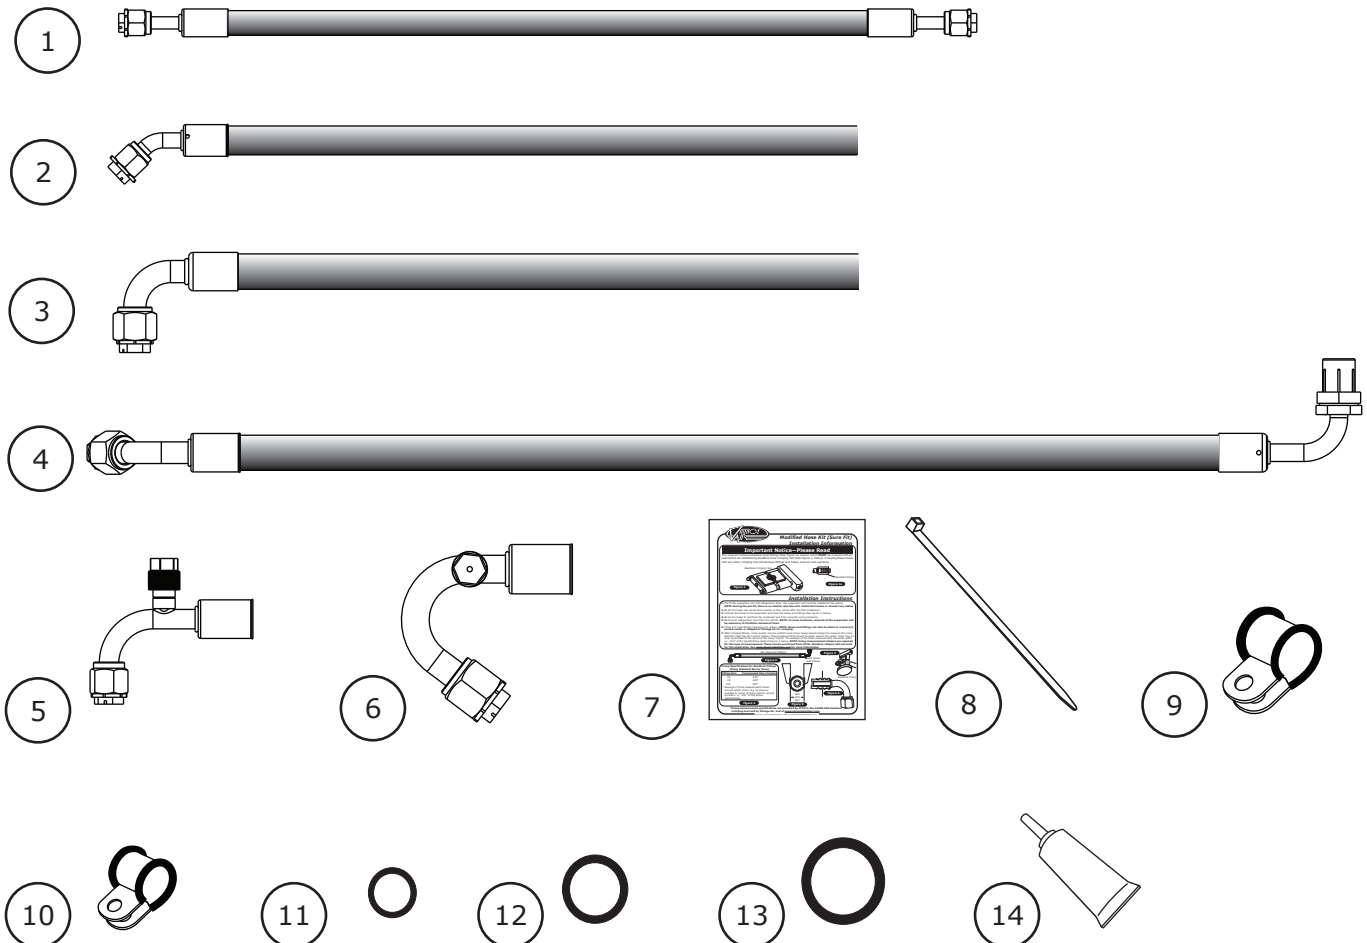

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**