




www.vintageair.com

Packing List: 1967-72 Ford F-100 Standard Hose Kit (511154)

No.	Qty.	Part No.	Description
1.	1	082073	Hose, #6 A/C, Drier/Evaporator
2.	1	082051	Hose, #8 A/C, Condenser/Compressor
3.	1	082072	Hose, #10 A/C, Compressor/Bulkhead
4.	1	082071	Hose, #10 A/C, Bulkhead/Evaporator
5.	4	21300-VUP	Tie Wrap, 11"
6.	1	31601-VUD	Adel Clamp, #10
7.	1	18250-VUB	Screw, 10-32 x 1/2"
8.	1	18251-VUB	Nut with Star Washer, 10-32
9.	2	33857-VUF	O-ring, #6
10.	2	33858-VUF	O-ring, #8
11.	4	33859-VUF	O-ring, #10
12.	1	41117-VUP	Refrigerant Oil

Checked By: _____
Packed By: _____
Date: _____

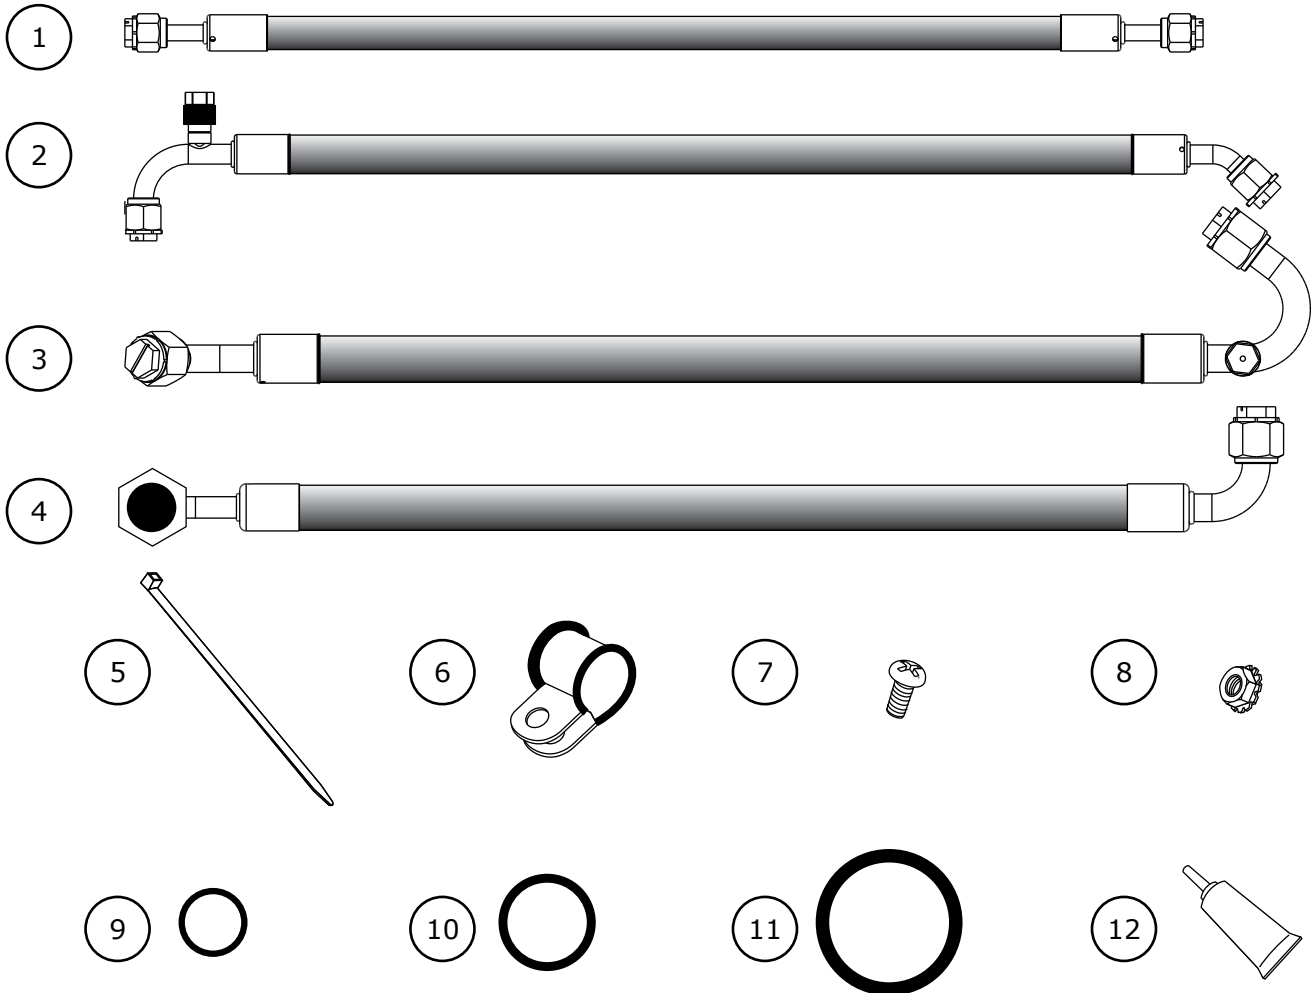

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**