




www.vintageair.com

Packing List: 1967-72 Ford F-100 Modified Hose Kit (511155)

No.	Qty.	Part No.	Description
1.	1	082073	Hose, #6 A/C, Drier/Evaporator, Standard
2.	1	082055	Hose, #8 A/C, Condenser/Compressor, Modified
3.	1	082074	Hose, #10 A/C, Compressor/Bulkhead, Modified
4.	1	082071	Hose, #10 A/C, Bulkhead/Evaporator, Standard
5.	1	35543-VUG	Fitting, #10, 135° with Service Port
6.	1	35532-VUG	Fitting, #8, 90° with Service Port
7.	4	21300-VUP	Tie Wrap, 11"
8.	1	31601-VUD	Adel Clamp, #10
9.	1	18250-VUB	Screw, 10-32 x 1/2"
10.	1	18251-VUB	Nut with Star Washer, 10-32
11.	2	33857-VUF	O-ring, #6
12.	2	33858-VUF	O-ring, #8
13.	4	33859-VUF	O-ring, #10
14.	1	41117-VUP	Refrigerant Oil
15.	1	900002	Instructions, Modified Hose Kit

Checked By: _____
Packed By: _____
Date: _____

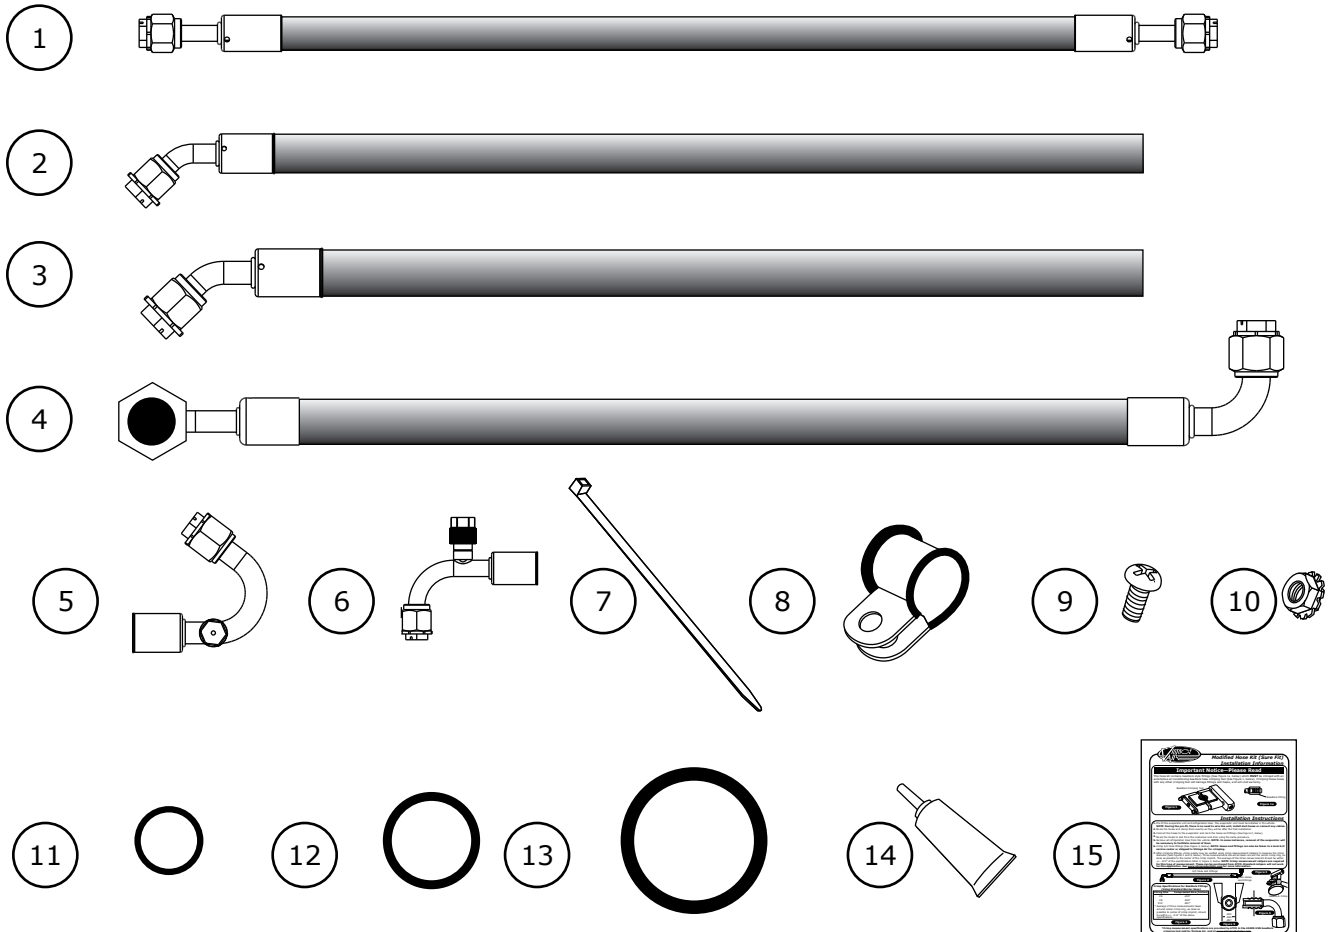

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**