







www.vintageair.com

Packing List: 1980-86 16 Ford F-Series/Bronco Standard Hose Kit (511161)

No.	Qty.	Part No.	Description
1.	1	082114	Hose, #6 A/C, Evaporator/Drier
2.	1	082115	Hose, #8 A/C, Compressor/Condenser
3.	1	082113	Hose, #10 A/C, Evaporator/Compressor
4.	4	21300-VUP	Tie Wrap, 11"
5.	1	31602-VUD	Adel Clamp, 3/4" I.D.
6.	1	18247-VUB	Screw, #10 x 1/2", Sheet Metal
7.	2	33857-VUF	O-ring, #6
8.	2	33858-VUF	O-ring, #8
9.	2	33859-VUF	O-ring, #10
10.	1	41117-VUP	Refrigerant Oil

Checked By: _____
Packed By: _____
Date: _____

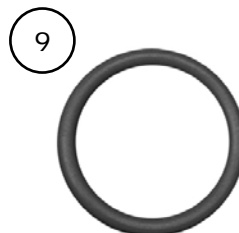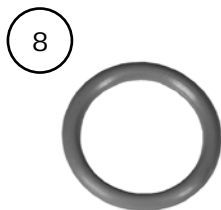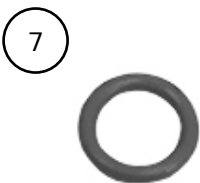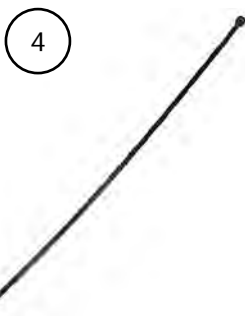

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**