



www.vintageair.com

Packing List: 1980-86 Ford F-Series/Bronco Modified Hose Kit (511162)

No.	Qty.	Part No.	Description
1.	1	082114	Hose, #6 A/C, Evaporator/Drier
2.	1	082119	Hose, #8 A/C, Compressor/Condenser
3.	1	082118	Hose, #10 A/C, Evaporator/Compressor
4.	1	35533-VUG	Fitting, #10, 90° with Service Port
5.	1	35542-VUG	Fitting, #8, 135° with Service Port
6.	4	21300-VUP	Tie Wrap, 11"
7.	1	18247-VUB	Screw, #10 x 1/2", Sheet Metal
8.	1	31602-VUD	Adel Clamp, 3/4" I.D.
9.	2	33857-VUF	O-ring, #6
10.	2	33858-VUF	O-ring, #8
11.	2	33859-VUF	O-ring, #10
12.	1	41117-VUP	Refrigerant Oil
13.	1	900002	Instruction, Modified Hose Kit

Checked By: _____
Packed By: _____
Date: _____

1



2



3




4



5



6

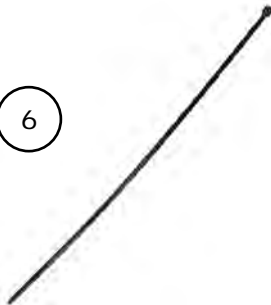

7



8



9



10



11



12



13



**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**