




www.vintageair.com

Packing List: 1969 Chevrolet Camaro Modified Hose Kit (521193)

No.	Qty.	Part No.	Description
1.	1	090177	Hose, #6 A/C, Drier/Evaporator
2.	1	090182	Hose, #8 A/C, Condenser/Compressor
3.	1	090183	Hose, #10 A/C, Compressor/Evaporator
4.	2	33857-VUF	O-ring, #6
5.	2	33858-VUF	O-ring, #8
6.	2	33859-VUF	O-ring, #10
7.	1	41117-VUP	Refrigerant Oil
8.	6	21301-VUP	Tie Wrap, 4"
9.	6	21300-VUP	Tie Wrap, 11"
10.	2	31601-VUD	Adel Clamp, #10
11.	2	18250-VUB	Screw, 10-32 x 12", Pan Head
12.	2	18251-VUB	Nut with Star Washer, 10-32
13.	1	35821-VUG	Fitting, #6, 45°
14.	1	35532-VUG	Fitting, #8, 90° with Service Port
15.	1	35543-VUG	Fitting, #10, 135° with Service Port
16.	1	900002	Instruction, Modified Hose Kit

Checked By: _____
Packed By: _____
Date: _____

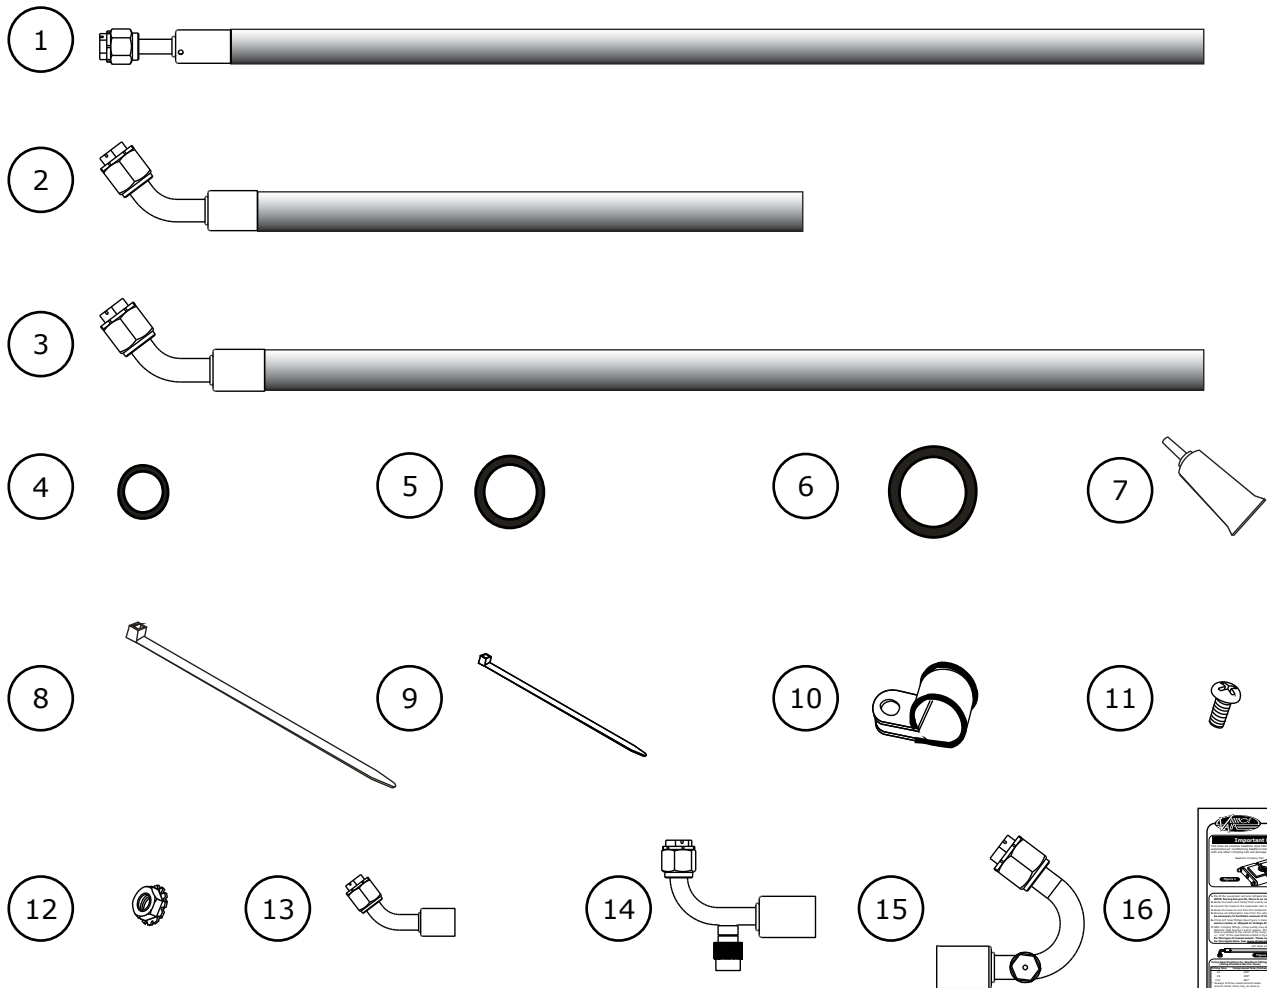

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**