




www.vintageair.com

Packing List: 1982-88 Oldsmobile Cutlass Reduced Barrier Standard Hose Kit (524463)

No.	Qty.	Part No.	Description
1.	1	092075	Hose, #6 A/C, Drier/Evaporator, Reduced Barrier
2.	1	092129	Hose, #8 A/C, Condenser/Compressor, Reduced Barrier
3.	1	092130	Hose, #10 A/C, Compressor/Evaporator, Reduced Barrier
4.	2	33857-VUF	O-ring, #6
5.	2	33858-VUF	O-ring, #8
6.	2	33859-VUF	O-ring, #10
7.	1	41117-VUP	Refrigerant Oil
8.	4	21300-VUP	Tie Wrap, 11"
9.	4	21301-VUP	Tie Wrap, 4"
10.	1	18250-VUB	Screw, 10-32 x 1/2", Pan Head
11.	1	18251-VUB	Nut with Star Washer, 10-32
12.	1	31602-VUD	Adel Clamp, 3/4" I.D.

Checked By: _____
Packed By: _____
Date: _____

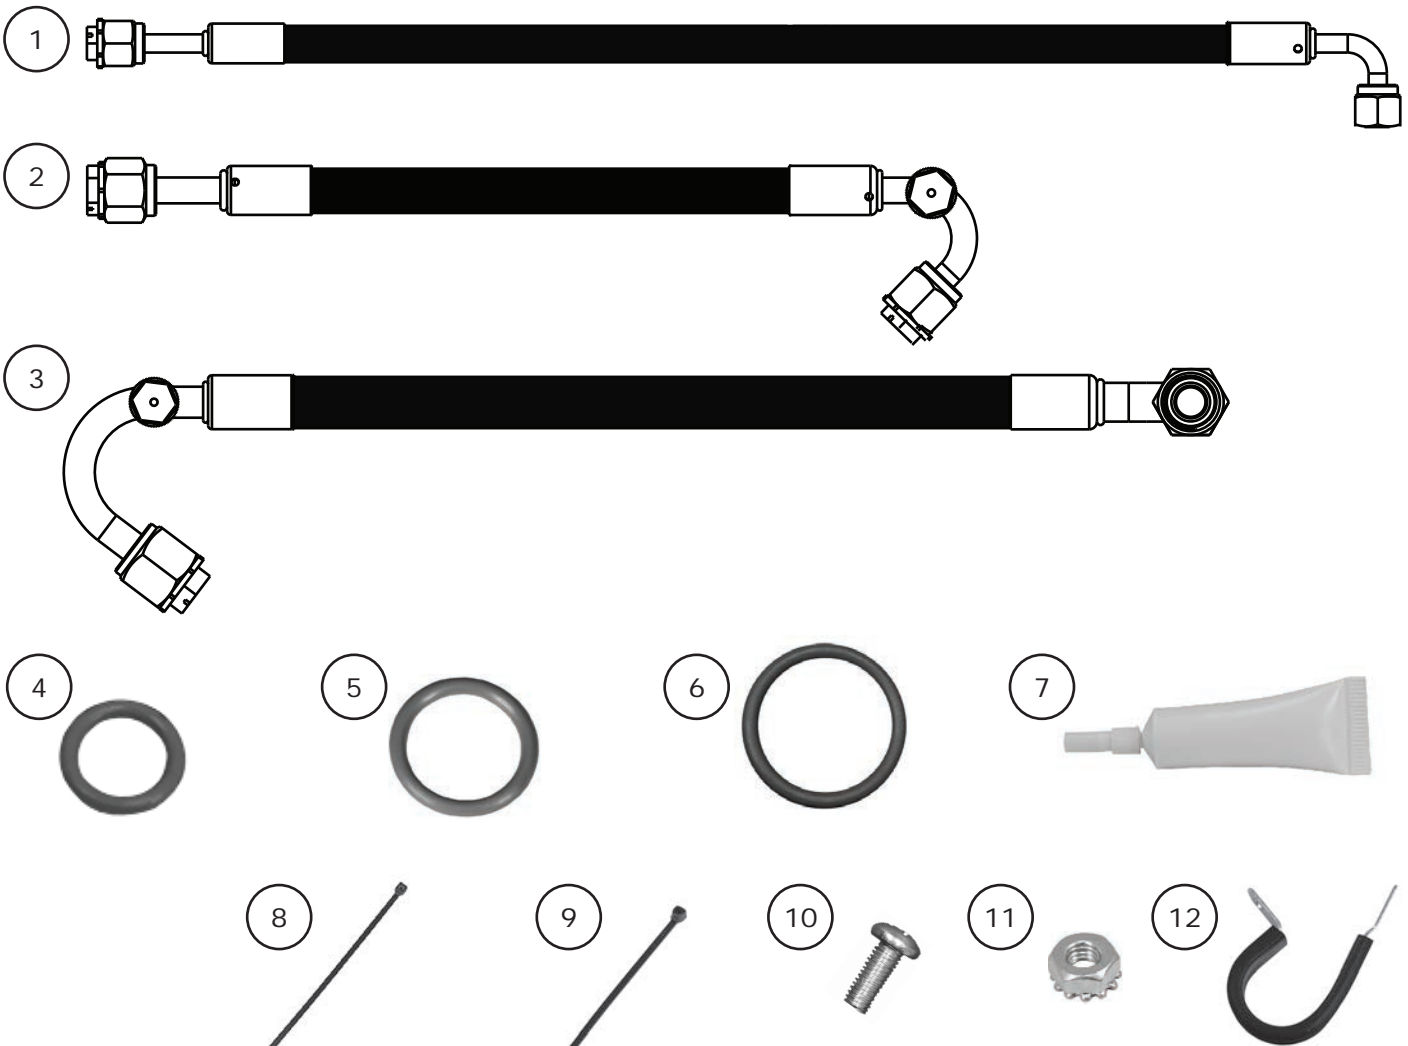

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**