




www.vintageair.com

Packing List: 1968 Chevrolet Chevelle Passenger-Side Reduced Barrier Standard Hose Kit (524467)

No.	Qty.	Part No.	Description
1.	1	092126	Hose, #6 A/C, Drier/Evaporator, RB
2.	1	092115	Hose, #8 A/C, Compressor/Condenser, RB
3.	1	092116	Hose, #10 A/C, Evaporator/Compressor, RB
4.	2	33857-VUF	O-ring, #6
5.	2	33858-VUF	O-ring, #8
6.	2	33859-VUF	O-ring, #10
7.	1	41117-VUP	Refrigerant Oil
8.	5	21300-VUP	Tie Wrap, 11"
9.	1	640678-FCR	Cover, Inner Fender

Checked By: _____
Packed By: _____
Date: _____

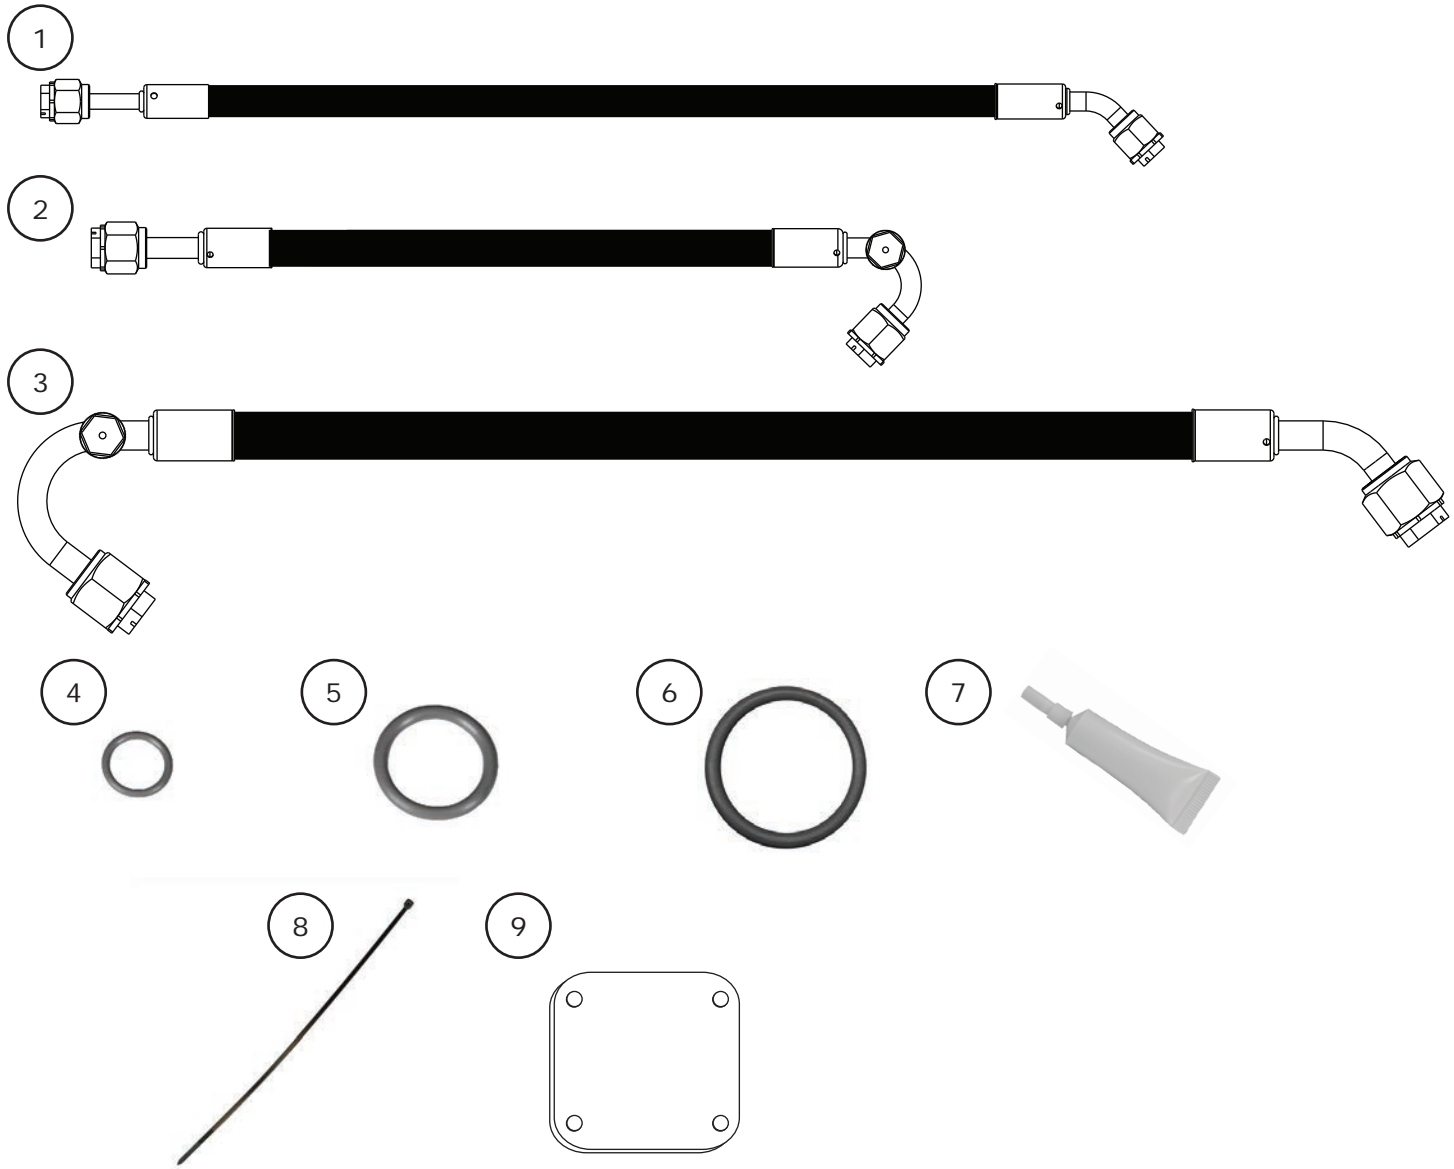

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**