






www.vintageair.com

Packing List: 1957 Chevrolet Full-Size Standard Hose Kit (525701)

No.	Qty.	Part No.	Description
1.	1	091622	Hose, #6 A/C, Drier/Evaporator
2.	1	091623	Hose, #8 A/C, Condenser/Compressor
3.	1	091624	Hose, #10 A/C, Compressor/Evaporator
4.	6	21300-VUP	Tie Wrap, 11"
5.	8	21301-VUP	Tie Wrap, 4"
6.	1	31602-VUD	Adel Clamp, #6
7.	2	33857-VUF	O-ring, #6
8.	2	33858-VUF	O-ring, #8
9.	2	33859-VUF	O-ring, #10
10.	1	41117-VUP	Refrigerant Oil

Checked By: _____
Packed By: _____
Date: _____

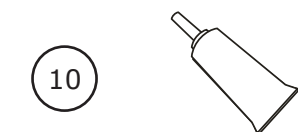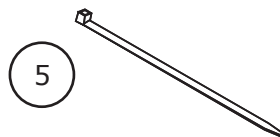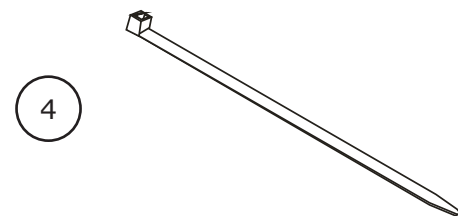

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**