





www.vintageair.com

# Packing List: Standard Hose Kit (526690) 1970-81 Pontiac Firebird

No.	Qty.	Part No.	Description
1.	1	096160	Hose, #6 A/C
2.	1	096161	Hose, #8 A/C
3.	1	096076	Hose, #10 A/C
4.	2	33857-VUF	O-ring, #6
5.	2	33858-VUF	O-ring, #8
6.	2	33859-VUF	O-ring, #10
7.	1	41117-VUP	Refrigerant Oil
8.	5	21300-VUP	Tie Wrap, 11"

Checked By: \_\_\_\_\_  
 Packed By: \_\_\_\_\_  
 Date: \_\_\_\_\_

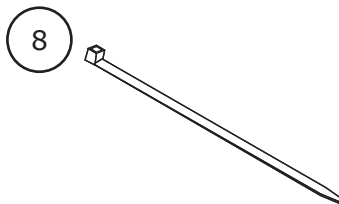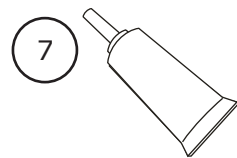

**NOTE: Images may not depict actual parts and quantities.  
 Refer to packing list for actual parts and quantities.**