




**EXTENDED LENGTH HOSE KIT without DRIER (547001)**

**IMPORTANT NOTICE PLEASE READ**

THIS HOSE KIT CONTAINS BEADLOCK FITTINGS, WHICH MUST BE CRIMPED WITH THE APPROPRIATE BEADLOCK CRIMPING TOOL. IF YOUR HOSE KIT IS NOT A 547001, REFER TO THE INSTRUCTIONS INCLUDED WITH YOUR PARTICULAR HOSE KIT FOR CRIMPING.

**90° & STRAIGHT EVAPORATOR FITTINGS INCLUDED IN VINTAGE AIR HOSE KITS.**

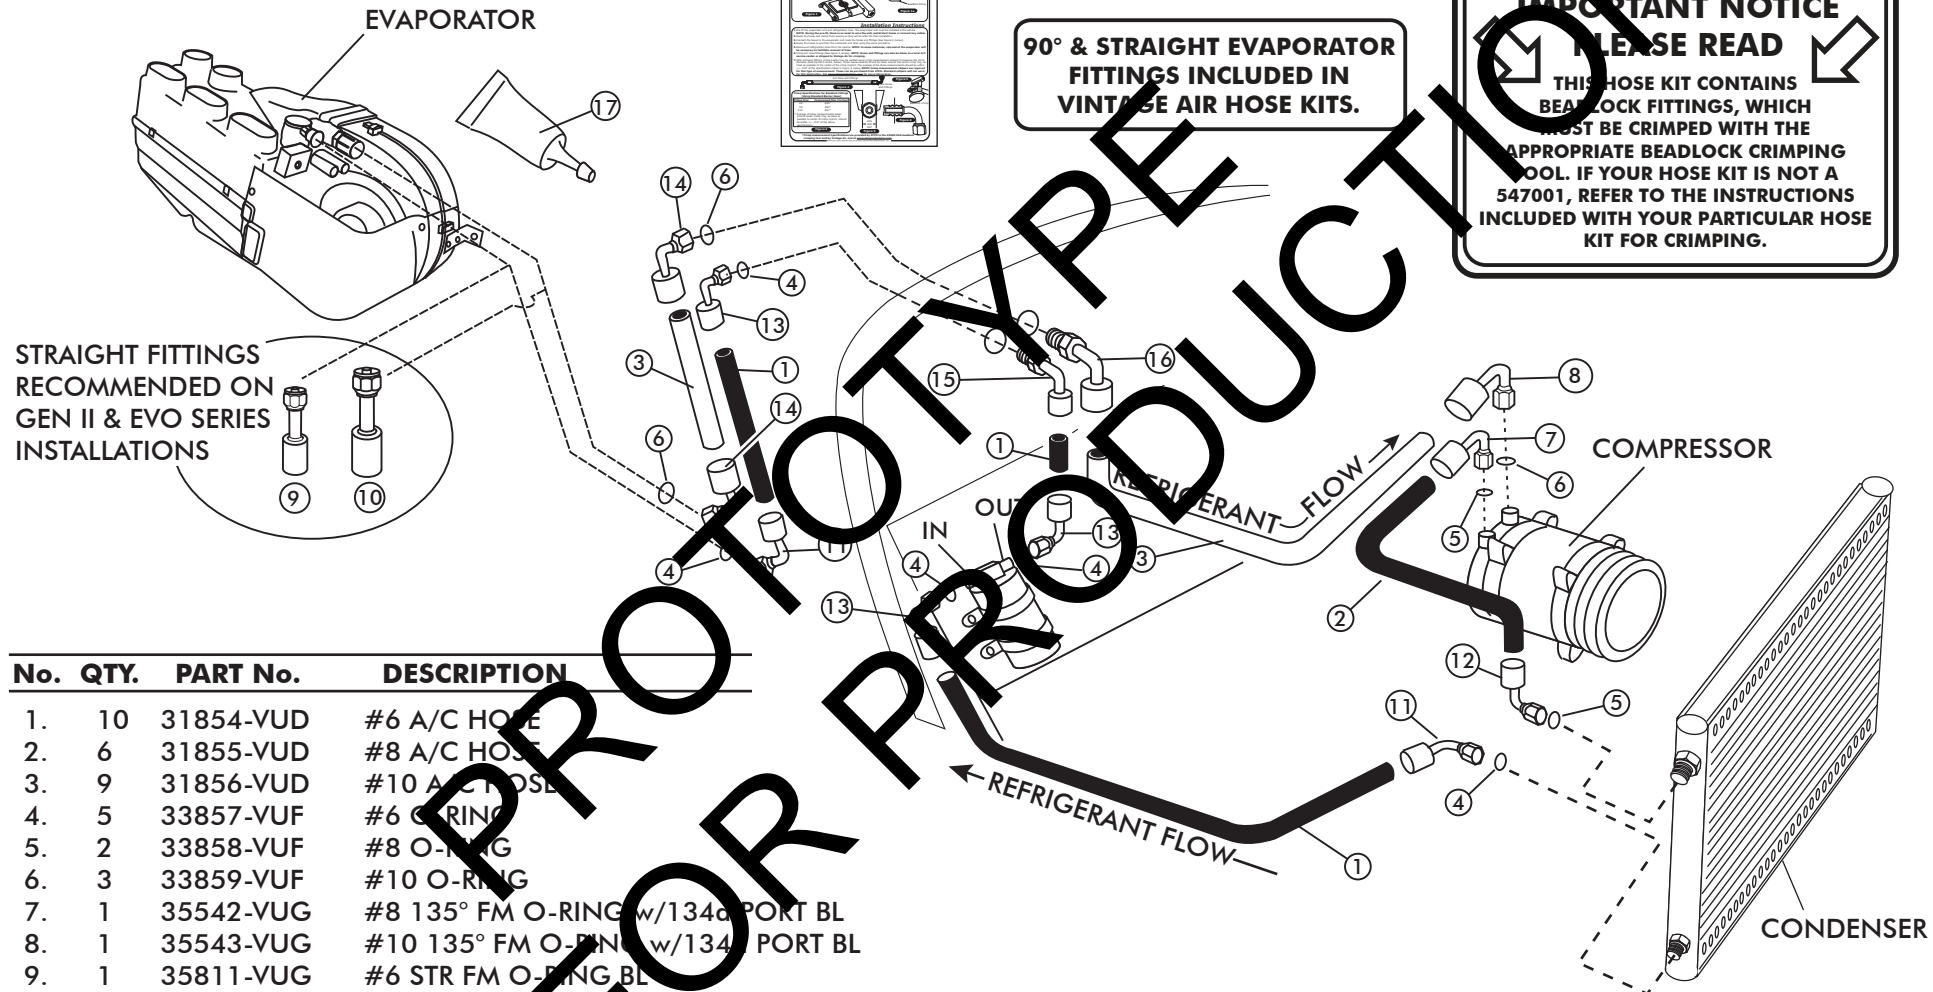

No.	QTY.	PART No.	DESCRIPTION
1.	10	31854-VUD	#6 A/C HOSE
2.	6	31855-VUD	#8 A/C HOSE
3.	9	31856-VUD	#10 A/C HOSE
4.	5	33857-VUF	#6 CRIMP
5.	2	33858-VUF	#8 O-RING
6.	3	33859-VUF	#10 O-RING
7.	1	35542-VUG	#8 135° FM O-RING w/134a PORT BL
8.	1	35543-VUG	#10 135° FM O-RING w/134a PORT BL
9.	1	35811-VUG	#6 STR FM O-RING BL
10.	1	35813-VUG	#10 STR FM O-RING BL
11.	2	35821-VUG	#6 45° FM O-RING BL
12.	1	35822-VUG	#8 45° FM O-RING BL
13.	3	35831-VUG	#6 90° FM O-RING BL
14.	2	35833-VUG	#10 90° FM O-RING BL
15.	1	35881-VUG	#6 BULKHEAD 90° BL M O-RING
16.	1	35883-VUG	#10 BULKHEAD 90° BL M O-RING
17.	1	41117-VUF	REFRIGERANT OIL TUBE
18.	1	900002	INSTRUCTION, MODIFIED HOSE KIT

THIS HOSE KIT CONTAINS BEADLOCK STYLE FITTINGS. FITTINGS **MUST** BE CRIMPED WITH AN AUTOMOTIVE AIR CONDITIONING BEADLOCK HOSE CRIMPING TOOL. CRIMPING THIS HOSE WITH ANY OTHER CRIMPING TOOL WILL DAMAGE FITTINGS AND HOSES, AND WILL VOID WARRANTY.

**BEADLOCK CRIMPING TOOL**

**BEADLOCK FITTING**