




10-Fitting Hose Kit *without* Drier (547003)

IMPORTANT NOTICE: PLEASE READ!
 This hose kit contains beadlock fittings, which must be crimped with the appropriate beadlock crimping tool. If your hose kit is not a 547003, refer to the instructions included with your particular hose kit for crimping.

NOTE: 90° & Straight Evaporator Fittings are Included in Vintage Air Hose Kits (Straight Fittings are Recommended on Gen II Series Installations).

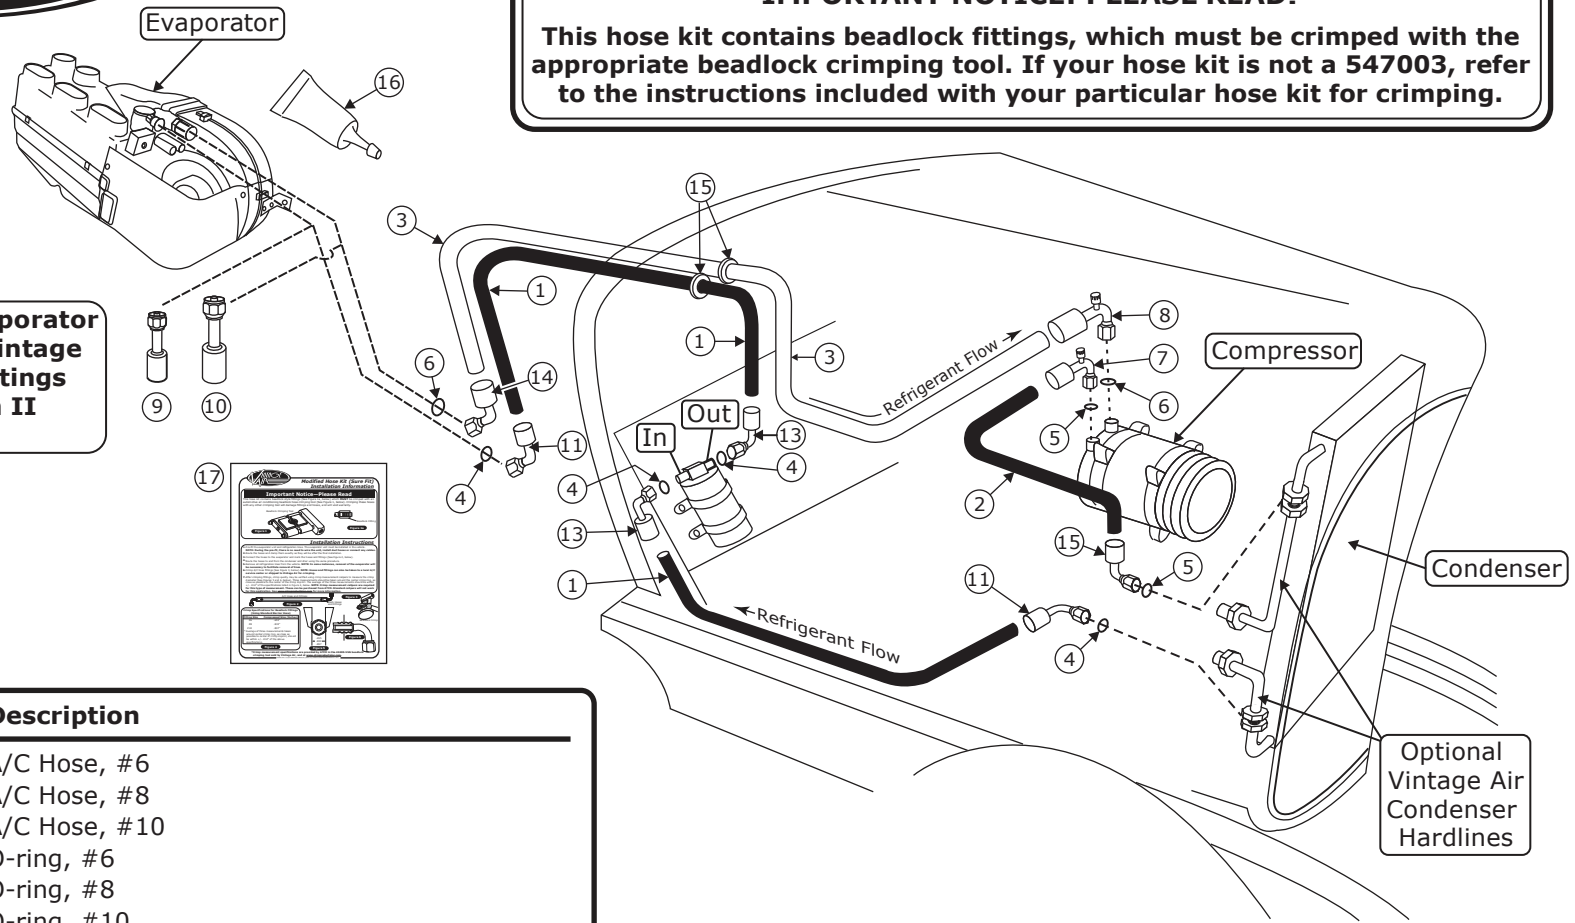

No.	Qty.	Part No.	Description
1.	6'	31854-VUD	A/C Hose, #6
2.	4'	31855-VUD	A/C Hose, #8
3.	5'	31856-VUD	A/C Hose, #10
4.	5	33857-VUF	O-ring, #6
5.	2	33858-VUF	O-ring, #8
6.	3	33859-VUF	O-ring, #10
7.	1	35532-VUG	Beadlock Fitting, #8 Female, 90° with 134a Port
8.	1	35533-VUG	Beadlock Fitting, #10 Female, 90° with 134a Port
9.	1	35811-VUG	Beadlock Fitting, #6 Female, Straight
10.	1	35813-VUG	Beadlock Fitting, #10 Female, Straight
11.	2	35821-VUG	Beadlock Fitting, #6 Female, 45°
12.	1	35822-VUG	Beadlock Fitting, #8 Female, 45°
13.	2	35831-VUG	Beadlock Fitting, #6 Female, 90°
14.	1	35833-VUG	Beadlock Fitting, #10 Female, 90°
15.	4	33137-VUI	Grommet, Large
16.	1	41117-VUP	Refrigerant Oil
17.	1	900002	Instruction, Modified Hose Kit

NOTE: This hose kit contains beadlock style fittings. Fittings must be crimped with an automotive air conditioning beadlock hose crimping tool. Crimping this hose with any other crimping tool will damage fittings and hoses, and may void warranty

← **Beadlock Crimping Tool**

← **Beadlock Fitting**