


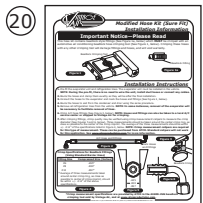

10-Fitting Hose Kit *with* Drier (547004)


IMPORTANT NOTICE: PLEASE READ!

This hose kit contains beadlock fittings, which must be crimped with the appropriate beadlock crimping tool. If your hose kit is not a 547004, refer to the instructions included with your particular hose kit for crimping.



Evaporator

NOTE: 90° & Straight Evaporator Fittings are Included in Vintage Air Hose Kits (Straight Fittings are Recommended on Gen II Series Installations).

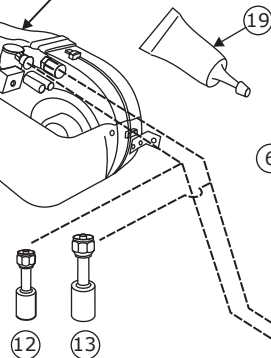


Compressor

Condenser

Optional
Vintage Air
Condenser
Hardlines

No.	Qty.	Part No.	Description
1.	2	07113-VUB	Drier Clamp
2.	1	07321-VUC	Drier
3.	2	18247-VUB	Screw, #10 x 1/2", Sheet Metal
4.	6'	31854-VUD	A/C Hose, #6
5.	4'	31855-VUD	A/C Hose, #8
6.	5'	31856-VUD	A/C Hose, #10
7.	5	33857-VUF	O-ring, #6
8.	2	33858-VUF	O-ring, #8
9.	3	33859-VUF	O-ring, #10
10.	1	35532-VUG	Beadlock Fitting, #8 Female, 90° with 134a Port
11.	1	35533-VUG	Beadlock Fitting, #10 Female, 90° with 134a Port
12.	1	35811-VUG	Beadlock Fitting, #6 Female, Straight
13.	1	35813-VUG	Beadlock Fitting, #10 Female, Straight
14.	2	35821-VUG	Beadlock Fitting, #6 Female, 45°
15.	1	35822-VUG	Beadlock Fitting, #8 Female, 45°
16.	2	35831-VUG	Beadlock Fitting, #6 Female, 90°
17.	1	35833-VUG	Beadlock Fitting, #10 Female, 90°
18.	4	33137-VUI	Grommet, Large
19.	1	41117-VUP	Refrigerant Oil
20.	1	900002	Instruction, Modified Hose Kit

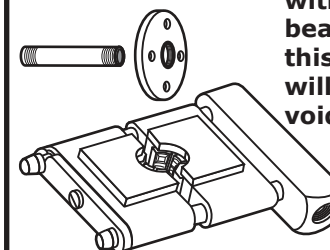

NOTE: This hose kit contains beadlock style fittings. Fittings must be crimped with an automotive air conditioning beadlock hose crimping tool. Crimping this hose with any other crimping tool will damage fittings and hoses, and may void warranty

← Beadlock Crimping Tool

← Beadlock Fitting