




www.vintageair.com

10-Fitting Universal Reduced Barrier Hose Kit with Drier (548004)

Important Notice: Please Read!

This hose kit contains beadlock fittings, which must be crimped with the appropriate beadlock crimping tool. If your hose kit is not a 548004, refer to the instructions included with your particular hose kit for crimping.

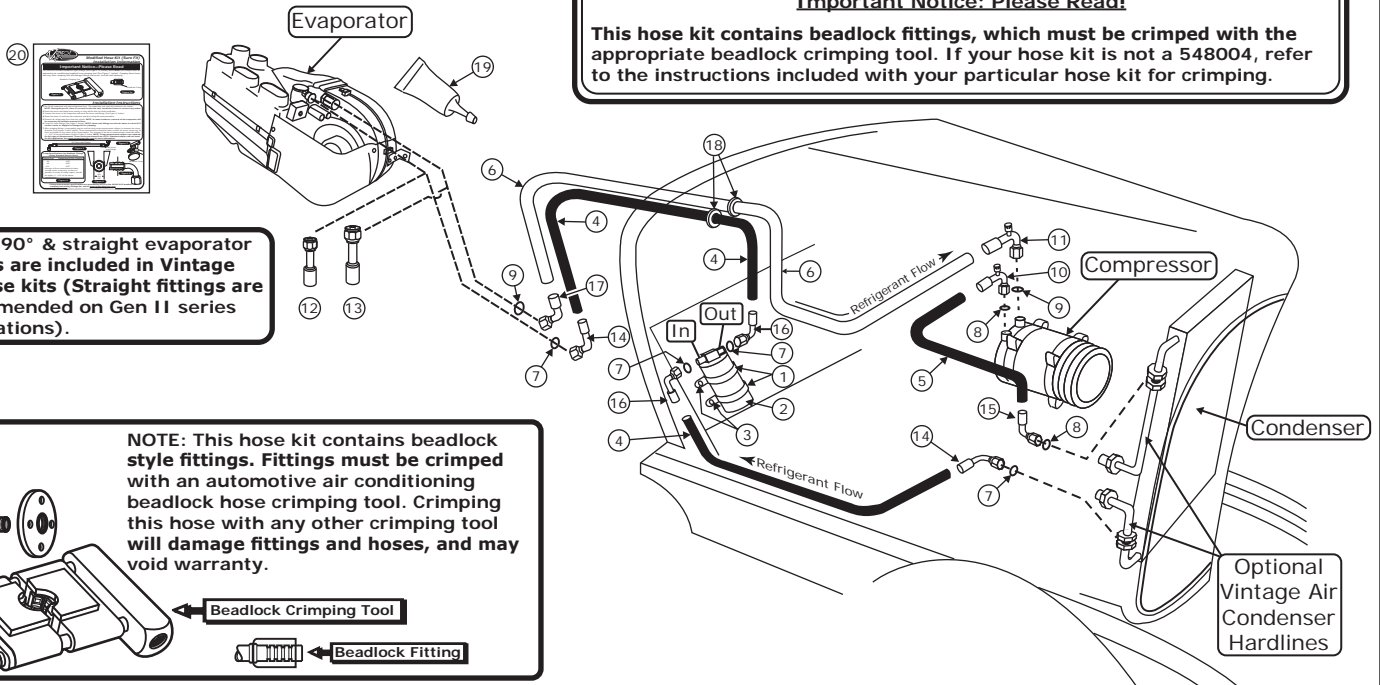

Packing List:

No.	Qty.	Part No.	Description
1.	2	07113-VUB	Drier Clamp
2.	1	07321-VUC	Drier
3.	2	18247-VUB	Screw, #10 x 1/2", Sheet Metal
4.	72"	318540	A/C Hose, #6, Reduced Barrier
5.	60"	318550	A/C Hose, #8, Reduced Barrier
6.	60"	318560	A/C Hose, #10, Reduced Barrier
7.	5	33857-VUF	O-ring, #6
8.	2	33858-VUF	O-ring, #8
9.	3	33859-VUF	O-ring, #10
10.	1	355320	Beadlock Fitting, #8 Female, 90° with Service Port, RB
11.	1	355330	Beadlock Fitting, #10 Female, 90° with Service Port, RB
12.	1	358110	Beadlock Fitting, #6 Female, Straight, RB
13.	1	358130	Beadlock Fitting, #10 Female, Straight, RB
14.	2	358210	Beadlock Fitting, #6 Female, 45°, RB
15.	1	358220	Beadlock Fitting, #8 Female, 45°, RB
16.	2	358310	Beadlock Fitting, #6 Female, 90°, RB
17.	1	358330	Beadlock Fitting, #10 Female, 90°, RB
18.	4	33137-VUI	Grommet, Large
19.	1	41117-VUP	Refrigerant Oil
20.	1	900002	Instruction, Modified Hose Kit

Checked By: _____
Packed By: _____
Date: _____

18865 Goll St. San Antonio, TX 78266

Phone: 800-862-6658

Sales: sales@vintageair.com

Tech Support: tech@vintageair.com

www.vintageair.com