













www.vintageair.com

Packing List: 1967-72 Chevrolet Pickup with Factory Air Plastics Kit (592672)

No.	Qty.	Part No.	Description
1.	1	629909	Plenum, Dash
2.	1	625331	Plenum, Defrost
3.	1	625338	Plenum, Floor
4.	1	49163-LCI	Center Cap
5.	1	49164-VCI	Kick Panel Blockoff
6.	1	49167-VCI	Hose Adapter, Defrost Oval, Passenger-Side
7.	1	49168-VCI	Hose Adapter, Defrost Round
8.	1	49170-LCI	Hose Adapter, Center Vent
9.	2	49870-VCI	Hose Adapter, Louver, Driver- and Passenger-Side
10.	1	496067	Glove Box

Checked By: _____
Packed By: _____
Date: _____

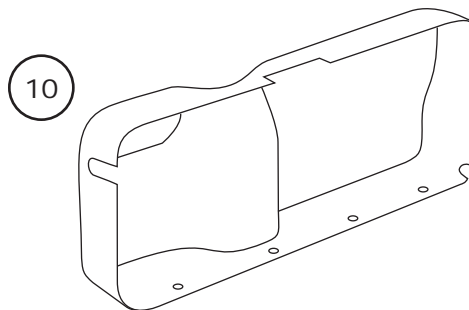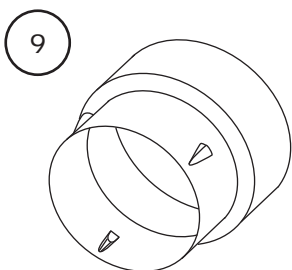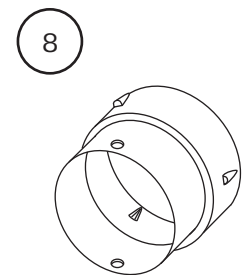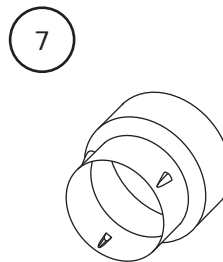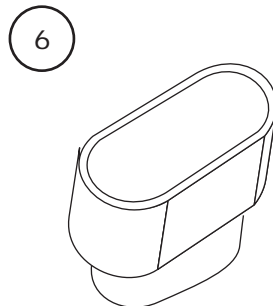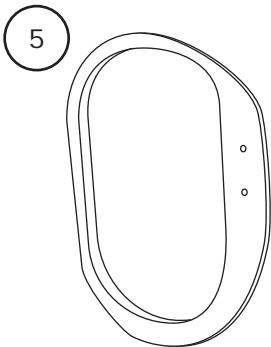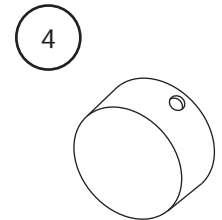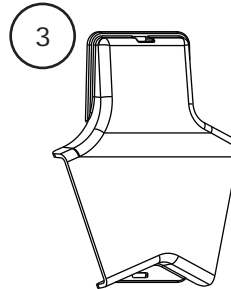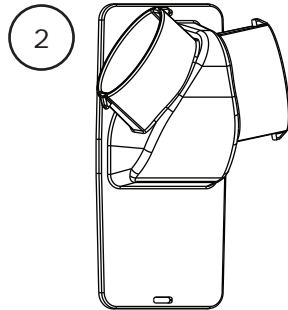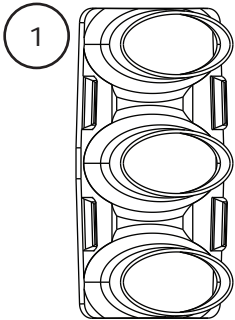

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**