




www.vintageair.com

# Packing List: 1967-68 Camaro/Firebird without A/C Plastics Kit (592988)


No.	Qty.	Part No.	Description
1.	1	622238	Center Louver Assembly
2.	1	622230	Fresh Air Cap
3.	1	622234	Kick Panel Cover
4.	1	622232	Glove Box, Top
5.	1	622231	Glove Box, Bottom
6.	2	49872-VCI	Hose Adapter, Inner Louver
7.	2	49873-VCI	Hose Adapter, Outer Louver
8.	2	626675-VCA	Defrost Duct Assembly
9.	1	625330	Plenum, Dash
10.	1	625331	Plenum, Defrost
11.	1	625338	Plenum, Floor

Checked By: \_\_\_\_\_  
Packed By: \_\_\_\_\_  
Date: \_\_\_\_\_


1

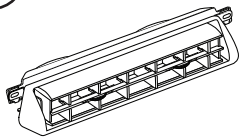


2

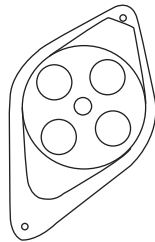


3

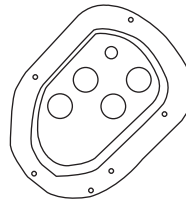


4

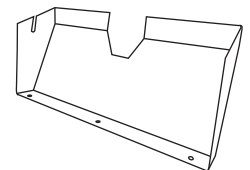


5

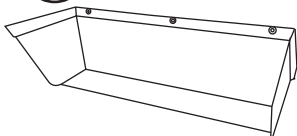


6

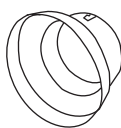

7



8

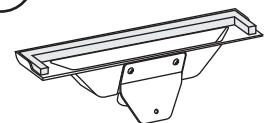

9



10



11



**NOTE: Images may not depict actual parts and quantities.  
Refer to packing list for actual parts and quantities.**