










www.vintageair.com

# Packing List: 1969 Camaro with Factory Air Plastics Kit (592989)

No.	Qty.	Part No.	Description
1.	1	62614-VCE	Hose Adapter, Center Louver
2.	1	622230	Fresh Air Cap
3.	1	622235	Kick Panel Cover
4.	1	49069-VCI	Glove Box
5.	1	62615-VCE	Hose Adapter, Driver-Side Louver
6.	1	49881-VCI	Hose Adapter, OEM Louver
7.	2	626675-VCA	Defrost Duct Assembly
8.	1	625330	Plenum, Dash
9.	1	625331	Plenum, Defrost
10.	1	625338	Plenum, Floor

Checked By: \_\_\_\_\_  
Packed By: \_\_\_\_\_  
Date: \_\_\_\_\_

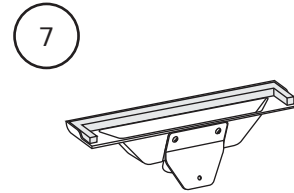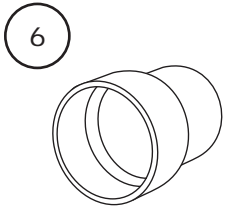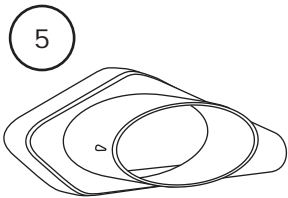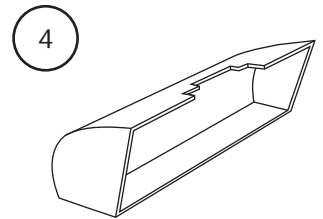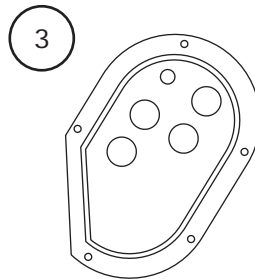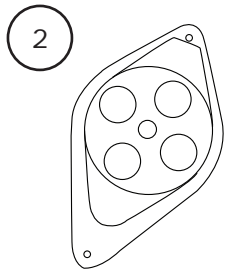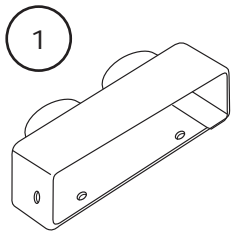

**NOTE: Images may not depict actual parts and quantities.  
Refer to packing list for actual parts and quantities.**