




www.vintageair.com

# Packing List: 1964-65 Chevelle with A/C Plastics Kit (593010)

No.	Qty.	Part No.	Description
1.	1	625663	Glove Box
2.	1	629905	Plenum, 2-Vent
3.	1	629906	Plenum, Dash
4.	1	625340	Plenum, Floor
5.	1	626686	Hose Adapter, Center Louver
6.	1	625060	Defrost Duct
7.	1	62182-VCI	Fresh Air Cap, Kick Panel
8.	2	49870-VCI	Hose Adapter, OEM Driver- and Passenger-Side

Checked By: \_\_\_\_\_  
 Packed By: \_\_\_\_\_  
 Date: \_\_\_\_\_

1

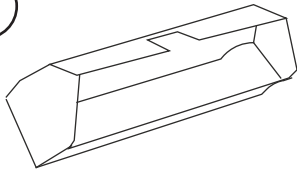


2




3




4

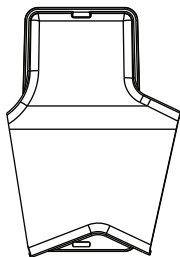


5

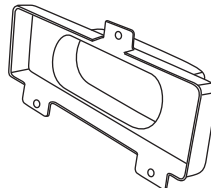


6

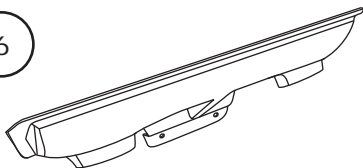

7

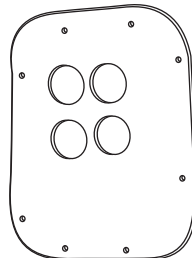

8

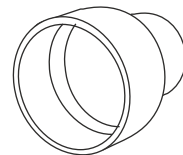

**NOTE: Images may not depict actual parts and quantities.  
 Refer to packing list for actual parts and quantities.**