









www.vintageair.com

# Packing List: 1966-67 Chevelle with A/C Plastics Kit (593012)

No.	Qty.	Part No.	Description
1.	1	625666	Glove Box Assembly
2.	1	627019	Hose Adapter Assembly, Center Louver
3.	2	627021	Defrost Duct
4.	1	62182-VCI	Fresh Air Cap, Kick Panel
5.	2	49870-VCI	Hose Adapter, OEM Driver- and Passenger-Side
6.	1	629905	Plenum, 2-Vent
7.	1	625330	Plenum, Dash
8.	1	625340	Plenum, Floor

Checked By: \_\_\_\_\_  
Packed By: \_\_\_\_\_  
Date: \_\_\_\_\_

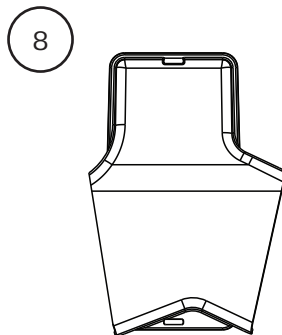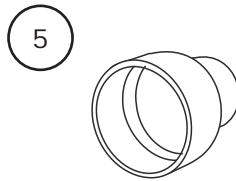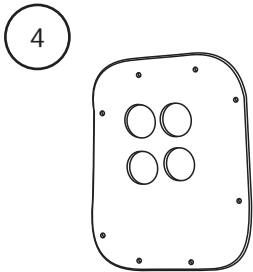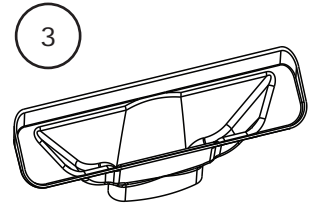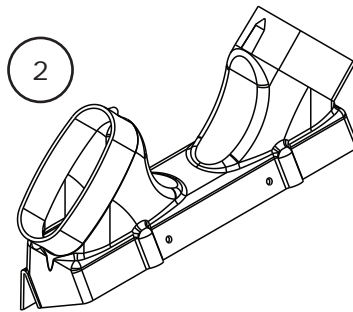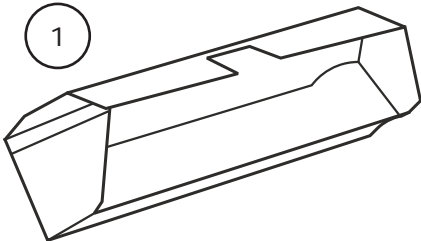

**NOTE: Images may not depict actual parts and quantities.  
Refer to packing list for actual parts and quantities.**