




www.vintageair.com

# Packing List: 1968-69 Chevrolet Chevelle without Factory Air Plastics Kit (593023)

No.	Qty.	Part No.	Description
1.	1	622230	Fresh Air Cap
2.	2	498825	Cap, Astro Vent
3.	2	49870-VCI	Hose Adapter, Driver-Side/Passenger-Side OEM Louver
4.	1	62567-VCE	Glove Box
5.	1	494052	Bezel, Driver-Side Louver
6.	1	494074	Bezel, Center Louver
7.	1	494075	Bezel, Passenger-Side Louver
8.	1	62565-VCE	Kick Panel Cover
9.	1	627009	Defrost Duct, Passenger-Side
10.	1	627010	Defrost Duct, Driver-Side
11.	1	625330	Plenum, Dash
12.	1	625338	Plenum, Floor
13.	1	629905	Plenum, Defrost

Checked By: \_\_\_\_\_  
Packed By: \_\_\_\_\_  
Date: \_\_\_\_\_

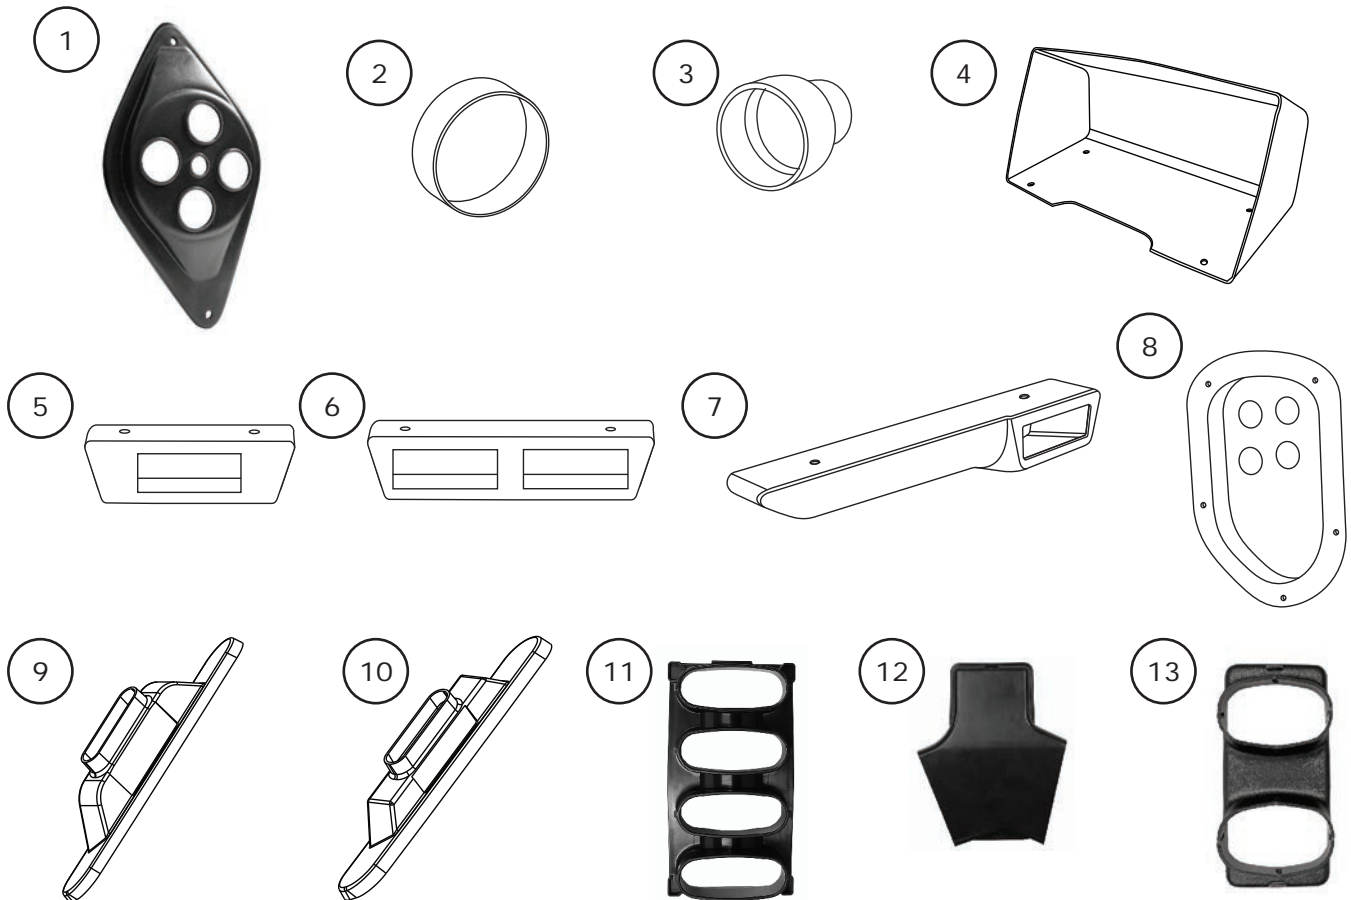

**NOTE: Images may not depict actual parts and quantities.  
Refer to packing list for actual parts and quantities.**