




www.vintageair.com

Packing List: 1970-72 Chevelle/Monte Carlo without Factory Air Plastics Kit (593025)

No.	Qty.	Part No.	Description
1.	1	498823	Hose Adapter, Driver-Side Louver
2.	1	498824	Hose Adapter, Passenger-Side Louver
3.	2	498825	Astro Vent Cap
4.	1	622230	Fresh Air Cap
5.	2	627007	Defrost Duct
6.	1	626671	Glove Box Cap
7.	1	62565-VCE	Kick Panel Cover
8.	1	629905	Plenum, Defrost
9.	1	625330	Plenum, Dash
10.	1	625338	Plenum, Floor
11.	1	494052	Bezel, Driver-Side Louver
12.	1	494074	Bezel, Center Louver
13.	1	494075	Bezel, Passenger-Side Louver

Checked By: _____
Packed By: _____
Date: _____

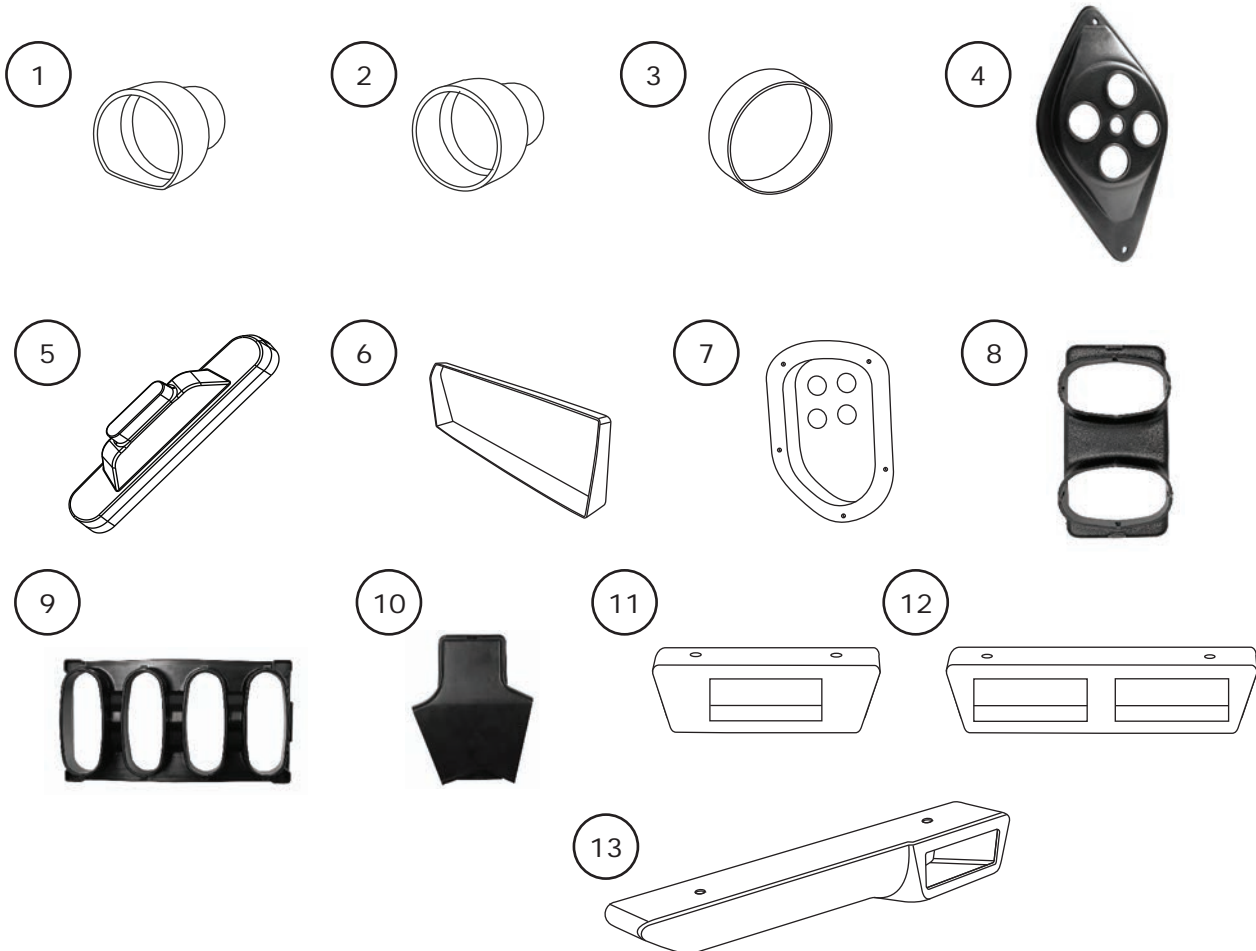

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**