




www.vintageair.com

# Packing List: 1968-69 Chevrolet Chevelle without Factory Air Gen 5 Installation Kit (631284)

No.	Qty.	Part No.	Description
1.	15"	31050-VUD	Drain Hose, 1/2"
2.	20"	49003-VUP	Press Tape
3.	1	461171	Valve, Heater Control, 3-Wire
4.	6	31606-VUA	Hose Clamp, #12
5.	1	65598-VUE	Drain Elbow, 1/2"
6.	3	18102-VUB	Well Nut, 1/4-20
7.	3	188888	Bolt, 1/4-20 x 1", Serrated Flange
8.	4	185588	Screw, #10 x 5/8"
9.	4	31102-GUR	Plug, 1/2", Plastic
10.	8	187926	Spring Clip
11.	2	182465	Screw, #12 x 1/2", Self-Tapping
12.	3	182871	Bolt, 1/4-20 x 3/4", Hex
13.	6	186011	Washer, 9/32", Flat
14.	6	18152-VUB	Nut with Star Washer, 1/4-20, Hex
15.	2	18266-VUB	Screw, #14 x 3/4", Washer Head
16.	2	180880	Stud, 1/4-20 x 1 1/2", Full-Threaded
17.	12	65980-VUE	S-Clips
18.	4	18233-VUB	Screw, #6 x 3/8", Pan Head
19.	6	18235-VUB	Screw, #8 x 1/2", Pan Head
20.	3	189125-MUR	Bolt Retainer, 1/4", Pushnut
21.	5	182872	Bolt, 1/4-20 x 3/4", Serrated Flange, Black
22.	1	317102	Plug, 1 3/4", Plastic
23.	2	33144-VUI	Grommet, 7/8" O.D. x 3/8" I.D.
24.	8	33137-VUI	Grommet, Large
25.	1	33142-VUI	Plug, 7/8"
26.	5	21300-VUP	Tie Wrap, 11"
27.	2	121004	Hardline, Straight Heater
28.	2	33859-VUF	O-ring, #10
29.	1	41117-VUP	Refrigerant Oil

Checked By: \_\_\_\_\_  
Packed By: \_\_\_\_\_  
Date: \_\_\_\_\_

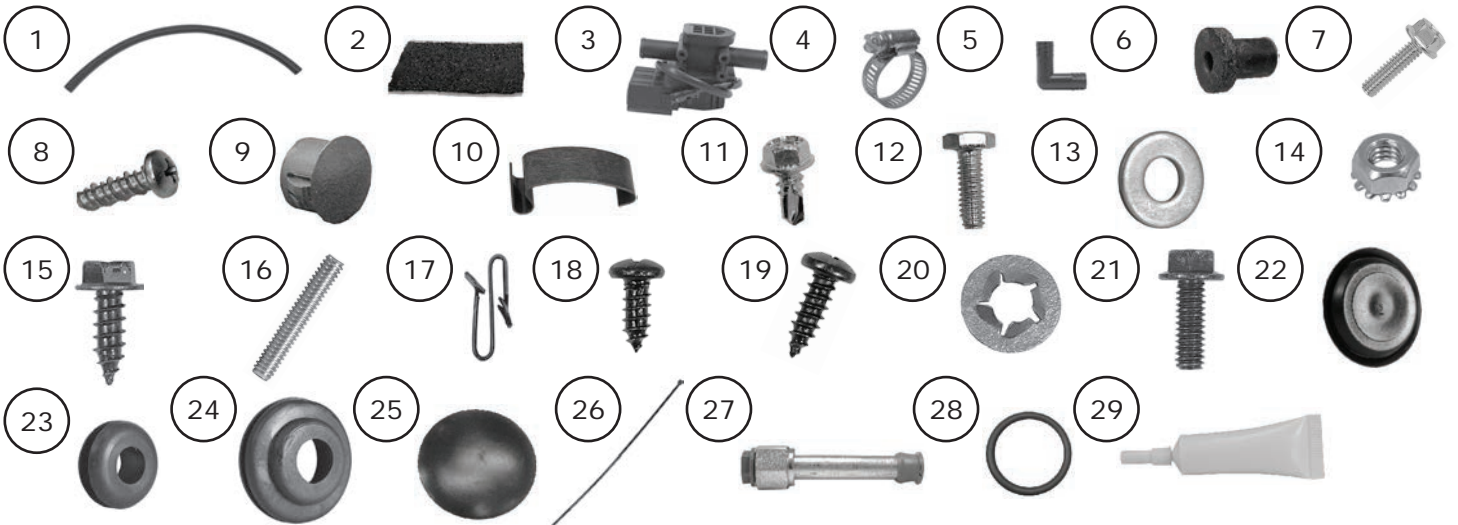

**NOTE: Images may not depict actual parts and quantities.  
Refer to packing list for actual parts and quantities.**