




www.vintageair.com

Packing List: 1970-72 Chevelle/Monte Carlo without Factory Air Gen 5 Installation Kit (631285)

No.	Qty.	Part No.	Description
1.	15"	31050-VUD	Drain Hose, 1/2"
2.	20"	49003-VUP	Press Tape
3.	1	461171	Valve, Heater Control, 3-Wire
4.	6	31606-VUA	Hose Clamp, #12
5.	1	65598-VUE	Drain Elbow, 1/2"
6.	3	18102-VUB	Well Nut, 1/4-20
7.	3	188888	Bolt, 1/4-20 x 1", Serrated Flange, Zinc
8.	4	185588	Screw, #10 x 5/8"
9.	2	31102-GUR	Plug, 1/2", Plastic
10.	8	187926	Spring Clip
11.	1	180040	Spacer, 1" OD x .25" ID x .25" Length, Nylon
12.	3	18125-VUB	Washer, 1/4" USS, Flat
13.	6	18235-VUB	Screw, #8 x 1/2", Pan Head
14.	3	18290-VUB	Bolt, 1/4-20 x 1", Hex
15.	3	18152-VUB	Nut with Star Washer, 1/4-20, Hex
16.	16	65980-VUE	S-Clips
17.	1	33144-VUI	Grommet, 7/8" O.D. x 3/8" I.D.
18.	6	33137-VUI	Grommet, Large
19.	5	181076	Screw, #8 x 1 1/4", Countersunk with Washer
20.	4	18266-VUB	Screw, #14 x 3/4", Washer Head
21.	2	121004	Hardline, Straight Heater
22.	2	33859-VUF	O-ring, #10
23.	2	180880	Stud, 1/4-20 x 1 1/2", Full-Threaded
24.	5	182872	Bolt, 1/4-20 x 3/4", Serrated Flange, Black Zinc
25.	3	189125-MUR	Bolt Retainer, 1/4", Pushnut
26.	1	41117-VUP	Refrigerant Oil
27.	2	33133-VUI	Grommet, 1 1/4" OD x 1" with 1/2" Hole

Checked By: _____
Packed By: _____
Date: _____

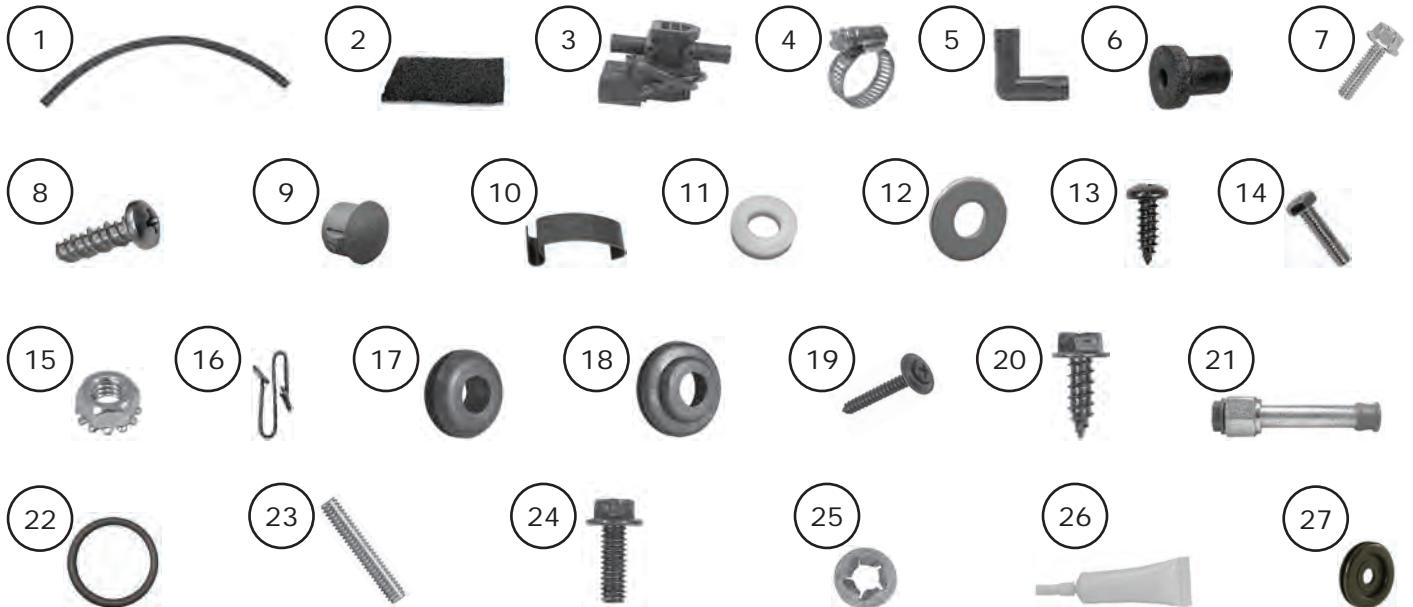

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**