




www.vintageair.com

Packing List: 1956 Ford Pickup Gen 5 Installation Kit (631634)

No.	Qty.	Part No.	Description
1.	15"	31050-VUD	Drain Hose, 1/2"
2.	20"	49003-VUP	Press Tape
3.	1	461171	Valve, Heater Control, 3-Wire
4.	6	31606-VUA	Hose Clamp, #12
5.	1	65598-VUE	Drain Elbow, 1/2"
6.	2	18102-VUB	Well Nut, 1/4-20
7.	2	188888	Bolt, 1/4-20 x 1", Serrated Flange
8.	4	185588	Screw, #10 x 5/8"
9.	3	31102-GUR	Plug, 1/2", Plastic
10.	8	187926	Spring Clip
11.	2	180880	Stud, 1/4-20 x 1 1/2", Full-Threaded
12.	5	18235-VUB	Screw, #8 x 1/2", Pan Head
13.	10	182873	Bolt, 1/4-20 x 1/2", Hex Flange Head
14.	3	189125-MUR	Bolt Retainer, 1/4", Pushnut
15.	8	189801	U-nut, #8
16.	7	182353	Screw, #8 x 1/2", Wide Head
17.	1	18250-VUB	Screw, 10-32 x 1/2", Pan Head
18.	1	18251-VUB	Nut with Star Washer, 10-32
19.	3	18152-VUB	Nut with Star Washer, 1/4-20
20.	2	180053	Screw, 1/4-20 x 3/4", Pan Head
21.	2	18978-VUB	U-Nut, 1/4-20
22.	1	182465	Screw, #12 x 1/2", Self-Tapping
23.	1	18247-VUB	Screw, #10 x 1/2", Sheet Metal
24.	6	65980-VUE	S-Clips

Checked By: _____
Packed By: _____
Date: _____

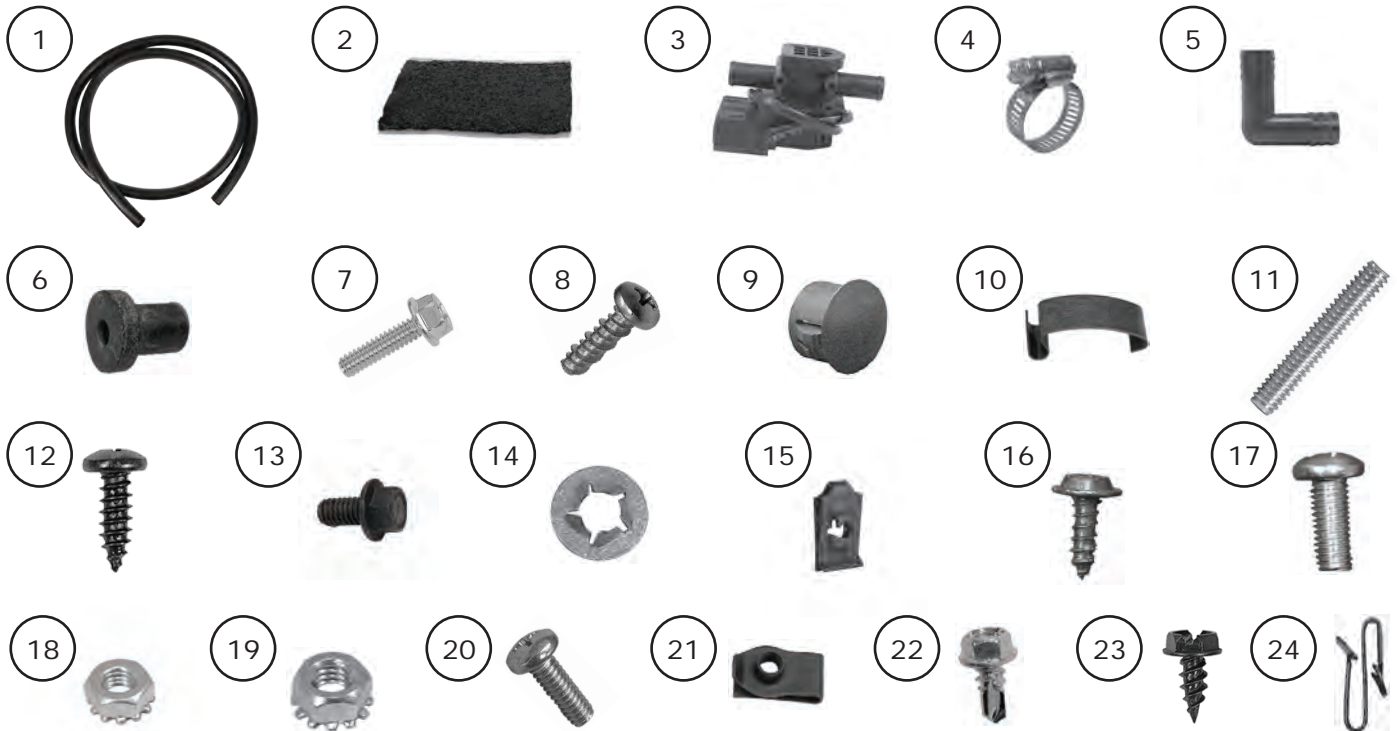

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**