




www.vintageair.com

# Packing List: 1980-86 Ford F-Series/Bronco with Factory Air Installation Kit (634185)

No.	Qty.	Part No.	Description
1.	1	461171	Valve, Heater Control, 3-Wire
2.	15"	31050-VUD	Drain Hose, 1/2"
3.	1	65598-VUE	Drain Elbow, 1/2"
4.	20"	49003-VUP	Press Tape
5.	6	31606-VUA	Hose Clamp, #12
6.	3	182872	Bolt, 1/4-20 x 3/4", Serrated Flange, Black Zinc
7.	4	18247-VUB	Screw, #10 x 1/2", Sheet Metal
8.	10	182515	Bolt, 10-24 x 3/4", Serrated Flange
9.	10	18260-VUB	Nut with Star Washer, 10-24
10.	3	180880	Stud, 1/4-20 x 1 1/2", Full-Threaded
11.	4	185588	Screw, #10 x 5/8"
12.	1	180602	Screw with Washer, M6.3 x 16MM, Hex Head
13.	1	41117-VUP	Refrigerent Oil
14.	1	33857-VUF	O-ring, #6
15.	3	33859-VUF	O-ring, #10
16.	1	182465	Screw, #12 x 1/2", Self-Tapping
17.	5	189801	U-Nut, #8
18.	5	181077	Screw, #8 x 3/4", Countersunk with Washer
19.	2	18250-VUB	Screw, 10-32 x 1/2", Pan Head
20.	2	18150-VUB	Nut, 10-32, Hex
21.	2	186011	Washer, 9/32", Flat
22.	5	20021-OFR	Foam
23.	8	187926	Spring Clip
24.	4	182516	Bolt, 1/4-14 x 1 1/4", Slotted Flange Hex
25.	2	213010	Tie Wrap, 5 1/2"
26.	2	188888	Bolt, 1/4-20 x 1", Serrated Flange, Zinc
27.	3	31102-GUR	Plastic Plug, 1/2"
28.	2	18102-VUB	Well Nut, 1/4-20
29.	2	121034	Heater Fitting, 45°

Checked By: \_\_\_\_\_  
Packed By: \_\_\_\_\_  
Date: \_\_\_\_\_

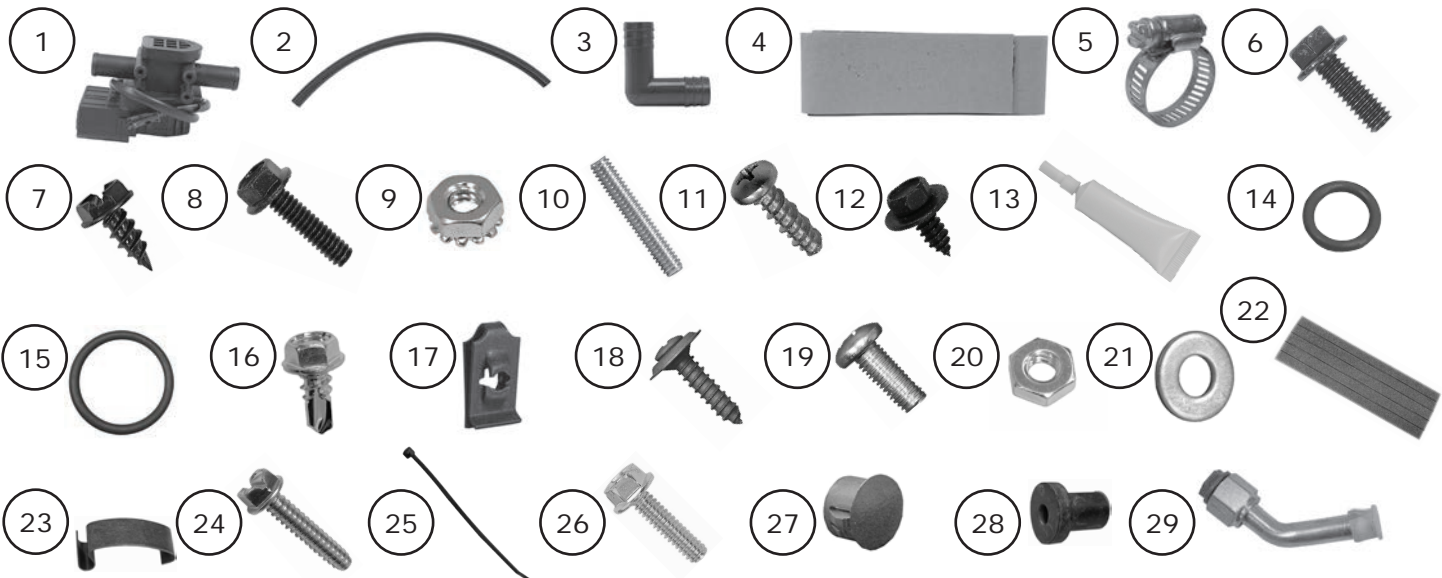

**NOTE: Images may not depict actual parts and quantities.  
Refer to packing list for actual parts and quantities.**