




www.vintageair.com

# Packing List: 1970-72 Chevelle/Monte Carlo w/A/C Gen 5 Installation Kit (634285)

No.	Qty.	Part No.	Description
1.	15"	31050-VUD	Drain Hose, 1/2"
2.	20"	49003-VUP	Press Tape
3.	1	461171	Valve, Heater Control, 3-Wire
4.	6	31606-VUA	Hose Clamp, #12
5.	1	65598-VUE	Drain Elbow, 1/2"
6.	3	18102-VUB	Well Nut, 1/4-20
7.	3	188888	Bolt, 1/4-20 x 1", Serrated Flange, Zinc
8.	4	185588	Screw, #10 x 5/8"
9.	2	31102-GUR	Plug, 1/2", Plastic
10.	8	187926	Spring Clip
11.	2	18125-VUB	Washer, 1/4" USS, Flat
12.	3	18290-VUB	Bolt, 1/4-20 x 1", Hex
13.	7	18152-VUB	Nut with Star Washer, 1/4-20, Hex
14.	14	65980-VUE	S-Clips
15.	2	33144-VUI	Grommet, 7/8" O.D. x 3/8" I.D.
16.	1	317102	Plug, 1 3/4", Plastic
17.	6	33137-VUI	Grommet, Large
18.	1	33142-VUI	Plug, 7/8"
19.	2	18266-VUB	Screw, #14 x 3/4", Washer Head
20.	2	121004	Hardline, Straight Heater
21.	2	33859-VUF	O-ring, #10
22.	1	180880	Stud, 1/4-20 x 1 1/2", Full-Threaded
23.	8	182872	Bolt, 1/4-20 x 3/4", Serrated Flange, Black Zinc
24.	6	189125-MUR	Bolt Retainer, 1/4", Pushnut
25.	6	186011	Washer, 9/32", Flat
26.	5	181076	Screw, #8 x 1 1/4", Countersunk with Washer
27.	1	180040	Spacer, 1" OD x .25" ID x .25" Length, Nylon
28.	1	41117-VUP	Refrigerant Oil
29.	2	33133-VUI	Grommet, 1 1/4" OD x 1" with 1/2" Hole

Checked By: \_\_\_\_\_  
Packed By: \_\_\_\_\_  
Date: \_\_\_\_\_

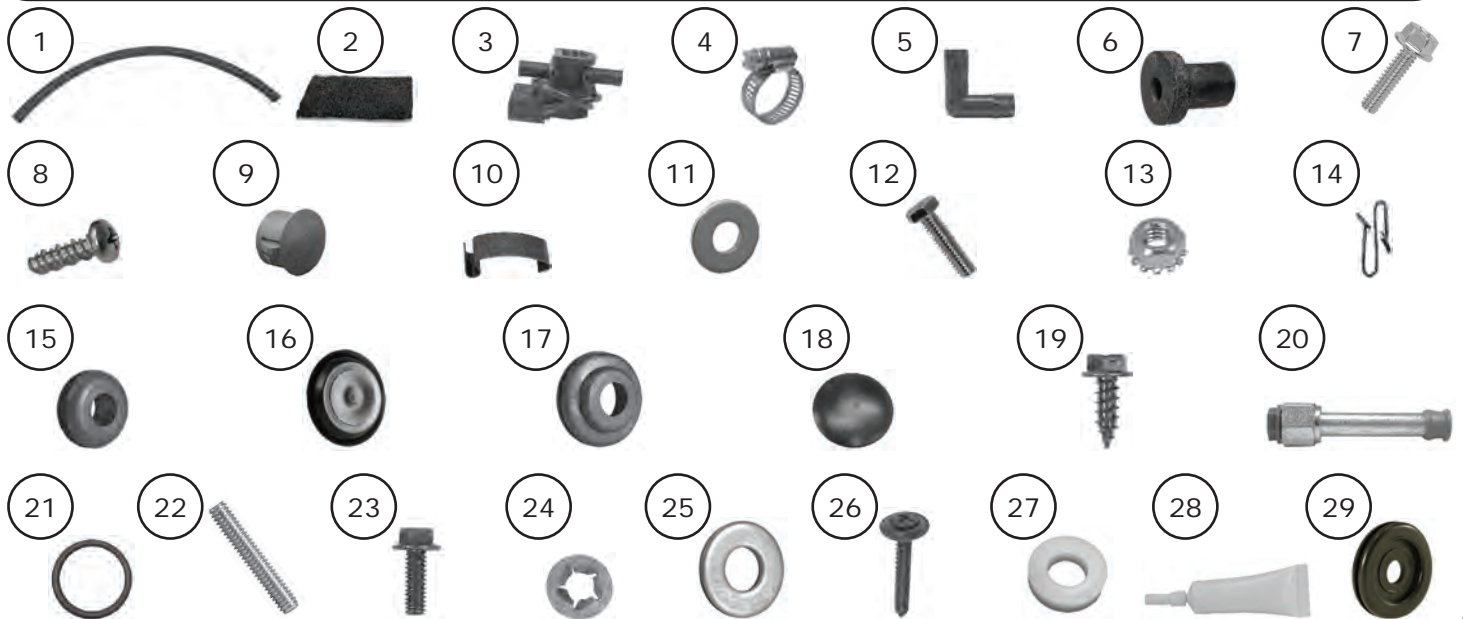

**NOTE: Images may not depict actual parts and quantities.  
Refer to packing list for actual parts and quantities.**