




www.vintageair.com

# Packing List: 1967-72 Chevrolet Pickup with Factory Air Installation Kit (635606)

No.	Qty.	Part No.	Description
1.	1	461171	Valve, Heater Control, 3-Wire
2.	15"	31050-VUD	Drain Hose, 1/2"
3.	1	65598-VUE	Drain Elbow, 1/2"
4.	40"	49003-VUP	Press Tape
5.	1	41117-VUP	Refrigerant Oil
6.	6	31606-VUA	Hose Clamp, #12
7.	1	180880	Stud, 1/4-20 x 1 1/2", Full-Threaded
8.	1	182465	Screw, #12 x 1/2", Self-Tapping
9.	3	18247-VUB	Screw, #10 x 1/2", Sheet Metal
10.	2	18102-VUB	Well Nut, 1/4-20
11.	2	188888	Bolt, 1/4-20 x 1", Serrated Flange, Zinc
12.	8	65976-VUE	Push-on Ring, 3/16"
13.	8	65980-VUE	S-Clips
14.	3	33137-VUI	Grommet, Large
15.	1	33135-VUI	Grommet, 1 1/4" x 1" with 3/8" Hole
16.	1	33144-VUI	Grommet, 7/8" O.D. x 3/8" I.D.
17.	10	182872	Bolt, 1/4-20 x 3/4", Serrated Flange, Black Zinc
18.	9	18152-VUB	Nut with Star Washer, 1/4-20, Hex
19.	8	18125-VUB	Washer, 1/4" USS, Flat
20.	3	31102-GUR	Plug, 1/2", Plastic
21.	4	185588	Screw, #10 x 5/8"
22.	8	187926	Spring Clip
23.	1	49169-LCI	Cowl Vent Rod Cap
24.	48"	238016	Split Sleeve, 1/2", Flame-Retardant
25.	2	18266-VUB	Screw, #14 x 3/4", Washer Head

Checked By: \_\_\_\_\_  
Packed By: \_\_\_\_\_  
Date: \_\_\_\_\_

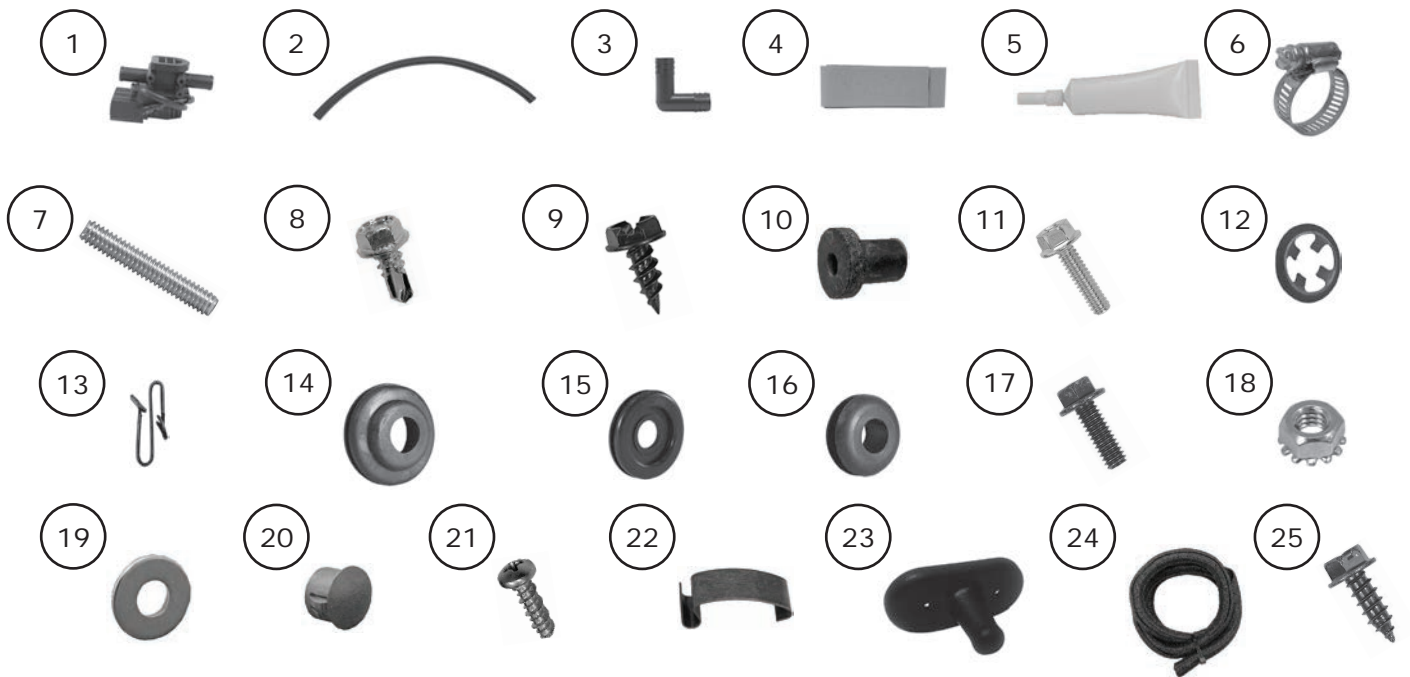

**NOTE: Images may not depict actual parts and quantities.  
Refer to packing list for actual parts and quantities.**