




www.vintageair.com

Installation Instructions: Water Neck Riser

1. Using a suitable gasket adhesive, install thermostat gasket on intake manifold.
2. Position water neck riser as desired. Apply a bead of gasket adhesive around the water neck riser, and install the thermostat gasket onto the water neck riser.
3. Install the thermostat.
4. Install the 1/2" NPT fitting. **NOTE: Fitting is not included with this kit.**

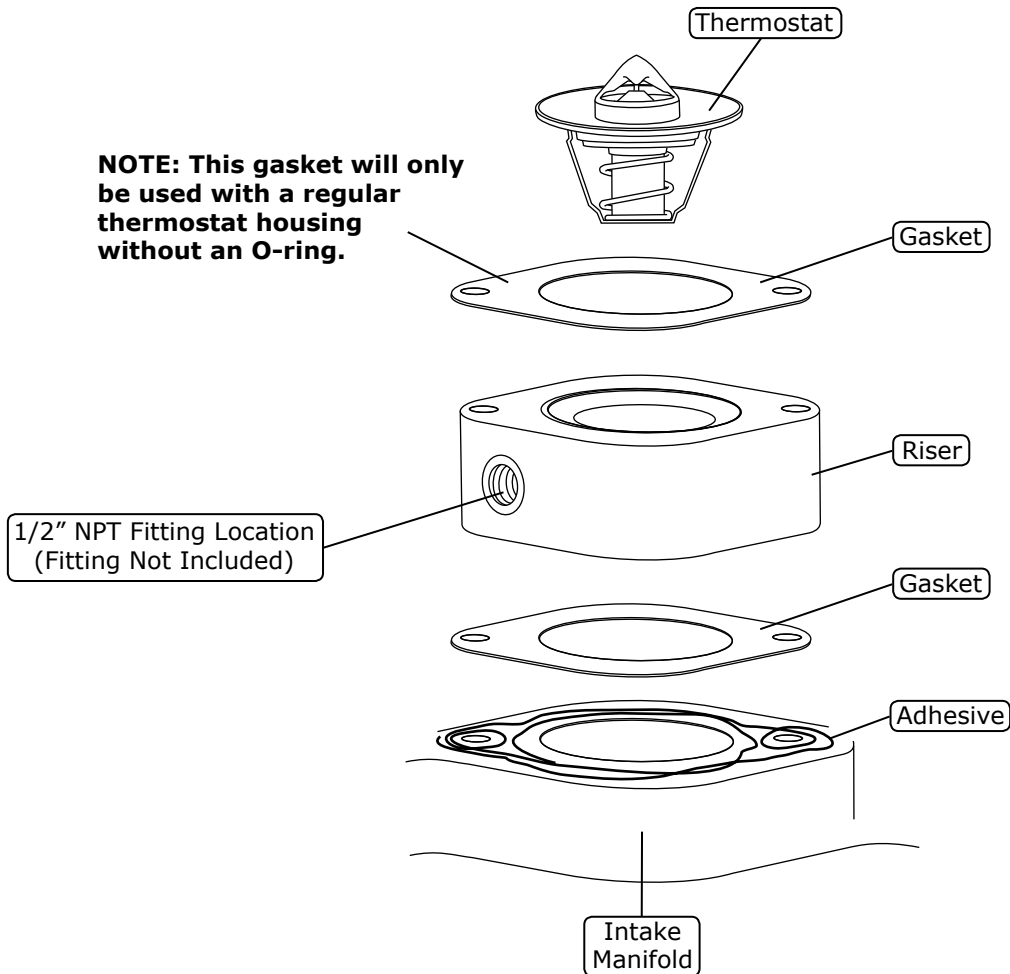

Packing List: (706001-VCQ)

No.	Qty.	Part No.	Description
1.	1	720000-SCR	Water Neck Riser, 1/2" NPT Port
2.	2	330601-VGR	Gasket, Thermostat Housing/Riser

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**

Checked By: _____
Packed By: _____
Date: _____