




www.vintageair.com

# Installation Instructions: Water Neck Riser with Single Center Port

1. Using a suitable gasket adhesive, install thermostat gasket on intake manifold.
2. Position water neck riser as desired. Apply a bead of gasket adhesive around the water neck riser, and install the thermostat gasket onto the water neck riser.
3. Install the thermostat.
4. Install the 1/2" NPT fitting. **NOTE: Fitting is not included with this kit.**

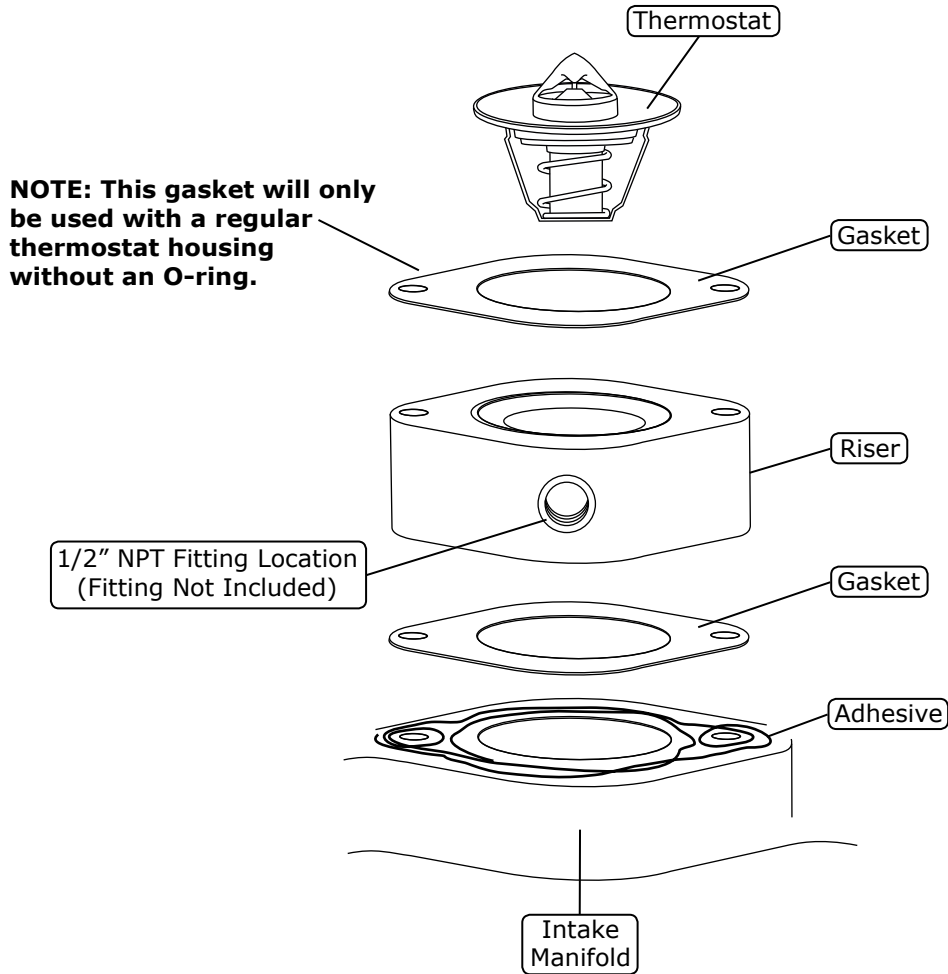

## Packing List: (706004)

No.	Qty.	Part No.	Description
1.	1	721002	Water Neck Riser, Single Center 1/2" NPT Port
2.	2	330601-VGR	Gasket, Thermostat Housing/Riser

**NOTE: Images may not depict actual parts and quantities.  
Refer to packing list for actual parts and quantities.**

Checked By: \_\_\_\_\_  
Packed By: \_\_\_\_\_  
Date: \_\_\_\_\_