


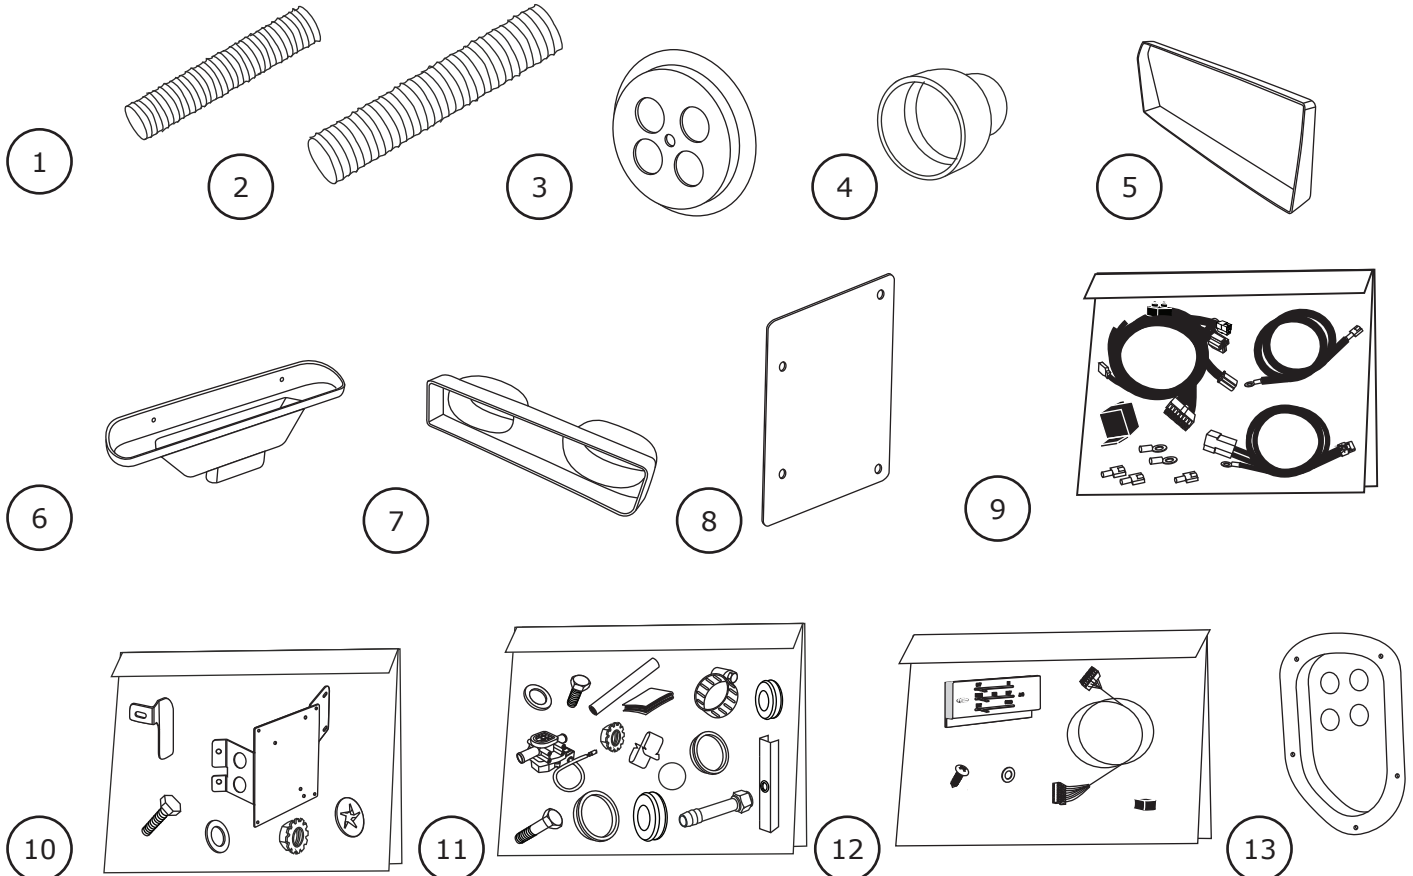

Packing List: Accessory Kit (784172) 1970-72 Chevrolet Chevelle with Factory Air

No.	Qty.	Part No.	Description
1.	6'	06200-VUE	Duct Hose, 2"
2.	6'	06250-VUE	Duct Hose, 2 1/2"
3.	1	62566-VCE	Fresh Air Cap
4.	2	49870-VCI	Hose Adapter, Driver & Passenger Side Louver
5.	1	626671	Glove Box Cap
6.	2	626670	Defrost Duct
7.	1	498821	Hose Adapter, Center Louver
8.	1	648170	Firewall Cover
9.	1	232600-VUA	Wiring Kit, Gen IV Universal
10.	1	643172	Bracket Kit, Evaporator
11.	1	633172	Installation Kit
12.	1	473072	Control Panel Kit
13.	1	62565-VCE	Fresh Air Cap, Kick Panel

Checked By: _____
Packed By: _____
Date: _____



**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**