



Assembly Instructions

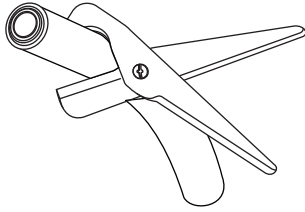

Step 1

Route and cut hose to desired length using the appropriate cutting tool (Vintage Air part # 420001-VUR, available separately). Make sure hose is cut clean and square.

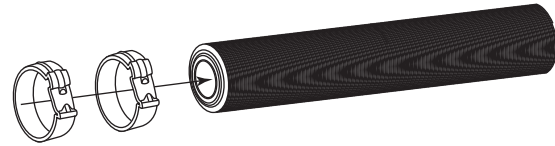


Step 2

Slip two properly sized clips onto the cut end of the hose. **NOTE: The clips can slip on either way, to ease installation orient and install both clips in the same direction.**




Step 3

To ease installation of fitting, apply refrigeration or A/C compressor oil to the end of the fitting.

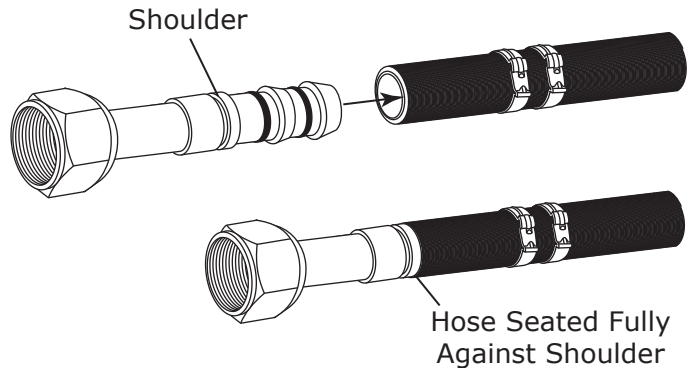


Step 4

Insert fitting into cut end of hose as shown. Make sure the hose is seated against the shoulder of the fitting. This will ensure that the fitting is fully inserted into the hose.

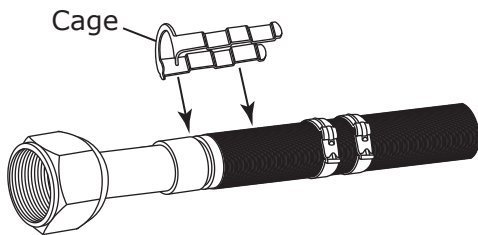

Step 5

Install cage on fitting & hose. Snap cage into place by inserting cage into slot on fitting as shown.

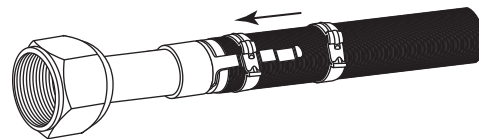

Step 6

As shown, slide both clips over hose cage, into the channels.

Step 7

Using the proper pliers (Vintage Air part # 420000-VUR, available separately), squeeze clamps together to close & lock clamps into place.

