


Wiring Diagram

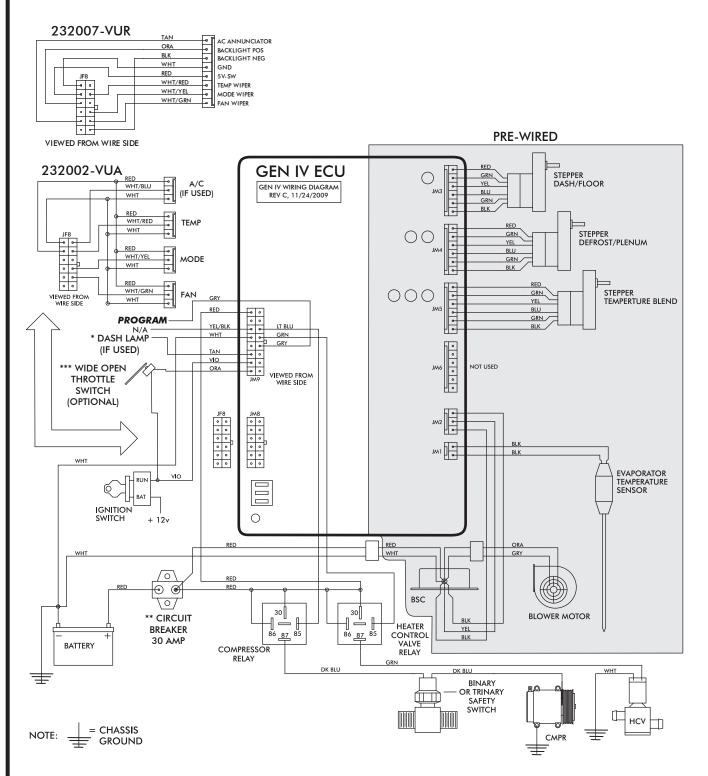

- Dash Lamp Is Used Only With Type 232007-VUR Harness.
- Warning: Always Mount Circuit Breaker Under the Hood in the Engine Compartment and As Close to the Battery As Possible.
- Wide Open Throttle Switch Contacts Close Only at Full Throttle, Which Disables A/C Compressor.